



# gS SERIES

## INSTALLATION INSTRUCTIONS

English

Date: 08-2015

Document number: 87248-2-EN

© 2015 Raymarine UK Limited



**Raymarine®**  
BY **FLIR**



## Trademark and patents notice

**Raymarine, Tacktick, Clear Pulse, Truzoom, HSB, SeaTalk, SeaTalk<sup>hs</sup>, SeaTalk<sup>ng</sup>, Micronet, Raytech, Gear Up, Marine Shield, Seahawk, Autohelm, Automagic, and Visionality** are registered or claimed trademarks of Raymarine Belgium.

**FLIR, DownVision, SideVision, Dragonfly, Instalert, Infrared Everywhere, and The World's Sixth Sense** are registered or claimed trademarks of FLIR Systems, Inc.

All other trademarks, trade names, or company names referenced herein are used for identification only and are the property of their respective owners.

This product is protected by patents, design patents, patents pending, or design patents pending.

## Fair Use Statement

You may print no more than three copies of this manual for your own use. You may not make any further copies or distribute or use the manual in any other way including without limitation exploiting the manual commercially or giving or selling copies to third parties.

## Software updates

**Important:** Check the Raymarine website for the latest software releases for your product.

[www.raymarine.com/software](http://www.raymarine.com/software)

## Product handbooks

The latest versions of all English and translated handbooks are available to download in PDF format from the website [www.raymarine.com](http://www.raymarine.com).  
Please check the website to ensure you have the latest handbooks.

**Copyright ©2015 Raymarine UK Ltd. All rights reserved.**



# Contents

|                                                        |           |                                                         |           |
|--------------------------------------------------------|-----------|---------------------------------------------------------|-----------|
| <b>Chapter 1 Important information.....</b>            | <b>7</b>  | 4.11 NMEA 0183 connection — Power/NMEA/Video cable..... | 41        |
| Certified Installation .....                           | 7         | 4.12 Gigabit networking .....                           | 42        |
| Product operation in high temperatures .....           | 7         | 4.13 Sonar module connection .....                      | 43        |
| Power over Ethernet (PoE).....                         | 8         | 4.14 Radar network connection .....                     | 44        |
| TFT Displays .....                                     | 9         | 4.15 GNSS / GPS connection.....                         | 46        |
| Water ingress .....                                    | 9         | 4.16 AIS connection.....                                | 47        |
| Disclaimers .....                                      | 9         | 4.17 Fastheading connection.....                        | 47        |
| RF exposure .....                                      | 9         | 4.18 Keypad network connection .....                    | 48        |
| FCC.....                                               | 9         | 4.19 Weather receiver connection.....                   | 48        |
| Compliance Statement (Part 15.19) .....                | 9         | 4.20 Video connection — composite .....                 | 49        |
| FCC Interference Statement (Part 15.105 (b)) .....     | 9         | 4.21 Camera (Video/Alarm) connection .....              | 49        |
| Industry Canada .....                                  | 10        | 4.22 HDMI video output .....                            | 50        |
| Industry Canada (Français) .....                       | 10        | 4.23 IP Camera connection .....                         | 50        |
| Japanese approvals.....                                | 10        | 4.24 HD-SDI connection (gS195).....                     | 51        |
| Declaration of conformity.....                         | 10        | 4.25 Thermal camera connection.....                     | 52        |
| Product disposal.....                                  | 10        | 4.26 Fusion network connection .....                    | 54        |
| Pixel defect policy .....                              | 10        | 4.27 Fusion <b>NMEA 2000</b> connection .....           | 54        |
| Warranty registration.....                             | 11        | 4.28 Media player connection .....                      | 55        |
| IMO and SOLAS.....                                     | 11        | 4.29 Raymarine mobile app connection.....               | 55        |
| Technical accuracy .....                               | 11        | 4.30 Bluetooth remote control connection.....           | 56        |
| <b>Chapter 2 Document and product information.....</b> | <b>13</b> | <b>Chapter 5 Mounting.....</b>                          | <b>57</b> |
| 2.1 Document information .....                         | 14        | 5.1 Bracket mounting hole locations.....                | 58        |
| 2.2 Product documentation.....                         | 14        | 5.2 Mounting surface requirements .....                 | 58        |
| 2.3 Document illustrations .....                       | 15        | 5.3 Flush mounting the display .....                    | 59        |
| 2.4 Product overview .....                             | 15        | 5.4 Flush mounting the card reader.....                 | 60        |
| 2.5 LightHouse MFD Operation instructions.....         | 16        | 5.5 Surface mounting the display .....                  | 61        |
| <b>Chapter 3 Planning the installation .....</b>       | <b>17</b> | 5.6 Surface mounting the card reader .....              | 62        |
| 3.1 System integration .....                           | 18        | <b>Chapter 6 Maintaining your display.....</b>          | <b>63</b> |
| 3.2 Installation checklist .....                       | 24        | 6.1 Service and maintenance .....                       | 64        |
| 3.3 Multiple data sources (MDS) overview.....          | 24        | 6.2 Product cleaning .....                              | 64        |
| 3.4 Identifying your display variant .....             | 25        | <b>Chapter 7 Troubleshooting.....</b>                   | <b>65</b> |
| 3.5 Networking constraints .....                       | 25        | 7.1 Troubleshooting .....                               | 66        |
| 3.6 System protocols .....                             | 26        | 7.2 Power up troubleshooting .....                      | 67        |
| 3.7 Data master.....                                   | 27        | 7.3 Radar troubleshooting .....                         | 68        |
| 3.8 Parts supplied.....                                | 28        | 7.4 GPS troubleshooting .....                           | 69        |
| 3.9 Tools required for installation.....               | 29        | 7.5 Sonar troubleshooting .....                         | 70        |
| 3.10 Selecting a location .....                        | 29        | 7.6 Sonar crosstalk interference .....                  | 73        |
| <b>Chapter 4 Cables and connections.....</b>           | <b>33</b> | 7.7 Thermal camera troubleshooting .....                | 75        |
| 4.1 General cabling guidance .....                     | 34        | 7.8 System data troubleshooting.....                    | 77        |
| 4.2 gS95 / gS125 / gS165 Connections overview .....    | 35        | 7.9 Video troubleshooting.....                          | 78        |
| 4.3 gS195 connections overview.....                    | 35        | 7.10 Wi-Fi troubleshooting.....                         | 79        |
| 4.4 Power and data (combined) connection .....         | 36        | 7.11 Bluetooth troubleshooting.....                     | 80        |
| 4.5 Power over Ethernet (PoE) .....                    | 38        | 7.12 Touchscreen troubleshooting .....                  | 81        |
| 4.6 Card reader connection .....                       | 38        | 7.13 Touchscreen alignment.....                         | 82        |
| 4.7 Auxiliary alarm connection .....                   | 39        | 7.14 Miscellaneous troubleshooting .....                | 83        |
| 4.8 <b>SeaTalk<sup>ng</sup></b> ® connections .....    | 39        | <b>Chapter 8 Technical specification.....</b>           | <b>85</b> |
| 4.9 NMEA 2000 connection .....                         | 40        | 8.1 Technical specification.....                        | 86        |
| 4.10 <b>SeaTalk</b> connection.....                    | 41        | <b>Chapter 9 Technical support .....</b>                | <b>89</b> |

|                                                   |    |
|---------------------------------------------------|----|
| 9.1 Raymarine product support and servicing ..... | 90 |
| 9.2 Learning resources .....                      | 91 |
| 9.3 Third-party support.....                      | 91 |

## **Chapter 10 Spares and accessories ..... 93**

|                                                                 |     |
|-----------------------------------------------------------------|-----|
| 10.1 gS Series accessories .....                                | 94  |
| 10.2 gS Series spares.....                                      | 94  |
| 10.3 Network hardware .....                                     | 95  |
| 10.4 Network cable connector types.....                         | 95  |
| 10.5 <b>RayNet</b> to <b>RayNet</b> cables and connectors ..... | 96  |
| 10.6 Network cable types .....                                  | 98  |
| 10.7 SeaTalk <sup>ng</sup> cabling components .....             | 98  |
| 10.8 SeaTalk <sup>ng</sup> cables and accessories .....         | 99  |
| 10.9 SeaTalk accessories.....                                   | 100 |

# Chapter 1: Important information

## Certified Installation

Raymarine recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Contact your Raymarine dealer for further details, and refer to the separate warranty document packed with your product.



### Warning: Product installation and operation

- This product must be installed and operated in accordance with the instructions provided. Failure to do so could result in personal injury, damage to your vessel and/or poor product performance.
- Raymarine recommends certified installation by a Raymarine approved installer. A certified installation qualifies for enhanced product warranty benefits. Contact your Raymarine dealer for further details, and refer to the separate warranty document packed with your product.

### Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).



### Warning: High voltages

This product may contain high voltages. Do NOT remove any covers or otherwise attempt to access internal components, unless specifically instructed in the documentation provided.

### Warning: Product grounding

Before applying power to this product, ensure it has been correctly grounded, in accordance with the instructions provided.

### Warning: Switch off power supply

Ensure the vessel's power supply is switched OFF before starting to install this product. Do NOT connect or disconnect equipment with the power switched on, unless instructed in this document.

### Warning: FCC Warning (Part 15.21)

Changes or modifications to this equipment not expressly approved in writing by Raymarine Incorporated could violate compliance with FCC rules and void the user's authority to operate the equipment.

### Warning: Radar transmission safety

The radar scanner transmits electromagnetic energy. Ensure all personnel are clear of the scanner when the radar is transmitting.

### Warning: Sonar operation

- NEVER operate the sonar with the vessel out of the water.
- NEVER touch the transducer face when the sonar is powered on.
- SWITCH OFF the sonar if divers are likely to be within 7.6 m (25 ft) of the transducer.

### Warning: Touchscreen display temperature

If the display is mounted where it will be exposed to prolonged periods of direct sunlight, the touchscreen may get very hot due to the absorbed solar energy.

In such conditions Raymarine highly recommends that you avoid using the touchscreen:

- For HybridTouch displays, use the integrated keypad to operate the display.
- For touch-only systems it is recommended that an external keypad is fitted to the system (for example, the RMK-9 accessory).

### Warning: Touchscreen display

Exposure to prolonged rain may cause erroneous touch performance, in these situations keep touch activity to a minimum and wipe the screen with a dry non-abrasive cloth before using the touchscreen.

## Product operation in high temperatures

At extreme temperatures, the unit can become very hot, especially the internal components.

To protect the internal components, the unit automatically reduces the performance of the main processor to prevent it from overheating. When this

occurs, you may notice a slight degradation in the performance of the unit, in terms of responsiveness to user operation.

This is expected behavior, designed to protect the unit from the adverse effects of excessive heat.

### **Caution: Mounting surface requirements**

This product is heavy. To prevent potential damage to the product and / or your vessel, observe the following BEFORE installing the product:

- Refer to the weight information provided in the technical specification for this product and ensure that the intended mounting surface is suitable for bearing the weight.
- If the mounting surface is not suitable for the product weight, you may need to reinforce the mounting surface.
- If in doubt, refer to a professional marine equipment installer for further guidance.

### **Caution: Power supply protection**

When installing this product ensure the power source is adequately protected by means of a suitably-rated fuse or automatic circuit breaker.

### **Caution: Care of chart and memory cards**

To avoid irreparable damage to and / or loss of data from chart and memory cards:

- DO NOT save data or files to a card containing cartography as the charts may be overwritten.
- Ensure that chart and memory cards are fitted the correct way around. DO NOT try to force a card into position.
- DO NOT use a metallic instrument such as a screwdriver or pliers to insert or remove a chart or memory card.

### **Caution: Ensure card reader door is securely closed**

To prevent water ingress and consequent damage to the product, ensure that the card reader door is firmly closed.

### **Caution: Sun covers**

- If your product is supplied with a sun cover, to protect against the damaging effects of ultraviolet (UV) light, always fit the sun cover when the product is not in use.
- Sun covers must be removed when travelling at high speed, whether in water or when the vessel is being towed.

### **Caution: Product cleaning**

When cleaning products:

- If your product includes a display screen, do NOT wipe the screen with a dry cloth, as this could scratch the screen coating.
- Do NOT use abrasive, or acid or ammonia based products.
- Do NOT use a jet wash.

## **Power over Ethernet (PoE)**

This product can supply Power over Ethernet (PoE) to class 1, 2 and 3 devices. The product can output a maximum of 20 Watts for consumption by PoE devices.

The PoE class denotes the power range of the PoE device.

| PoE Class | Power range       | Class description |
|-----------|-------------------|-------------------|
| Class 1   | 0.44 W to 3.84 W  | Very low power    |
| Class 2   | 3.84 W to 6.49 W  | Low power         |
| Class 3   | 6.49 W to 12.95 W | Mid power         |
| Class 0   | 0.44 W to 12.95 W | -                 |

**Note:** The product will not provide power to class 4 devices.

The product can power up to 3 devices using the available network / PoE ports as long as the combined max power of the PoE devices does not exceed 20 watts.

When a PoE device is connected it is interrogated to establish if the device is PoE and if so what class of device it is. The max power for that class of device is then assigned to that port (e.g. class 2 = 6.49 W) and deducted from the remaining power output.

The table below shows acceptable configurations of PoE devices.

| Class 1 (3.84 W) | Class 2 (6.49 W) | Class 3 / Class 0 (12.95 W) | Total power used |
|------------------|------------------|-----------------------------|------------------|
| 1                |                  |                             | 3.84 W           |
| 2                |                  |                             | 7.68 W           |
| 3                |                  |                             | 11.52 W          |



| Class 1 (3.84 W) | Class 2 (6.49 W) | Class 3 / Class 0 (12.95 W) | Total power used |
|------------------|------------------|-----------------------------|------------------|
|                  | 1                |                             | 6.49 W           |
|                  | 2                |                             | 12.98 W          |
|                  | 3                |                             | 19.47 W          |
| 1                | 1                |                             | 10.33 W          |
| 2                | 1                |                             | 14.17 W          |
| 1                | 2                |                             | 16.82 W          |
|                  |                  | 1                           | 12.95 W          |
| 1                |                  | 1                           | 16.79 W          |
|                  | 1                | 1                           | 19.44 W          |

**Note:** A class 0 device shall be assigned the same power allocation as a class 3 device.

**Note:** If a PoE device is connected that will take the total assigned power over 20 W the device will not be powered.

## TFT Displays

The colors of the display may seem to vary when viewed against a colored background or in colored light. This is a perfectly normal effect that can be seen with all color Thin Film Transistor (TFT) displays.

## Water ingress

Water ingress disclaimer

Although the waterproof rating capacity of this product meets the stated IPX standard (refer to the product's *Technical Specification*), water intrusion and subsequent equipment failure may occur if the product is subjected to commercial high-pressure washing. Raymarine will not warrant products subjected to high-pressure washing.

## Disclaimers

This product (including the electronic charts) is intended to be used only as an aid to navigation. It is designed to facilitate use of official government charts, not replace them. Only official government charts and notices to mariners contain all the current information needed for safe navigation, and the captain is responsible for their prudent use. It is the user's responsibility to use official government charts, notices to mariners, caution and proper navigational skill when operating this or any other Raymarine product. This product supports electronic charts provided by third party data suppliers which may be embedded or stored on memory card. Use of such charts is subject to the supplier's End-User Licence Agreement included in the documentation for this product or supplied with the memory card (as applicable).

Important information

Raymarine does not warrant that this product is error-free or that it is compatible with products manufactured by any person or entity other than Raymarine.

This product uses digital chart data, and electronic information from the Global Positioning System (GPS) which may contain errors. Raymarine does not warrant the accuracy of such information and you are advised that errors in such information may cause the product to malfunction. Raymarine is not responsible for damages or injuries caused by your use or inability to use the product, by the interaction of the product with products manufactured by others, or by errors in chart data or information utilized by the product and supplied by third parties.

## RF exposure

This equipment complies with FCC / IC RF exposure limits for general population / uncontrolled exposure. The wireless LAN / Bluetooth antenna is mounted behind the front facia of the display. This equipment should be installed and operated with a minimum distance of 1 cm (0.39 in) between the device and the body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter, except in accordance with FCC multi-transmitter product procedures.

## FCC

### Compliance Statement (Part 15.19)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

### FCC Interference Statement (Part 15.105 (b))

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the receiving antenna.

2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio / TV technician for help.

## Industry Canada

This device complies with Industry Canada License-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

## Industry Canada (Français)

Cet appareil est conforme aux normes d'exemption de licence RSS d'Industry Canada.

Son fonctionnement est soumis aux deux conditions suivantes:

1. cet appareil ne doit pas causer d'interférence, et
2. cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## Japanese approvals

In the frequency band used for this device, campus radio stations (radio stations that require a license) and specified low power radio stations (radio stations that do not require license) for mobile identification and amateur radio stations (radio stations that require license) used in industries such as microwave ovens, scientific, medical equipment devices and production line of other factories are also being operated.

1. Before using this device, please make sure that campus radio stations and specified low power radio stations for mobile identification and amateur radio stations are not being operated nearby.
2. In case there is any case of harmful interference to campus radio stations for mobile identification caused by this device, please immediately change the frequency used or stop the transmission of radio waves and then consult about the measures to avoid interference (for example, the installation of partitions) through the contact information below.
3. Besides, when in trouble, such as when there is any case of harmful interference to specified low power radio stations for mobile identification or amateur radio stations caused by this device, please consult through the following contact information.

Contact information: Please contact your local authorized Raymarine dealer.

## Declaration of conformity

Raymarine UK Ltd. declares that this product is compliant with the essential requirements of R&TTE directive 1999/5/EC.

The original Declaration of Conformity certificate may be viewed on the relevant product page at [www.raymarine.com](http://www.raymarine.com).

## Product disposal

Dispose of this product in accordance with the WEEE Directive.



■ The Waste Electrical and Electronic Equipment (WEEE) Directive requires the recycling of waste electrical and electronic equipment.

## Pixel defect policy

In common with all TFT units, the screen may exhibit a few wrongly-illuminated ("dead") pixels. These may appear as black pixels in a light area of the screen or as colored pixels in black areas.

If your display exhibits MORE than the number of wrongly-illuminated pixels allowed (refer to the product *technical specification* for details), please contact your local Raymarine service center for further advice.

## Warranty registration

To register your Raymarine product ownership, please visit [www.raymarine.com](http://www.raymarine.com) and register online.

It is important that you register your product to receive full warranty benefits. Your unit package includes a bar code label indicating the serial number of the unit. You will need this serial number when registering your product online. You should retain the label for future reference.

## IMO and SOLAS

The equipment described within this document is intended for use on leisure marine boats and workboats NOT covered by International Maritime Organization (IMO) and Safety of Life at Sea (SOLAS) Carriage Regulations.

## Technical accuracy

To the best of our knowledge, the information in this document was correct at the time it was produced. However, Raymarine cannot accept liability for any inaccuracies or omissions it may contain. In addition, our policy of continuous product improvement may change specifications without notice. As a result, Raymarine cannot accept liability for any differences between the product and this document. Please check the Raymarine website ([www.raymarine.com](http://www.raymarine.com)) to ensure you have the most up-to-date version(s) of the documentation for your product.



## Chapter 2: Document and product information

### Chapter contents

- [2.1 Document information on page 14](#)
- [2.2 Product documentation on page 14](#)
- [2.3 Document illustrations on page 15](#)
- [2.4 Product overview on page 15](#)
- [2.5 LightHouse MFD Operation instructions on page 16](#)

## 2.1 Document information

This document contains important information related to the installation of your Raymarine product.

The document includes information to help you:

- plan your installation and ensure you have all the necessary equipment;
- install and connect your product as part of a wider system of connected marine electronics;
- troubleshoot problems and obtain technical support if required.

This and other Raymarine product documents are available to download in PDF format from [www.raymarine.com](http://www.raymarine.com).

## 2.2 Product documentation

The following documentation is applicable to your product:

### Documentation

| Description                                                     | Part number |
|-----------------------------------------------------------------|-------------|
| gS Series Installation instructions                             | 87248       |
| <b>LightHouse™</b> multifunction display operation instructions | 81360       |
| gS95 Mounting template                                          | 87173       |
| gS125 Mounting template                                         | 87171       |
| gS165 Mounting template                                         | 87172       |
| gS195 Mounting template                                         | 87198       |
| RCR-2 Mounting template                                         | 87186       |

### Additional Documentation

| Description                                    | Part number |
|------------------------------------------------|-------------|
| SeaTalk <sup>ng</sup> reference manual         | 81300       |
| RMK-9 Installation and operations instructions | 81351       |

All documents are available to download as PDFs from [www.raymarine.com](http://www.raymarine.com)

### User manuals Print Shop

Raymarine provides a Print Shop service, enabling you to purchase a high-quality, professionally-printed manual for your Raymarine product.

Printed manuals are ideal for keeping onboard your vessel, as a useful source of reference whenever you need assistance with your Raymarine product.

Visit <http://www.raymarine.co.uk/view/?id=5175> to order a printed manual, delivered directly to your door.

For further information about the Print Shop, please visit the Print Shop FAQ pages: <http://www.raymarine.co.uk/view/?id=5751>.

#### Note:

- Accepted methods of payment for printed manuals are credit cards and PayPal.
- Printed manuals can be shipped worldwide.
- Further manuals will be added to the Print Shop over the coming months for both new and legacy products.
- Raymarine user manuals are also available to download free-of-charge from the Raymarine website, in the popular PDF format. These PDF files can be viewed on a PC / laptop, tablet, smartphone, or on the latest generation of Raymarine multifunction displays.

## 2.3 Document illustrations

Products may differ slightly from those shown in the illustrations in this document, depending on product variant and date of manufacture.


The illustration shown below is used throughout this document to represent **LightHouse™** powered **MFDs** and unless otherwise stated applies to all multifunction display variants.



## 2.4 Product overview

### Product information

gS Series Multifunction Displays (MFDs) are touchscreen displays which have HybridTouch functionality when paired with a remote keypad. The following Raymarine MFD variants are available.

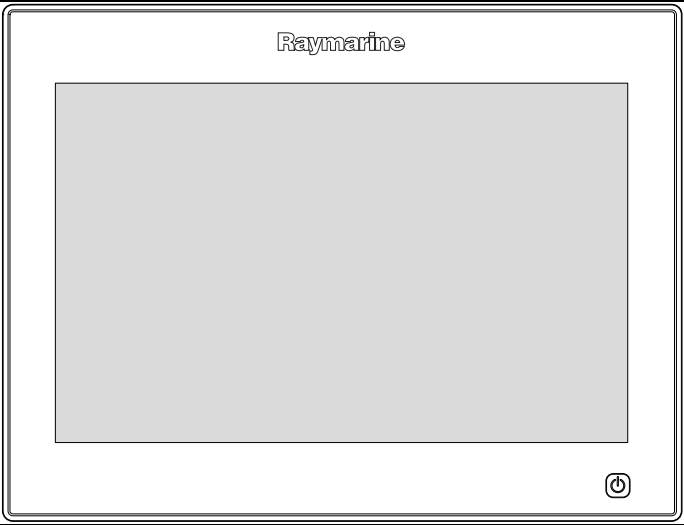

| Model          | Part number |
|----------------|-------------|
| gS95           | E70124      |
| gS95 inverted  | E70183      |
| gS125          | E70125      |
| gS125 inverted | E70184      |
| gS165          | E70126      |
| gS165 inverted | E70185      |
| gS195          | E70213      |

Refer to the [Optimum viewability](#) section for details on standard vs inverted displays.

### HybridTouch overview

If your multifunction display features HybridTouch, this enables you to operate the unit using the touchscreen and the physical buttons.

A HybridTouch display has physical buttons which can be used in addition to the touchscreen. Touchscreen only multifunction displays (which do not have physical buttons) can be connected to a remote keypad which allows HybridTouch functionality.

All functions can be accessed using the touchscreen. However, there may be situations (such as rough sea conditions) when it is not appropriate to use the touchscreen. In these situations, Raymarine strongly recommends that you activate the touch lock and use the physical buttons to operate your multifunction display.

## 2.5 LightHouse MFD Operation instructions

For operation instructions for your MFD, including 'Getting Started' and 'System Checks' information please use the User Manual icon on the Homescreen.

|                                                                                   |                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>the LightHouse Operation Instructions (81360) can also be downloaded from the Raymarine website:<br/><a href="http://www.raymarine.com/manuals">www.raymarine.com/manuals</a></p> |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|




# Chapter 3: Planning the installation

## Chapter contents

- [3.1 System integration on page 18](#)
- [3.2 Installation checklist on page 24](#)
- [3.3 Multiple data sources \(MDS\) overview on page 24](#)
- [3.4 Identifying your display variant on page 25](#)
- [3.5 Networking constraints on page 25](#)
- [3.6 System protocols on page 26](#)
- [3.7 Data master on page 27](#)
- [3.8 Parts supplied on page 28](#)
- [3.9 Tools required for installation on page 29](#)
- [3.10 Selecting a location on page 29](#)

3.1 System integration

Raymarine® multifunction displays (MFDs) are compatible with a wide range of marine electronics devices.

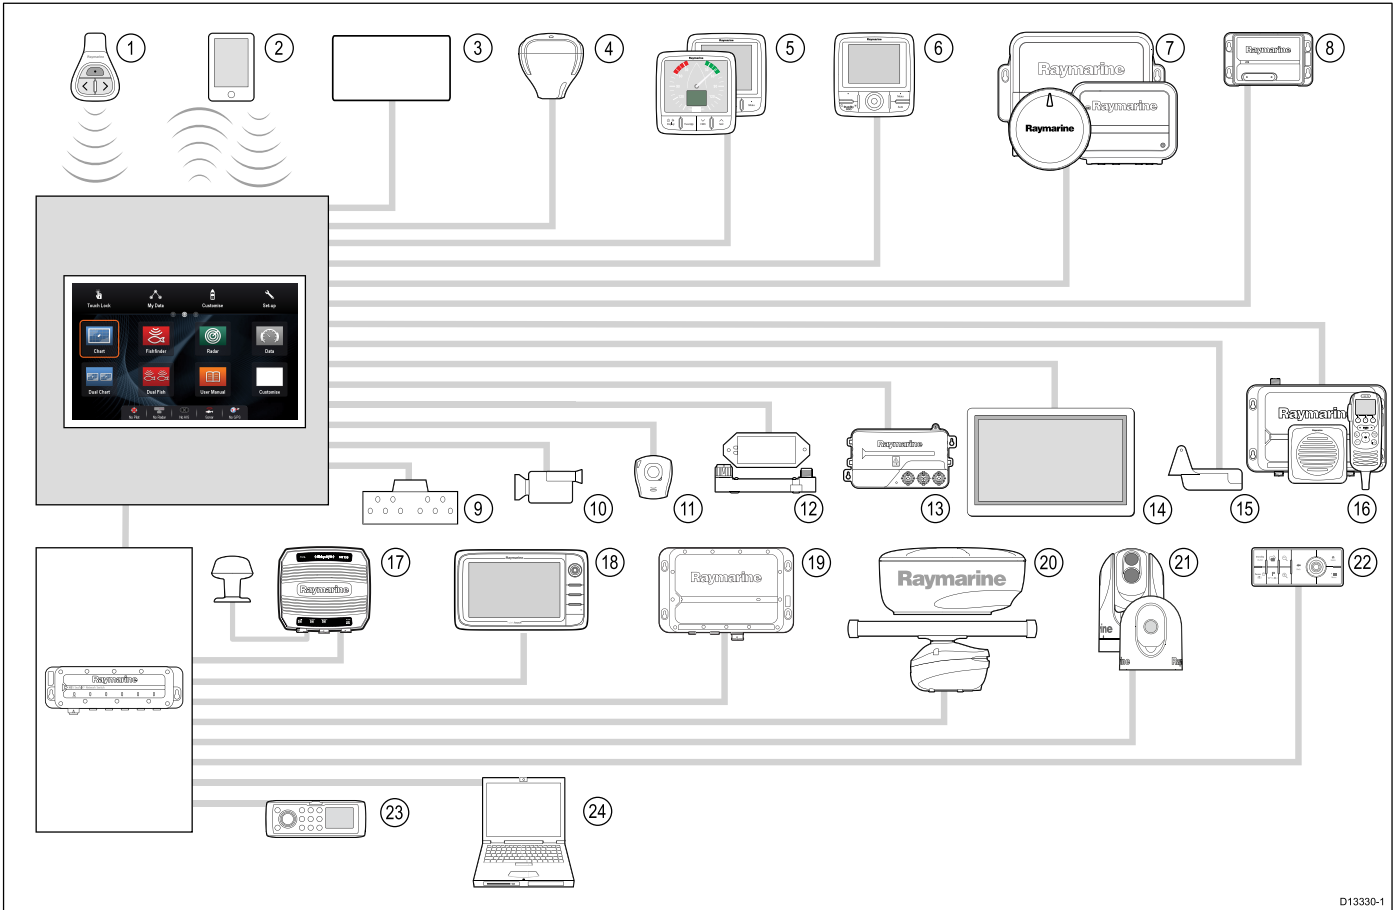

**MFDs** use various protocols to transfer data between devices in your system. The table below details which devices may be connected to your **MFD**, and the type of connections (in terms of protocols and physical interfaces):

| Item | Device Type                         | Maximum quantity             | Suitable Devices                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Connections                                                                                                                                                                                                                                                         |
|------|-------------------------------------|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Remote control                      | 1 per MFD                    | <b>Raymarine® RCU-3</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Bluetooth                                                                                                                                                                                                                                                           |
| 2    | Mobile device (Smartphone / Tablet) | 1 per multifunction display. | <p>For <b>Raymarine®</b> wireless video streaming and remote control apps:</p> <ul style="list-style-type: none"><li>• Apple iPhone 4 (or later) or iPad 2 (or later)</li><li>• Android device with minimum 1GHz processor and running android 2.2.2 (or later)</li><li>• Amazon Kindle Fire</li></ul> <p>For chartplotter sync with Navionics Marine app:</p> <ul style="list-style-type: none"><li>• Apple iPhone or iPad</li><li>• Android-compatible smartphone or tablet</li></ul> <p>For media player control (Touchscreen <b>MFDs</b> only):</p> <ul style="list-style-type: none"><li>• Any Bluetooth-enabled device that supports Bluetooth 2.1+ EDR power class 1.5 (supported profile: AVRCP 1.0)</li></ul> | <ul style="list-style-type: none"><li>• Chartplotter sync with Navionics Marine app: Wi-Fi</li><li>• Video streaming and remote control: Wi-Fi</li><li>• Media player control: Bluetooth 2.1+ EDR power class 1.5 (supported profile: AVRCP 1.0) or later</li></ul> |

| Item | Device Type                                  | Maximum quantity                                                                                                                                                               | Suitable Devices                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Connections                                                     |
|------|----------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| 3    | Vessel tank sensors — third-party            | <ul style="list-style-type: none"> <li>• Up to 5 x fuel.</li> <li>• 1 x fresh water.</li> <li>• 1 x waste water.</li> <li>• 1 x sewage.</li> <li>• 1 x bait / fish.</li> </ul> | Third-party <b>NMEA 2000</b> interfaces                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>NMEA 2000</b> (via optional <b>DeviceNet</b> adaptor cables) |
| 4    | GNSS Receiver (external) — <b>Raymarine®</b> | 1                                                                                                                                                                              | Any combination of the following: <ul style="list-style-type: none"> <li>• <b>RS130</b> GPS</li> <li>• <b>Raystar125</b> GPS</li> <li>• <b>Raystar125+GPS</b> (via optional <b>SeaTalk</b> to <b>SeaTalkng®</b> converter)</li> </ul>                                                                                                                                                                                                                                                                                       | <b>SeaTalk</b> , <b>SeaTalkng®</b> , or <b>NMEA 0183</b>        |
| 5    | Instruments — <b>Raymarine®</b>              | As determined by <b>SeaTalkng®</b> bus bandwidth and power loading.                                                                                                            | <b>SeaTalkng®</b> : <ul style="list-style-type: none"> <li>• <b>i50</b> Depth, Speed, or Tridata</li> <li>• <b>i60</b> Wind, CH Wind</li> <li>• <b>i70</b></li> <li>• <b>ST70+</b></li> <li>• <b>ST70</b></li> </ul> <b>SeaTalk</b> (via optional <b>SeaTalk</b> to <b>SeaTalkng®</b> converter): <ul style="list-style-type: none"> <li>• <b>i40</b> Wind, Speed, Depth, or Bidata</li> <li>• <b>ST60+</b> Wind, Speed, Depth, Rudder, or Compass</li> <li>• <b>ST40</b> Wind, Speed, Depth, Rudder, or Compass</li> </ul> | <b>SeaTalk</b> , <b>SeaTalkng®</b>                              |
| 6    | Pilot control heads — <b>Raymarine®</b>      | As determined by <b>SeaTalk</b> or <b>SeaTalkng®</b> bus bandwidth and power loading, as appropriate.                                                                          | <b>SeaTalkng®</b> : <ul style="list-style-type: none"> <li>• <b>p70</b></li> <li>• <b>p70R</b></li> <li>• <b>ST70</b> (<b>SeaTalkng®</b> course computer only.)</li> <li>• <b>ST70+</b> (<b>SeaTalkng®</b> course computer only.)</li> </ul> <b>SeaTalk</b> (via optional <b>SeaTalk</b> to <b>SeaTalkng®</b> converter): <ul style="list-style-type: none"> <li>• <b>ST6002</b></li> <li>• <b>ST7002</b></li> <li>• <b>ST8002</b></li> </ul>                                                                               | <b>SeaTalk</b> , <b>SeaTalkng®</b>                              |
| 7    | Autopilots — <b>Raymarine®</b>               | 1                                                                                                                                                                              | <b>SeaTalkng®</b> : <ul style="list-style-type: none"> <li>• <b>Evolution</b> autopilots</li> <li>• All <b>SPX</b> course computers</li> </ul> <b>SeaTalk</b> (via optional <b>SeaTalk</b> to <b>SeaTalkng®</b> converter): <ul style="list-style-type: none"> <li>• <b>ST1000</b></li> <li>• <b>ST2000</b></li> <li>• <b>S1000</b></li> <li>• <b>S1</b></li> </ul>                                                                                                                                                         | <b>SeaTalk</b> , <b>SeaTalkng®</b> , or <b>NMEA 0183</b>        |

| Item | Device Type                                 | Maximum quantity                                                                                                                                                                                  | Suitable Devices                                                                                                                                                                                                                                                                        | Connections                                                                                                                                                                        |
|------|---------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|      |                                             |                                                                                                                                                                                                   | <ul style="list-style-type: none"> <li>• S2</li> <li>• S3</li> </ul>                                                                                                                                                                                                                    |                                                                                                                                                                                    |
| 8    | AIS — Raymarine®                            | 1                                                                                                                                                                                                 | <ul style="list-style-type: none"> <li>• AIS350</li> <li>• AIS650</li> <li>• AIS950</li> </ul>                                                                                                                                                                                          | SeaTalk <sup>ng</sup> ®, or NMEA 0183                                                                                                                                              |
| 8    | AIS — third-party                           | 1                                                                                                                                                                                                 | Third-party <b>NMEA 0183</b> —compatible AIS Class A or Class B receiver / transceiver                                                                                                                                                                                                  | <b>NMEA 0183</b>                                                                                                                                                                   |
| 9    | Vessel trim tabs — third-party              | 1 pair                                                                                                                                                                                            | Third-party <b>NMEA 2000</b> interfaces                                                                                                                                                                                                                                                 | <b>NMEA 2000</b> (via optional <b>DeviceNet</b> adaptor cables)                                                                                                                    |
| 10   | Analog video / camera                       | <b>a6x / a7x = 0</b><br><b>a9x / a12x / e7 / e7D = 1</b><br><b>c Series = 1</b><br><b>e9x / e12x / e165 = 2</b><br><b>eS Series = 1</b><br><b>gS Series = 2</b>                                   | Composite PAL or NTSC video source                                                                                                                                                                                                                                                      | BNC connectors                                                                                                                                                                     |
| 10   | IP camera                                   | Multiple                                                                                                                                                                                          | <ul style="list-style-type: none"> <li>• <b>CAM200IP</b></li> </ul> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <b>Note:</b> Whilst third-party ONVIF compatible IP cameras may work, <b>Raymarine®</b> cannot guarantee their compatibility.         </div> | Via <b>SeaTalk<sup>hs</sup></b> network                                                                                                                                            |
| 11   | Lifetag (Man overboard alert)               | 1 basestation                                                                                                                                                                                     | All <b>Raymarine®</b> Lifetag basestations                                                                                                                                                                                                                                              | <b>SeaTalk</b> (via optional <b>SeaTalk</b> to <b>SeaTalk<sup>ng</sup>®</b> converter)                                                                                             |
| 12   | Engine interface — <b>Raymarine®</b>        | 1 unit for each engine CAN bus                                                                                                                                                                    | <ul style="list-style-type: none"> <li>• <b>ECI-100</b></li> </ul>                                                                                                                                                                                                                      | <b>SeaTalk<sup>ng</sup>®</b>                                                                                                                                                       |
| 12   | Engine interface — third-party              | 1                                                                                                                                                                                                 | Third-party <b>NMEA 2000</b> interfaces                                                                                                                                                                                                                                                 | <b>NMEA 2000</b> (via optional <b>DeviceNet</b> adaptor cables)                                                                                                                    |
| 13   | Transducers and sensors — <b>Raymarine®</b> | 1                                                                                                                                                                                                 | Analog transducers: <ul style="list-style-type: none"> <li>• Wind</li> <li>• Speed</li> <li>• Depth</li> <li>• Rudder reference</li> <li>• Fluxgate compass</li> </ul>                                                                                                                  | <b>SeaTalk<sup>ng</sup>®</b> (via optional <b>iTC-5</b> converter)                                                                                                                 |
| 13   | Transducers and sensors — Airmar            | 1                                                                                                                                                                                                 | <ul style="list-style-type: none"> <li>• <b>DT800</b> Smart Sensor</li> <li>• <b>DST800</b> Smart Sensor</li> <li>• <b>PB200</b> weather station</li> </ul>                                                                                                                             | <b>SeaTalk<sup>ng</sup>®</b> (via optional <b>iTC-5</b> converter)                                                                                                                 |
| 14   | External display                            | <b>a6x / a7x = 0</b><br><b>a9x / a12x = 1</b><br><b>c Series = 0</b><br><b>e7 / e7D = 0</b><br><b>e9x / e12x / e165 = 1</b><br><b>eS7x = 0</b><br><b>eS9x / eS12x = 1</b><br><b>gS Series = 1</b> | e.g. HDTV                                                                                                                                                                                                                                                                               | <b>a9x / a12x = 15 pin D-Type</b> connector (VGA Style)<br><b>e9x / e12x / e165 = 15 pin D-Type</b> connector (VGA Style)<br><b>eS9x / eS12x = HDMI</b><br><b>gS Series = HDMI</b> |

| Item | Device Type                                                                             | Maximum quantity | Suitable Devices                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Connections                                                     |
|------|-----------------------------------------------------------------------------------------|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| 15   | Sonar transducer                                                                        | 1                | <ul style="list-style-type: none"> <li>• <b>P48</b></li> <li>• <b>P58</b></li> <li>• <b>P74</b></li> <li>• <b>B60 20°</b></li> <li>• <b>B60 12°</b></li> <li>• <b>B744V</b></li> </ul> ; OR:<br><ul style="list-style-type: none"> <li>• Any 600 watt / 1Kw compatible transducer (via optional E66066 adaptor cable)</li> </ul> ; OR:<br><ul style="list-style-type: none"> <li>• Any Minn Kota transducer (via optional A62363 adaptor cable)</li> </ul> Connection via external <b>Raymarine®</b> Sonar Module:<br><ul style="list-style-type: none"> <li>• Any sonar module-compatible transducer</li> </ul> | Direct connection to 600 W internal sonar variant displays.     |
| 15   | <b>DownVision™</b> transducers                                                          | 1                | Direct connection to internal <b>CHIRP DownVision™</b> variant displays<br><ul style="list-style-type: none"> <li>• <b>CPT-100</b> — Transom mount</li> <li>• <b>CPT-110</b> — Thru-hull plastic</li> <li>• <b>CPT-120</b> — Thru-hull bronze</li> </ul>                                                                                                                                                                                                                                                                                                                                                         | Direct connection to <b>CHIRP DownVision™</b> variant displays. |
| 16   | DSC VHF radio — <b>Raymarine®</b>                                                       | 1                | <b>SeaTalk<sup>ng</sup>®</b> :<br><ul style="list-style-type: none"> <li>• <b>Ray50</b></li> <li>• <b>Ray60</b></li> <li>• <b>Ray70</b></li> <li>• <b>Ray260</b></li> <li>• <b>Ray260 AIS</b></li> </ul> <b>NMEA 0183</b> :<br><ul style="list-style-type: none"> <li>• <b>Ray50</b></li> <li>• <b>Ray60</b></li> <li>• <b>Ray70</b></li> <li>• <b>Ray49</b></li> <li>• <b>Ray55</b></li> <li>• <b>Ray218</b></li> <li>• <b>Ray240</b></li> </ul>                                                                                                                                                                | <b>NMEA 0183</b> or <b>SeaTalk<sup>ng</sup>®</b>                |
| 17   | <b>Raymarine®</b> Sirius marine weather / satellite radio receiver (North America only) | 1                | <b>SeaTalk<sup>hs</sup></b> :<br><ul style="list-style-type: none"> <li>• <b>SR150</b></li> <li>• <b>SR100</b></li> <li>• <b>SR6</b></li> </ul> <b>SeaTalk<sup>ng</sup>®</b> :<br><ul style="list-style-type: none"> <li>• <b>SR50</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                | <b>SeaTalk<sup>hs</sup></b> , <b>SeaTalk<sup>ng</sup>®</b>      |

| Item | Device Type                                             | Maximum quantity                                                                                                                                                        | Suitable Devices                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Connections                                                          |
|------|---------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| 18   | Additional multifunction display(s) — <b>Raymarine®</b> | 9                                                                                                                                                                       | 3rd generation <b>Raymarine®</b> multifunction displays<br><b>SeaTalk<sup>hs</sup></b> (recommended): <ul style="list-style-type: none"> <li>• <b>a Series</b></li> <li>• <b>c Series</b></li> <li>• <b>e Series</b></li> <li>• <b>gS Series</b></li> <li>• <b>eS Series</b></li> </ul> <div> <b>Note:</b> You can connect <b>Raymarine®</b> multifunction displays using <b>NMEA 0183</b> or <b>SeaTalk<sup>ng</sup>®</b> but not all functions are supported.         </div> <div> <b>Note:</b> Visit <a href="http://www.raymarine.com">www.raymarine.com</a> to download the latest software version for your display.         </div> | <b>SeaTalk<sup>hs</sup></b>                                          |
| 18   | Additional multifunction display(s) — third-party       | <ul style="list-style-type: none"> <li>• Connections to multifunction display NMEA outputs: 4</li> <li>• Connections to multifunction display NMEA inputs: 2</li> </ul> | <b>NMEA 0183</b> —compatible chartplotters and multifunction displays                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>NMEA 0183</b>                                                     |
| 19   | Sonar Modules (Fishfinder) — <b>Raymarine®</b>          | Multiple                                                                                                                                                                | <ul style="list-style-type: none"> <li>• <b>CP100</b> — <b>DownVision™</b></li> <li>• <b>CP200</b> — <b>SideVision™</b></li> <li>• <b>CP300 / CP370</b>— Traditional sonar</li> <li>• <b>CP450C / CP470</b> — <b>CHIRP</b> sonar</li> <li>• <b>CP570 CHIRP</b> professional sonar</li> <li>• 600 W Sonar and <b>CHIRP DownVision™</b> variant displays.</li> </ul>                                                                                                                                                                                                                                                                        | <b>SeaTalk<sup>hs</sup></b>                                          |
| 20   | Radar — <b>Raymarine®</b>                               | 2                                                                                                                                                                       | All <b>Raymarine®</b> Non-HD Digital Radomes and HD or <b>SuperHD</b> radar scanners. <div> <b>Note:</b> Please ensure your radar scanner is using the latest software version.           </div>                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>SeaTalk<sup>hs</sup></b>                                          |
| 21   | Thermal camera — <b>Raymarine®</b>                      | 1                                                                                                                                                                       | <ul style="list-style-type: none"> <li>• <b>T200 Series</b></li> <li>• <b>T300 Series</b></li> <li>• <b>T400 Series</b></li> <li>• <b>T800 Series</b></li> <li>• <b>T900 Series</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>SeaTalk<sup>hs</sup></b> (for control), BNC connector (for video) |
| 22   | Remote keypad                                           | Multiple                                                                                                                                                                | • <b>RMK-9</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>SeaTalk<sup>hs</sup></b>                                          |

| Item | Device Type                  | Maximum quantity | Suitable Devices                                                                                                             | Connections                 |
|------|------------------------------|------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
| 23   | Fusion entertainment systems | Multiple         | Fusion 700 series entertainment systems:<br><ul style="list-style-type: none"> <li>• MS-IP700</li> <li>• MS-AV700</li> </ul> | <b>SeaTalk<sup>hs</sup></b> |
| 24   | PC / laptop                  | 1                | Windows-compatible PC or laptop running <b>Raymarine® Voyage Planner</b> software.                                           | <b>SeaTalk<sup>hs</sup></b> |

**Note:** Raymarine® cannot guarantee the compatibility of any third-party devices listed above.

## 3.2 Installation checklist

Installation includes the following activities:

| Installation Task |                                          |
|-------------------|------------------------------------------|
| 1                 | Plan your system.                        |
| 2                 | Obtain all required equipment and tools. |
| 3                 | Site all equipment.                      |
| 4                 | Route all cables.                        |
| 5                 | Drill cable and mounting holes.          |
| 6                 | Make all connections into equipment.     |
| 7                 | Secure all equipment in place.           |
| 8                 | Power on and test the system.            |

## 3.3 Multiple data sources (MDS) overview

Installations that include multiple instances of data sources can cause data conflicts. An example is an installation featuring more than one source of GPS data.

MDS enables you to manage conflicts involving the following types of data:

- GPS Position.
- Heading.
- Depth.
- Speed.
- Wind.

Typically this exercise is completed as part of the initial installation, or when new equipment is added.

If this exercise is NOT completed the system will automatically attempt to resolve data conflicts. However, this may result in the system choosing a source of data that you do not want to use.

If MDS is available the system can list the available data sources and allow you to select your preferred data source. For MDS to be available all products in the system that use the data sources listed above must be MDS-compliant. The system can list any products that are NOT compliant. It may be necessary to upgrade the software for these non-compliant products to make them compliant. Visit the Raymarine website ([www.raymarine.com](http://www.raymarine.com)) to obtain the latest software for your products. If MDS-compliant software is not available and you do NOT want the system to automatically attempt to resolve data conflicts, any non-compliant product(s) can be removed or replaced to ensure the entire system is MDS-compliant.



### 3.4 Identifying your display variant

To discover which model display you have follow the steps below:



| Device                        | Serial No      | Network     | Software  |
|-------------------------------|----------------|-------------|-----------|
| gS95                          | E70124 0130015 | This Device | v7.14-003 |
| e95                           | E70022 1010041 | SeaTalkHS   | v7.14-003 |
| c95                           | E70012 1110007 | SeaTalkHS   | v7.14-003 |
| e7                            | E62355 0320248 | SeaTalkHS   | v7.14-003 |
| a67                           | E70077 0820023 | SeaTalkHS   | v7.14-003 |
| RMK-9                         | A80217 0130006 | SeaTalkHS   | v7.14-003 |
| E22158-SeaTalk-STNG-Converter | 0611380        | STng        | 1.11      |

From the homescreen:

1. Select **Set-up**.
2. Select **Maintenance**.
3. Select **Diagnostics**.
4. Select **Select Device**.
5. Search the Network column for the 'This Device' entry.
6. The Device column for this record will list the model of your display.

### 3.5 Networking constraints

Up to 10 **LightHouse** powered **MFDs** can be connected together using **SeaTalk<sup>hs</sup>**. It is recommended that all networked displays contain the same software version.

#### Software versions

- All networked **aa Series**, **c Series** and **e Series** displays must contain **LightHouse** software release V4.32 or later.
- All networked **gS Series** displays must contain **LightHouse** software release V7.43 or later.
- All networked **eS Series** displays must contain **LightHouse** software release V14.xx or later.

#### Master / repeater operation

- Any network featuring more than 1 **MFD** must have 1 of the displays designated as the Data Master.
- The Data Master display will receive data through **NMEA 0183** and / or **SeaTalk<sup>ng</sup>**, and bridge the data over **SeaTalk<sup>hs</sup>** to other networked displays.

#### Homescreen sharing

- When networked, **MFDs** can share the Data Master's Homescreen.

#### Cartography sharing

- The cartography contained on chart cards is always used in preference to embedded world base maps.
- Chart card cartography can be shared between networked **MFDs**.

#### Radar operation

- **MFDs** support the use of up to 2 Radar scanners simultaneously.
- The data supplied by a connected Radar scanner(s) is repeated to networked displays.

**Note:** All **MFDs** must have **LightHouse II** Release V12.26 software or later to enable multiple radar support.

#### Sonar / DownVision™ / SideVision™ operation

- You can connect an external sonar modules to the **MFD** via the **SeaTalk<sup>hs</sup>** network.
- 600 W sonar and **CHIRP DownVision™** variant displays include an internal sonar module which enables direct connection of a compatible transducer.
- You can have multiple active sonar modules (internal and external) on a network.
- The data supplied by the sonar module is repeated to networked displays.

**Note:**

- All **MFDs** must have **LightHouse II** Release V10.41 software or later to enable multiple sonar support.
- Sonar modules should be updated to the latest available software version to ensure compatibility.

### 3.6 System protocols

Your Multifunction Display can connect to various instruments and displays to share information and so improve the functionality of the system. These connections may be made using a number of different protocols. Fast and accurate data collection and transfer is achieved by using a combination of the following data protocols:

- SeaTalk<sup>hs</sup>
- SeaTalk<sup>ng</sup>
- NMEA 2000
- SeaTalk
- NMEA 0183

**Note:** You may find that your system does not use all of the connection types or instrumentation described in this section.

#### SeaTalk<sup>hs</sup>

SeaTalk<sup>hs</sup> is an ethernet based marine network. This high speed protocol allows compatible equipment to communicate rapidly and share large amounts of data.

Information shared using the SeaTalk<sup>hs</sup> network includes:

- Shared cartography (between compatible displays).
- Digital radar data.
- Sonar data.

#### Seataalk<sup>ng</sup>

SeaTalk<sup>ng</sup> (Next Generation) is an enhanced protocol for connection of compatible marine instruments and equipment. It replaces the older SeaTalk and SeaTalk<sup>2</sup> protocols.

SeaTalk<sup>ng</sup> utilizes a single backbone to which compatible instruments connect using a spur. Data and power are carried within the backbone. Devices that have a low draw can be powered from the network, although high current equipment will need to have a separate power connection.

SeaTalk<sup>ng</sup> is a proprietary extension to NMEA 2000 and the proven CAN bus technology. Compatible NMEA 2000 and SeaTalk / SeaTalk<sup>2</sup> devices can also be connected using the appropriate interfaces or adaptor cables as required.






#### NMEA 2000

NMEA 2000 offers significant improvements over NMEA 0183, most notably in speed and connectivity. Up to 50 units can simultaneously transmit and receive on a single physical bus at any one time, with each node being physically addressable. The standard was specifically intended to allow for

#### Incompatible displays

If you connect a multifunction display to your system that is not compatible, a warning message will be displayed until you disconnect the incompatible device from your network.

Your **MFD** is not compatible with the following Raymarine displays:
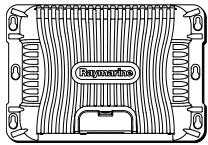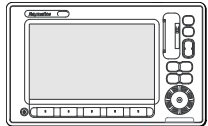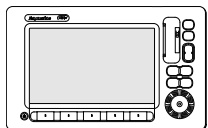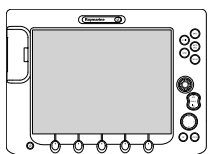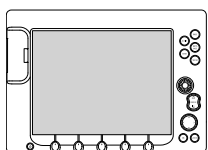
| Product Image                                                                      | Multifunction display | Generation                 |
|------------------------------------------------------------------------------------|-----------------------|----------------------------|
|    | G-Series              | 2 <sup>nd</sup> generation |
|   | E-Series Widescreen   | 2 <sup>nd</sup> generation |
|  | C-Series Widescreen   | 2 <sup>nd</sup> generation |
|  | E-Series Classic      | 1 <sup>st</sup> generation |
|  | C-Series Classic      | 1 <sup>st</sup> generation |

a whole network of marine electronics from any manufacturer to communicate on a common bus via standardized message types and formats.

## SeaTalk

SeaTalk is a protocol which enables compatible instruments to connect to each other and share data.

The SeaTalk cable system is used to connect compatible instruments and equipment. The cable carries power and data and enables connection without the need for a central processor.

Additional instruments and functions can be added to a SeaTalk system, simply by plugging them into the network. SeaTalk equipment can also communicate with other non-SeaTalk equipment via the NMEA 0183 standard, provided a suitable interface is used.

## NMEA 0183

The NMEA 0183 Data Interface Standard was developed by the National Marine Electronics Association of America. It is an international standard to enable equipment from many different manufacturers to be connected together and share information.

The NMEA 0183 standard carries similar information to SeaTalk. However it has the important difference that one cable will only carry information in one direction. For this reason NMEA 0183 is generally used to connect a data receiver and a transmitter together, e.g. a compass sensor transmitting heading to a radar display. This information is passed in 'sentences', each of which has a three letter sentence identifier. It is therefore important when checking compatibility between items that the same sentence identifiers are used some examples of which are:

- VTG - carries Course and Speed Over Ground data.
- GLL - carries latitude and longitude.
- DBT - carries water depth.
- MWV - carries relative wind angle and wind speed data.

## NMEA Baud rates

The NMEA 0183 standard operates at a number of different speeds, depending upon the particular requirement or equipment capabilities. Typical examples are:

- 4800 baud rate. Used for general purpose communications, including FastHeading data.
- 38400 baud rate. Used for AIS and other high speed applications.

## 3.7 Data master

Any system containing more than one networked multifunction display must have a designated data master.

The data master is the display which serves as a primary source of data for all displays, it also handles all external sources of information. For example the displays may require heading information from the autopilot and GPS systems, usually received through a SeaTalk<sup>ng</sup> or NMEA connection. The data master is the display to which the SeaTalk, NMEA and any other data connections are made, it then bridges the data to the SeaTalk<sup>hs</sup> network and any compatible repeat displays. Information shared by the data master includes:


- Cartography
- Routes and waypoints
- Radar
- Sonar
- Data received from the autopilot, instruments, the engine and other external sources.

Your system may be wired for redundancy with data connections made to repeat displays. However these connections will only become active in the event of a fault and/or reassignment of the data master.

In an autopilot system which does not contain a dedicated pilot control head the Data master also acts as the control for the autopilot.

3.8 Parts supplied


The following parts are supplied with your product.

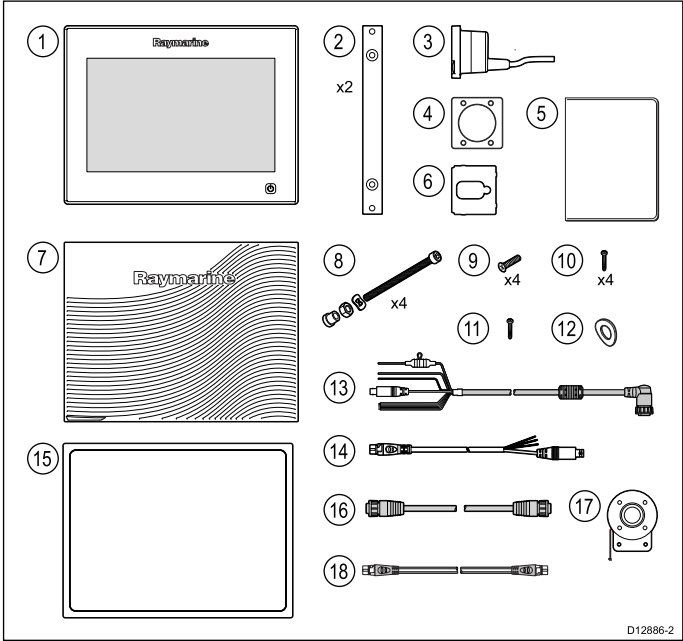

|    |                                                                                                                                                                                     |
|----|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1  | Multifunction display                                                                                                                                                               |
| 2  | 2 x Display mounting brackets                                                                                                                                                       |
| 3  | RCR-2 Remote Card Reader                                                                                                                                                            |
| 4  | Mounting gasket for RCR-2                                                                                                                                                           |
| 5  | Document pack                                                                                                                                                                       |
| 6  | RCR-2 inlay card x 2                                                                                                                                                                |
| 7  | Sun cover                                                                                                                                                                           |
| 8  | 4 x Mounting bolts, washers, lock nuts and feet                                                                                                                                     |
| 9  | 4 x Bracket fixings <ul style="list-style-type: none"><li>• gS95 = M5 x 25 pan head</li><li>• gS125 and gS165 = M5 x 25 countersunk</li><li>• gS195 = M5 x 60 countersunk</li></ul> |
| 10 | 4 x RCR-2 fixings (self-tapping screws)                                                                                                                                             |
| 11 | M5 x 10 pan head screw (not supplied with gS95)                                                                                                                                     |
| 12 | M5 Wavy washer (for additional grounding strap)                                                                                                                                     |
| 13 | 1.5 m (4.9 ft) Power / Data cable                                                                                                                                                   |
| 14 | 2 m (6.6 ft) Video / Alarm cable                                                                                                                                                    |
| 15 | Display mounting gasket                                                                                                                                                             |
| 16 | 2 m (6.6 ft) RayNet cable                                                                                                                                                           |
| 17 | Auxiliary alarm                                                                                                                                                                     |
| 18 | 1m (3.28 ft) SeaTalk <sup>ng</sup> spur cable                                                                                                                                       |


HD-SDI additional parts supplied

The gS195 is supplied with the following additional parts for use with the HD-SDI connection.

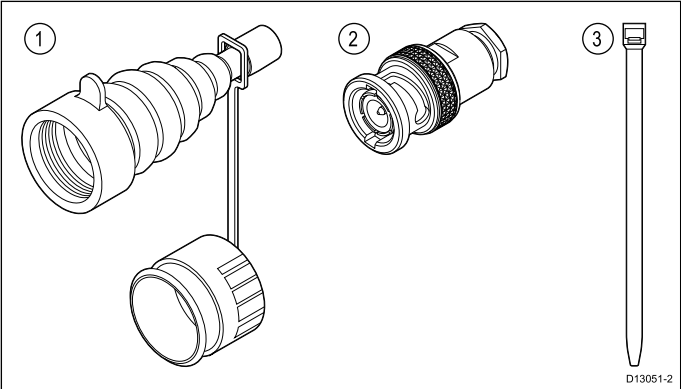

|   |                                                |
|---|------------------------------------------------|
| 1 | Protective boot                                |
| 2 | 75 ohm BNC connector                           |
| 4 | Cable ties x 2 (to secure the protective boot) |

### 3.9 Tools required for installation

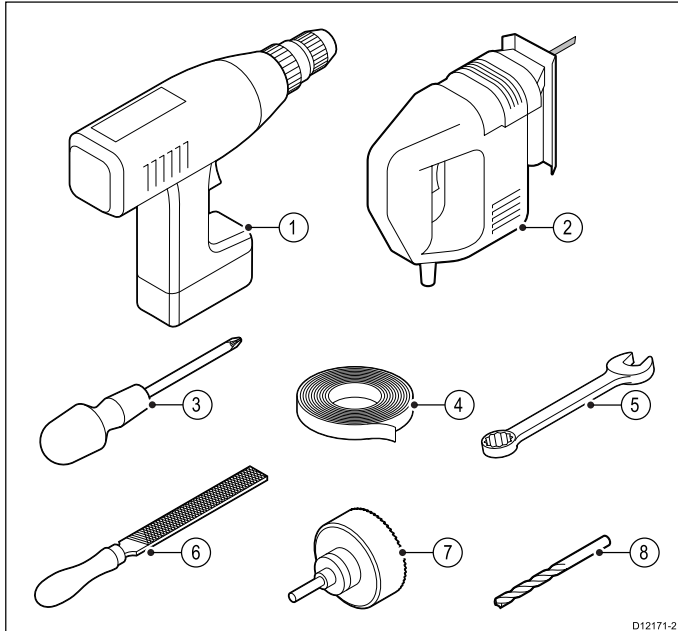

1. Power drill.
2. Jigsaw.
3. Pozidrive screwdriver.
4. Adhesive tape.
5. Spanner for surface mounting or bracket mounting fixings.
6. File.
7. Hole saw for flush mounting (For hole saw size refer to your product's mounting template).
8. Drill bit for surface mounting or flush mounting.

#### Additional tools for Flush mounting

For best results when flush mounting the displays it is recommended that a router is used to cut out the rebate.

### 3.10 Selecting a location



#### Warning: Potential ignition source

This product is NOT approved for use in hazardous/flammable atmospheres. Do NOT install in a hazardous/flammable atmosphere (such as in an engine room or near fuel tanks).

#### General location requirements

When selecting a location for your product it is important to consider a number of factors.

Key factors which can affect product performance are:

- **Ventilation**

To ensure adequate airflow:

- Ensure that product is mounted in a compartment of suitable size.
- Ensure that ventilation holes are not obstructed. Allow adequate separation of all equipment.

Any specific requirements for each system component are provided later in this chapter.

- **Mounting surface**

Ensure product is adequately supported on a secure surface. Do not mount units or cut holes in places which may damage the structure of the vessel.

- **Cabling**

Ensure the product is mounted in a location which allows proper routing, support and connection of cables:

- Minimum bend radius of 100 mm (3.94 in) unless otherwise stated.
- Use cable clips to prevent stress on connectors.
- If your installation requires multiple ferrites to be added to a cable then additional cable clips should be used to ensure the extra weight of the cable is supported.

- **Water ingress**

The product is suitable for mounting both above and below decks. Although the unit is waterproof, it is good practice to locate it in a protected area away from prolonged and direct exposure to rain and salt spray.

- **Electrical interference**

Select a location that is far enough away from devices that may cause interference, such as motors, generators and radio transmitters / receivers.


- **Power supply**

Select a location that is as close as possible to the vessel's DC power source. This will help to keep cable runs to a minimum.

Compass safe distance

To prevent potential interference with the vessel's magnetic compasses, ensure an adequate distance is maintained from the display.

When choosing a suitable location for the multifunction display you should aim to maintain the maximum possible distance between the display and any compasses. Typically this distance should be at least 1 m (3 ft) in all directions. However for some smaller vessels it may not be possible to locate the display this far away from a compass. In this situation, the following figures provide the minimum safe distance that should be maintained between the display and any compasses.

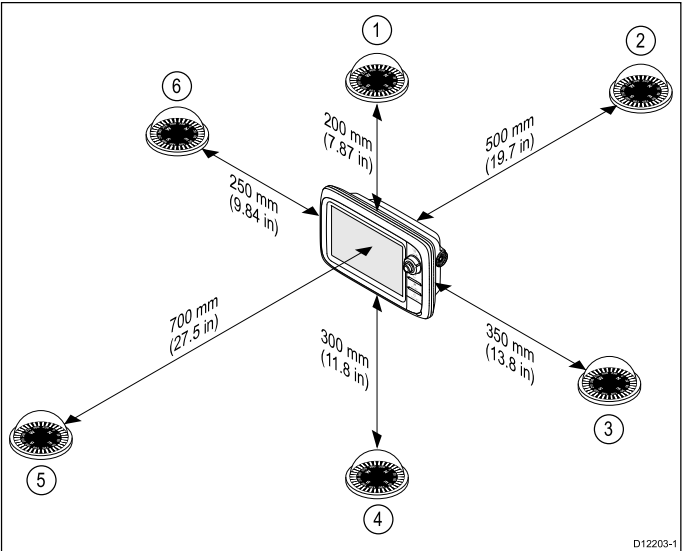

| Item | Compass position in relation to display | Minimum safe distance from display |
|------|-----------------------------------------|------------------------------------|
| 1    | Top                                     | 200 mm (7.87 in.)                  |
| 2    | Rear                                    | 500 mm (19.7 in.)                  |
| 3    | Right-hand side                         | 350 mm (13.8 in.)                  |
| 4    | Underside                               | 300 mm (11.8 in.)                  |
| 5    | Front                                   | 700 mm (27.5 in.)                  |
| 6    | Left-hand side                          | 250 mm (9.84 in.)                  |

Caution: Mounting surface requirements

This product is heavy. To prevent potential damage to the product and / or your vessel, observe the following BEFORE installing the product:


- Refer to the weight information provided in the technical specification for this product and ensure that the intended mounting surface is suitable for bearing the weight.
- If the mounting surface is not suitable for the product weight, you may need to reinforce the mounting surface.
- If in doubt, refer to a professional marine equipment installer for further guidance.

GPS location requirements

In addition to general guidelines concerning the location of marine electronics, there are a number of environmental factors to consider when installing equipment with an internal GPS antenna.

Mounting location

- **Above Decks mounting:**  
Provides optimal GPS performance. (For equipment with appropriate waterproof rating.)
- **Below Decks mounting:**  
GPS performance may be less effective and may require an external GPS antenna mounted above decks.

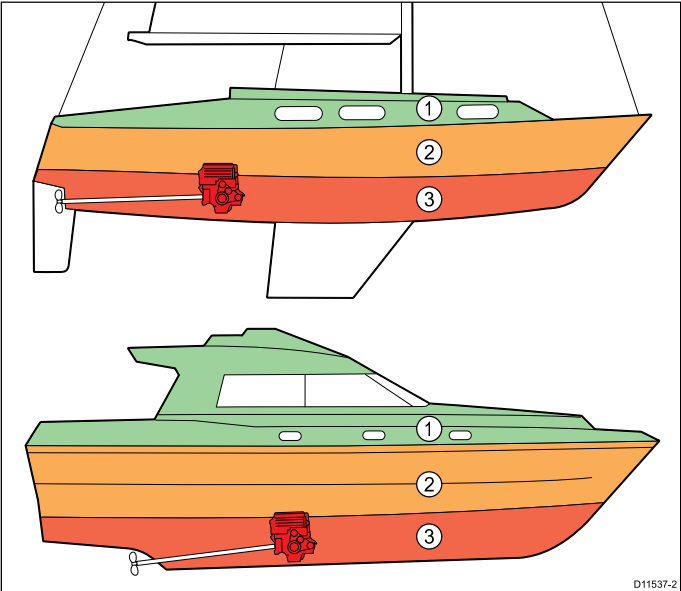

|    |  |                                                               |
|----|--|---------------------------------------------------------------|
| 1. |  | This location provides optimal GPS performance (above decks). |
| 2. |  | In this location, GPS performance may be less effective.      |
| 3. |  | This location is NOT recommended for GPS antenna.             |



## Vessel construction

The construction of your vessel can have an impact on GPS performance. For example, the proximity of heavy structure such as a structural bulkhead, or the interior of larger vessels may result in a reduced GPS signal. Before locating equipment with an internal GPS antenna below decks, seek professional assistance and consider use of an external GPS antenna mounted above decks.

## Prevailing conditions

The weather and location of the vessel can affect the GPS performance. Typically calm clear conditions provide for a more accurate GPS fix. Vessels at extreme northerly or southerly latitudes may also receive a weaker GPS signal. GPS antenna mounted below decks will be more susceptible to performance issues related to the prevailing conditions.

## EMC installation guidelines

Raymarine equipment and accessories conform to the appropriate Electromagnetic Compatibility (EMC) regulations, to minimize electromagnetic interference between equipment and minimize the effect such interference could have on the performance of your system

Correct installation is required to ensure that EMC performance is not compromised.

**Note:** In areas of extreme EMC interference, some slight interference may be noticed on the product. Where this occurs the product and the source of the interference should be separated by a greater distance.

For **optimum** EMC performance we recommend that wherever possible:

- Raymarine equipment and cables connected to it are:
  - At least 1 m (3 ft) from any equipment transmitting or cables carrying radio signals e.g. VHF radios, cables and antennas. In the case of SSB radios, the distance should be increased to 7 ft (2 m).
  - More than 2 m (7 ft) from the path of a radar beam. A radar beam can normally be assumed to spread 20 degrees above and below the radiating element.
- The product is supplied from a separate battery from that used for engine start. This is important to prevent erratic behavior and data loss which can occur if the engine start does not have a separate battery.
- Raymarine specified cables are used.
- Cables are not cut or extended, unless doing so is detailed in the installation manual.


**Note:** Where constraints on the installation prevent any of the above recommendations, always ensure the maximum possible separation between different items of electrical equipment, to provide the best conditions for EMC performance throughout the installation

## Viewing angle considerations

As display contrast, color and night mode performance are all affected by the viewing angle, Raymarine recommends you temporarily power up the display when planning the installation, to enable you to best judge which location gives the optimum viewing angle.


## LCD orientation

Raymarine multifunction displays (MFDs) can be viewed from wide angles top to bottom and left to right.

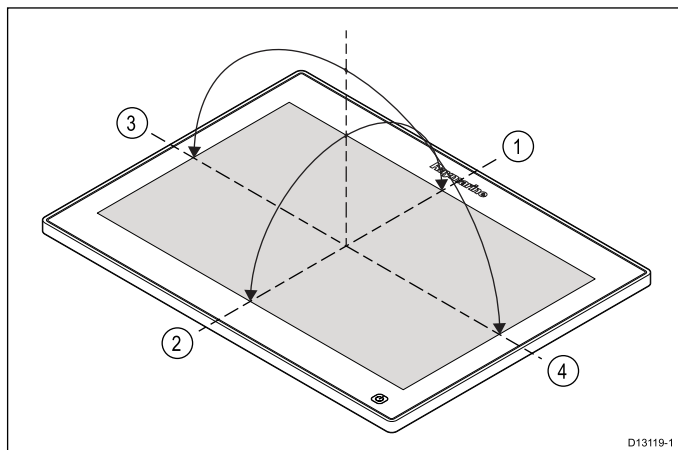

1. Top
2. Bottom
3. Left
4. Right

LCDs can be orientated in 2 directions:

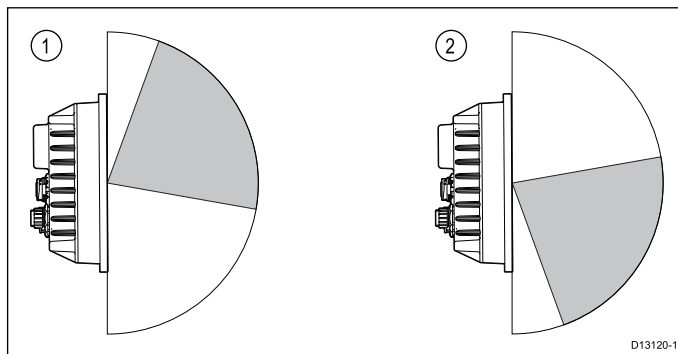


1. **12 O'clock** — Standard orientation (In the 12 O'clock orientation the LCD is better viewed from top to bottom than it is from bottom to top.)
2. **6 O'clock** — Inverted orientation (In the 6 O'clock orientation the LCD is better viewed from bottom to top than it is from top to bottom.)

The table below details the LCD orientation for each gS Series MFD.

| MFD            | LCD orientation | MFD                | LCD orientation |
|----------------|-----------------|--------------------|-----------------|
| gS95 (E70124)  | 12 O'clock      | gS95 INV (E70183)  | 6 O'clock       |
| gS125 (E70125) | 12 O'clock      | gS125 INV (E70184) | 6 O'clock       |


| MFD               | LCD orientation | MFD                   | LCD orientation |
|-------------------|-----------------|-----------------------|-----------------|
| gS165<br>(E70126) | 12 O'clock      | gS165 INV<br>(E70185) | 6 O'clock       |
|                   |                 | gS195<br>(E70213)     | 6 O'clock       |

### Product dimensions

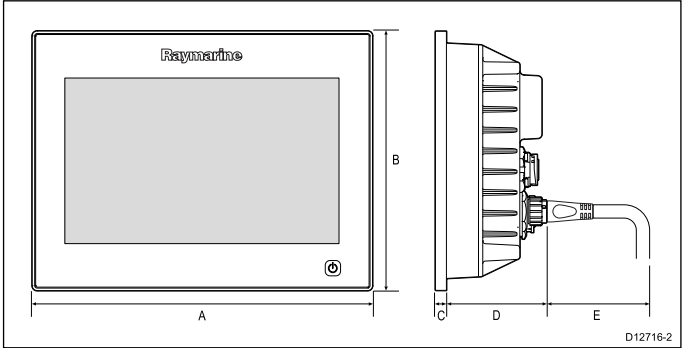

|   | gS95                 | gS125                 | gS165                 | gS195                 |
|---|----------------------|-----------------------|-----------------------|-----------------------|
| A | 246.8 mm<br>(9.7 in) | 311.8 mm<br>(12.3 in) | 383.2 mm<br>(15 in)   | 433.9 mm<br>(17.1 in) |
| B | 188.2 mm<br>(7.4 in) | 237.1 mm<br>(9.3 in)  | 284.7 mm<br>(11.2 in) | 391.2 mm<br>(15.4 in) |
| C | 8 mm<br>(0.31 in)    | 8 mm<br>(0.31 in)     | 8 mm<br>(0.31 in)     | 8 mm<br>(0.31 in)     |
| D | 69 mm<br>(2.72 in)   | 70 mm<br>(2.75 in)    | 69 mm<br>(2.72 in)    | 75.9 mm<br>(3 in)     |
| E | 114.1 mm<br>(7.8 in) | 114.1 mm<br>(7.8 in)  | 114.1 mm<br>(7.8 in)  | 114.1 mm<br>(7.8 in)  |

### Card reader dimensions

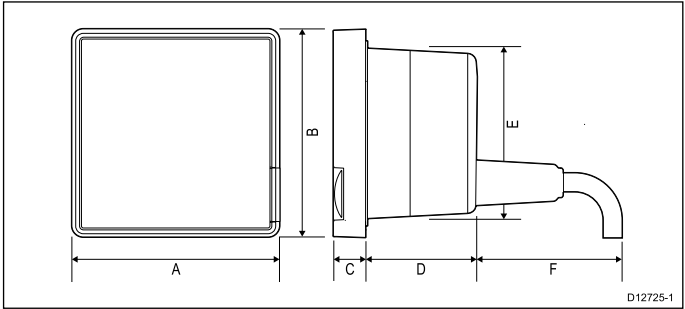

|   |                  |
|---|------------------|
| A | 55 mm (2.17 in)  |
| B | 55 mm (2.17 in)  |
| C | 8.5 mm (0.33 in) |
| D | 36 mm (1.4 in)   |
| E | 39.2 mm (1.5 in) |
| F | 90 mm (3.5 in)   |



# Chapter 4: Cables and connections

## Chapter contents

- [4.1 General cabling guidance on page 34](#)
- [4.2 gS95 / gS125 / gS165 Connections overview on page 35](#)
- [4.3 gS195 connections overview on page 35](#)
- [4.4 Power and data \(combined\) connection on page 36](#)
- [4.5 Power over Ethernet \(PoE\) on page 38](#)
- [4.6 Card reader connection on page 38](#)
- [4.7 Auxiliary alarm connection on page 39](#)
- [4.8 \*\*SeaTalk\*\*<sup>ng</sup>® connections on page 39](#)
- [4.9 NMEA 2000 connection on page 40](#)
- [4.10 \*\*SeaTalk\*\* connection on page 41](#)
- [4.11 NMEA 0183 connection — Power/NMEA/Video cable on page 41](#)
- [4.12 Gigabit networking on page 42](#)
- [4.13 Sonar module connection on page 43](#)
- [4.14 Radar network connection on page 44](#)
- [4.15 GNSS / GPS connection on page 46](#)
- [4.16 AIS connection on page 47](#)
- [4.17 Fastheading connection on page 47](#)
- [4.18 Keypad network connection on page 48](#)
- [4.19 Weather receiver connection on page 48](#)
- [4.20 Video connection — composite on page 49](#)
- [4.21 Camera \(Video/Alarm\) connection on page 49](#)
- [4.22 HDMI video output on page 50](#)
- [4.23 IP Camera connection on page 50](#)
- [4.24 HD-SDI connection \(gS195\) on page 51](#)
- [4.25 Thermal camera connection on page 52](#)
- [4.26 Fusion network connection on page 54](#)
- [4.27 Fusion \*\*NMEA 2000\*\* connection on page 54](#)
- [4.28 Media player connection on page 55](#)
- [4.29 Raymarine mobile app connection on page 55](#)
- [4.30 Bluetooth remote control connection on page 56](#)

4.1 General cabling guidance

Suppression ferrites

- Raymarine cables may be pre-fitted or supplied with suppression ferrites. These are important for correct EMC performance. If ferrites are supplied separately to the cables (i.e. not pre-fitted), you must fit the supplied ferrites, using the supplied instructions.
- If a ferrite has to be removed for any purpose (e.g. installation or maintenance), it must be replaced in the original position before the product is used.
- Use only ferrites of the correct type, supplied by Raymarine or its authorized dealers.
- Where an installation requires multiple ferrites to be added to a cable, additional cable clips should be used to prevent stress on the connectors due to the extra weight of the cable.

Connections to other equipment

Requirement for ferrites on non-Raymarine cables  
If your Raymarine equipment is to be connected to other equipment using a cable not supplied by Raymarine, a suppression ferrite **MUST** always be attached to the cable near the Raymarine unit.

Cable types and length


It is important to use cables of the appropriate type and length

- Unless otherwise stated use only standard cables of the correct type, supplied by Raymarine.
- Ensure that any non-Raymarine cables are of the correct quality and gauge. For example, longer power cable runs may require larger wire gauges to minimize voltage drop along the run.

Routing cables

Cables must be routed correctly, to maximize performance and prolong cable life.

- Do NOT bend cables excessively. Wherever possible, ensure a minimum bend diameter of 200 mm (8 in) / minimum bend radius of 100 mm (4 in).

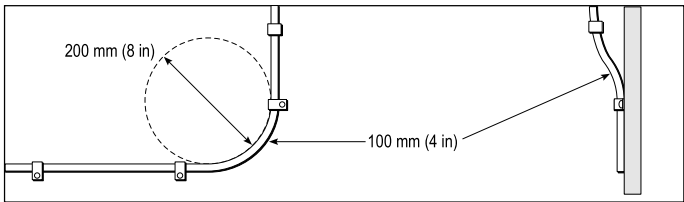

- Protect all cables from physical damage and exposure to heat. Use trunking or conduit where possible. Do NOT run cables through bilges or doorways, or close to moving or hot objects.
- Secure cables in place using tie-wraps or lacing twine. Coil any extra cable and tie it out of the way.
- Where a cable passes through an exposed bulkhead or deckhead, use a suitable watertight feed-through.
- Do NOT run cables near to engines or fluorescent lights.

Always route data cables as far away as possible from:

- other equipment and cables,
- high current carrying ac and dc power lines,
- antennae.

Strain relief

Ensure adequate strain relief is provided. Protect connectors from strain and ensure they will not pull out under extreme sea conditions.

Circuit isolation

Appropriate circuit isolation is required for installations using both AC and DC current:

 
 
- Always use isolating transformers or a separate power-inverter to run PC's, processors, displays and other sensitive electronic instruments or devices.
- Always use an isolating transformer with Weather FAX audio cables.
- Always use an isolated power supply when using a 3rd party audio amplifier.
- Always use an RS232/NMEA converter with optical isolation on the signal lines.
- Always make sure that PC's or other sensitive electronic devices have a dedicated power circuit.

Cable shielding

Ensure that all data cables are properly shielded that the cable shielding is intact (e.g. hasn't been scraped off by being squeezed through a tight area).


Network cable connector types

There are 2 types of network cable connector — SeaTalk<sup>hs</sup> and RayNet.

|                                                                                     |                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>SeaTalk<sup>hs</sup> connector</b> — used for connecting SeaTalk <sup>hs</sup> devices to a Raymarine network switch via SeaTalk <sup>hs</sup> cables.                                                                                                                             |
|  | <b>RayNet connector</b> — used for connecting Raymarine network switches and SeaTalk <sup>hs</sup> devices to the multifunction display via RayNet cables. Also required for connecting a crossover coupler if only one device is being connected to the display's Network connector. |

## 4.2 gS95 / gS125 / gS165 Connections overview


Details of the connections available on the multifunction display are shown below.

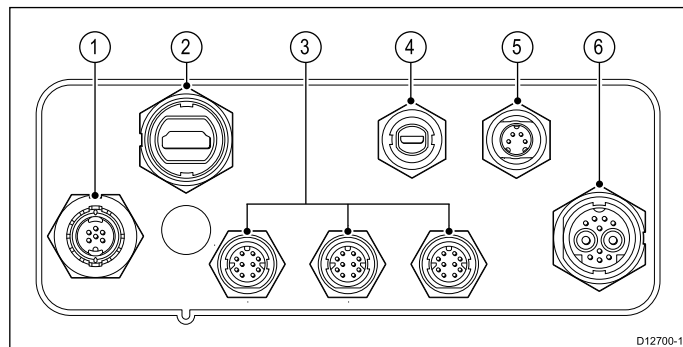

|   |                                        |
|---|----------------------------------------|
| 1 | SeaTalk <sup>ng</sup>                  |
| 2 | HDMI                                   |
| 3 | 3 x PoE / RayNet SeaTalk <sup>hs</sup> |
| 4 | Card reader                            |
| 5 | Video in / Alarm Out                   |
| 6 | Power / NMEA 0183 / Video in           |

## 4.3 gS195 connections overview

Details of the connections available on the gS195 are shown below.

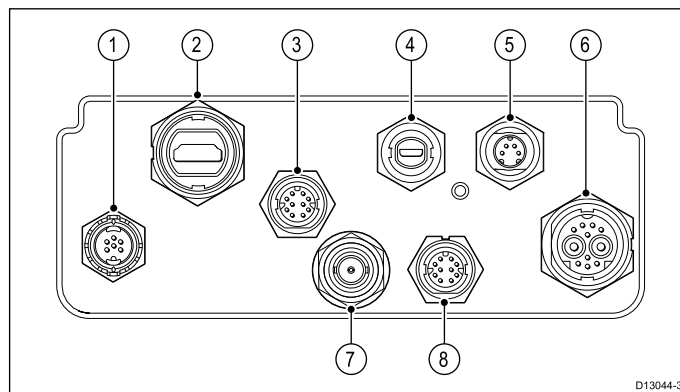

|   |                                               |
|---|-----------------------------------------------|
| 1 | SeaTalk <sup>ng</sup> connection              |
| 2 | HDMI Output                                   |
| 3 | PoE / RayNet SeaTalk <sup>hs</sup> connection |
| 4 | Card reader connection                        |
| 5 | Analogue video Input / Alarm Output           |
| 6 | Power / NMEA 0183 / Analogue video Input      |
| 7 | HD-SDI Video Input                            |
| 8 | PoE / RayNet SeaTalk <sup>hs</sup> connection |

### Connector and cable protective caps

Unused connectors and disconnected cables should be adequately protected against damage.

#### Important:


The rear connectors on your product are fitted with protective caps which should be securely fitted over any connectors that are not going to be used / connected.

If any cables are to be left disconnected then, if available use the cables protective cap or insulation tape to protect the cable connector.

4.4 Power and data (combined) connection

The details below apply to **MFDs** that have a combined power/NMEA/video cable.

Refer to the *Connections Overview* section to establish the power connection for your **MFD**.

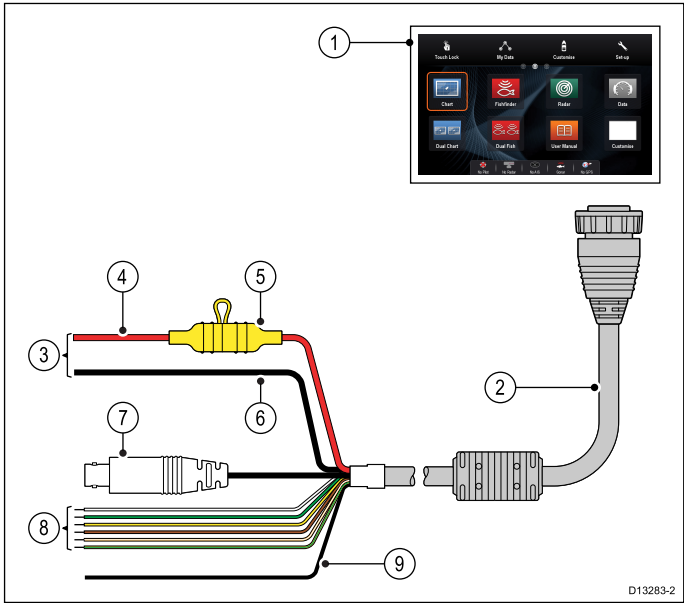

1. **MFD**
2. Combined Power and data cable
3. Connection to vessel's 12 V / 24 V dc power supply
4. Red cable (positive)
5. Fuse
6. Black cable (negative)
7. Video input cable
8. NMEA 0183 data cables
9. Ground (drain) wire

In-line fuse and thermal breaker ratings

The following in-line fuse and thermal breaker ratings apply to your product:

| In-line fuse rating | Thermal breaker rating               |
|---------------------|--------------------------------------|
| 15 A                | 15 A (if only connecting one device) |

**Note:**

- The suitable fuse rating for the thermal breaker is dependent on the number of devices you are connecting. If in doubt consult an authorized Raymarine dealer.
- Your product's power cable may have fitted in-line fuse, if not then you can add an in-line fuse to the positive wire of your products power connection.

Power distribution

Recommendations and best practice.

- The product is supplied with a power cable. Only use the power cable supplied with the product. Do

NOT use a power cable designed for, or supplied with, a different product.


- Refer to the *Power connection* section for more information on how to identify the wires in your product's power cable, and where to connect them.
- See below for more information on implementation for some common power distribution scenarios.

**Important:** When planning and wiring, take into consideration other products in your system, some of which (e.g. sonar modules) may place large power demand peaks on the vessel's electrical system.

**Note:** The information provided below is for guidance only, to help protect your product. It covers common vessel power arrangements, but does NOT cover every scenario. If you are unsure how to provide the correct level of protection, please consult an authorized Raymarine dealer or a suitably qualified professional marine electrician.


Implementation — direct connection to battery

- The power cable supplied with your product may be connected directly to the vessel's battery, via a suitably rated fuse or breaker.
- The power cable supplied with your product may NOT include a separate drain wire. If this is the case, only the power cable's red and black wires need to be connected.
- If the supplied power cable is NOT fitted with an inline fuse, you **MUST** fit a suitably rated fuse or breaker between the red wire and the battery's positive terminal.
- Refer to the inline fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable supplied with your product, ensure you observe the dedicated *Power cable extensions* advice provided in the product's documentation.

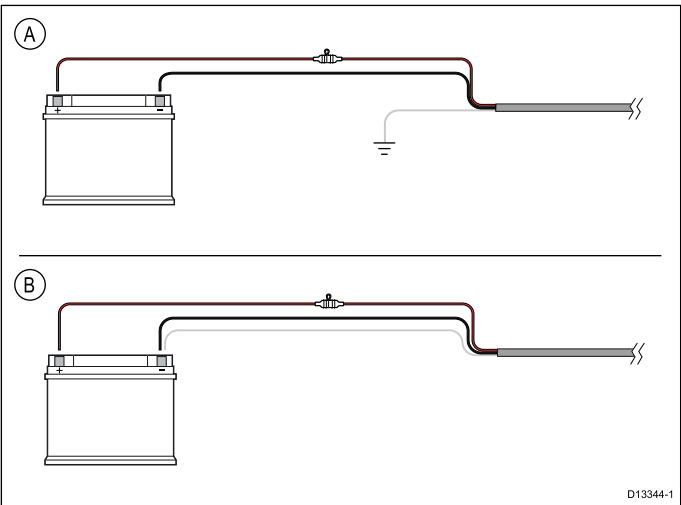

|   |                                                                                                                                                                                                                                                    |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A | Battery connection scenario A: suitable for a vessel with a common RF ground point. In this scenario, if your product's power cable is supplied with a separate drain wire then it should be connected to the vessel's common ground point.        |
| B | Battery connection scenario B: suitable for a vessel without a common grounding point. In this case, if your product's power cable is supplied with a separate drain wire then it should be connected directly to the battery's negative terminal. |

## Implementation — connection to distribution panel

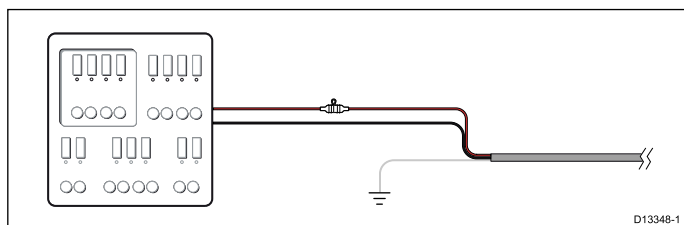

- Alternatively, the supplied power cable may be connected to a suitable breaker or switch on the vessel's distribution panel or factory-fitted power distribution point.
- The distribution point should be fed from the vessel's primary power source by 8 AWG (8.36 mm<sup>2</sup>) cable.
- Ideally, all equipment should be wired to individual suitably-rated thermal breakers or fuses, with appropriate circuit protection. Where this is not possible and more than 1 item of equipment shares a breaker, use individual in-line fuses for each power circuit to provide the necessary protection.
- In all cases, observe the recommended breaker / fuse ratings provided in the product's documentation.
- If you need to extend the length of the power cable supplied with your product, ensure you observe the dedicated *Power cable extensions* advice provided in the product's documentation.

**Important:** Be aware that the suitable fuse rating for the thermal breaker or fuse is dependent on the number of devices you are connecting.

## Grounding

Ensure that you observe the separate grounding advice provided in the product's documentation.

## More information

Raymarine recommends that best practice is observed in all vessel electrical installations, as detailed in the following standards:

- BMEA Code of Practice for Electrical and Electronic Installations in Boats
- NMEA 0400 Installation Standard
- ABYC E-11 AC & DC Electrical Systems on Boats
- ABYC A-31 Battery chargers and Inverters

- ABYC TE-4 Lightning Protection

## Power cable extension

The product is supplied with a power cable, which can be extended if required.

- The power cable for each unit in your system should be run as a separate, single length of 2-wire cable from the unit to the vessel's battery or distribution panel.
- Raymarine recommends a **minimum** wire gauge of 18AWG (0.82 mm<sup>2</sup>) for any length of cable extension.
- For all lengths of extension to the power cable, ensure there is a continuous **minimum** voltage at the product's power connector of 10.8 V with a fully flat battery at 11 V.

**Important:** Be aware that some products in your system (such as sonar modules) can create voltage peaks at certain times, which may impact the voltage available to other products during the peaks.

## Grounding — Dedicated drain wire

The power cable supplied with this product includes a dedicated shield (drain) wire for connection to a vessel's RF ground point.

It is important that an effective RF ground is connected to the system. A single ground point should be used for all equipment. The unit can be grounded by connecting the shield (drain) wire of the power cable to the vessel's RF ground point. On vessels without an RF ground system the shield (drain) wire should be connected directly to the negative battery terminal.

The dc power system should be either:

- Negative grounded, with the negative battery terminal connected to the vessel's ground.
- Floating, with neither battery terminal connected to the vessel's ground



### Warning: Product grounding

Before applying power to this product, ensure it has been correctly grounded, in accordance with the instructions provided.



### Warning: Positive ground systems

Do not connect this unit to a system which has positive grounding.

## 4.5 Power over Ethernet (PoE)

This product can supply Power over Ethernet (PoE) to class 1, 2 and 3 devices. The product can output a maximum of 20 Watts for consumption by PoE devices.

The PoE class denotes the power range of the PoE device.

| PoE Class | Power range       | Class description |
|-----------|-------------------|-------------------|
| Class 1   | 0.44 W to 3.84 W  | Very low power    |
| Class 2   | 3.84 W to 6.49 W  | Low power         |
| Class 3   | 6.49 W to 12.95 W | Mid power         |
| Class 0   | 0.44 W to 12.95 W | -                 |

**Note:** The product will not provide power to class 4 devices.

The product can power up to 3 devices using the available network / PoE ports as long as the combined max power of the PoE devices does not exceed 20 watts.

When a PoE device is connected it is interrogated to establish if the device is PoE and if so what class of device it is. The max power for that class of device is then assigned to that port (e.g. class 2 = 6.49 W) and deducted from the remaining power output.

The table below shows acceptable configurations of PoE devices.

| Class 1 (3.84 W) | Class 2 (6.49 W) | Class 3 / Class 0 (12.95 W) | Total power used |
|------------------|------------------|-----------------------------|------------------|
| 1                |                  |                             | 3.84 W           |
| 2                |                  |                             | 7.68 W           |
| 3                |                  |                             | 11.52 W          |
|                  | 1                |                             | 6.49 W           |
|                  | 2                |                             | 12.98 W          |
|                  | 3                |                             | 19.47 W          |
| 1                | 1                |                             | 10.33 W          |
| 2                | 1                |                             | 14.17 W          |
| 1                | 2                |                             | 16.82 W          |
|                  |                  | 1                           | 12.95 W          |
| 1                |                  | 1                           | 16.79 W          |
|                  | 1                | 1                           | 19.44 W          |


**Note:** A class 0 device shall be assigned the same power allocation as a class 3 device.

**Note:** If a PoE device is connected that will take the total assigned power over 20 W the device will not be powered.

## 4.6 Card reader connection

The card reader must be connected directly to the dedicated card reader connector on the rear of the display.

**Note:** Do not use cable extensions when connecting the card reader to the display.

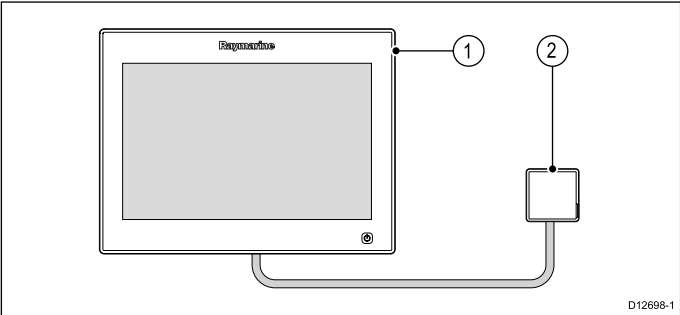


- Multifunction display.
- Card reader.

**Note:** The card reader must be connected directly to the display.

## 4.7 Auxiliary alarm connection

The auxiliary alarm can be connected to the Video In / Alarm out connector of the multifunction display.

Refer to the *Connections overview* section to establish if your MFD has an Alarm out connection.

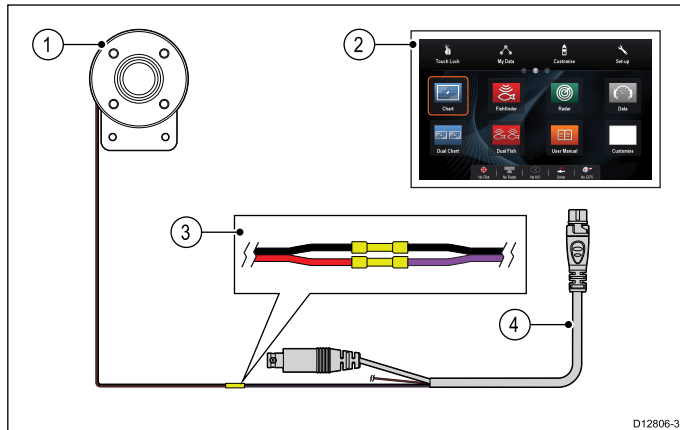

1. Auxiliary alarm
2. MFD
3. Connection — Wires should be connected **Black to Black** and **Red to Purple**
4. Video In / Alarm out cable

The auxiliary alarm to cable connection should be made using suitable connectors (e.g. crimps). To prevent damage due to water ingress ensure the connection is watertight.


## 4.8 SeaTalk<sup>ng</sup>® connections

The **MFD** can connect to a **SeaTalk<sup>ng</sup>®** backbone.

**SeaTalk<sup>ng</sup>®** can be used to communicate with:

- **SeaTalk<sup>ng</sup>®** instruments
- SeaTalk**SeaTalk<sup>ng</sup>®** autopilots
- **SeaTalk** equipment via the optional **SeaTalk** to **SeaTalk<sup>ng</sup>®** converter
- **NMEA 2000** equipment via optional **DeviceNet** adaptor cables

### Typical SeaTalk<sup>ng</sup>® system

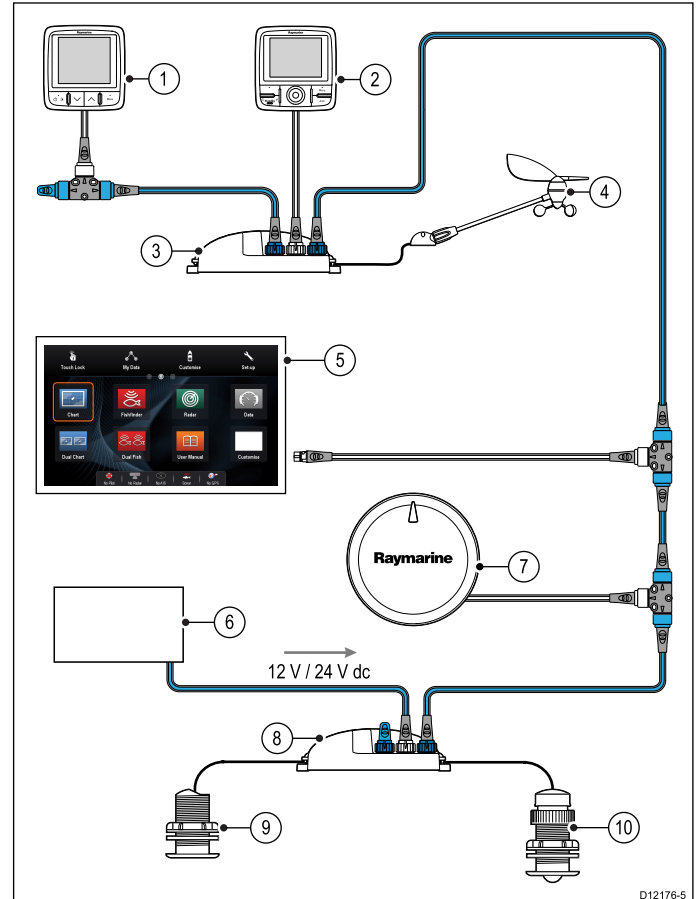

1. **SeaTalk<sup>ng</sup>®** instrument
2. **SeaTalk<sup>ng</sup>®** pilot control head
3. iTC-5 converter
4. Wind transducer
5. **MFD**
6. Power supply
7. **SeaTalk<sup>ng</sup>®** autopilot
8. iTC-5 converter
9. Depth transducer
10. Speed transducer

For details of SeaTalk<sup>ng</sup> cabling please refer to [Chapter 10 Spares and accessories](#).

### SeaTalk<sup>ng</sup> power requirements

The SeaTalk<sup>ng</sup> bus requires a 12 V power supply.

Power may be provided from:

- Raymarine equipment with a regulated 12 V power supply (for example, a SmartPilot SPX course computer); or:

- Other suitable 12 V power supply.

**Note:** SeaTalk<sup>ng</sup> does NOT supply power to multifunction displays and other equipment with a dedicated power supply input.

## 4.9 NMEA 2000 connection


The display can receive data from **NMEA 2000** devices (e.g. data from compatible engines). The **NMEA 2000** connection is made using **SeaTalk<sup>ng</sup>**® and appropriate adaptor cables.

You can EITHER:

- Use your **SeaTalk<sup>ng</sup>**® backbone and connect each **NMEA 2000** device on a spur, OR
- connect the display on a spur into an existing **NMEA 2000** backbone.


**Important:** You cannot have 2 backbones connected together.

### Connecting NMEA 2000 equipment to the SeaTalk<sup>ng</sup>® backbone

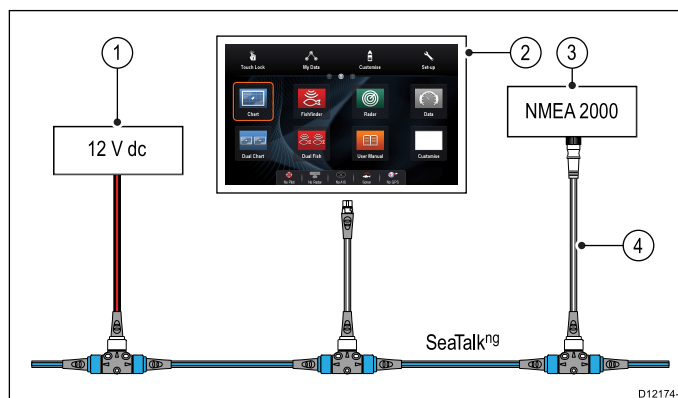

1. 12 V supply into backbone
2. **MFD**
3. **NMEA 2000** device
4. **SeaTalk<sup>ng</sup>**® to **DeviceNet** adaptor cable

### Connecting the display to an existing NMEA 2000 (DeviceNet) backbone

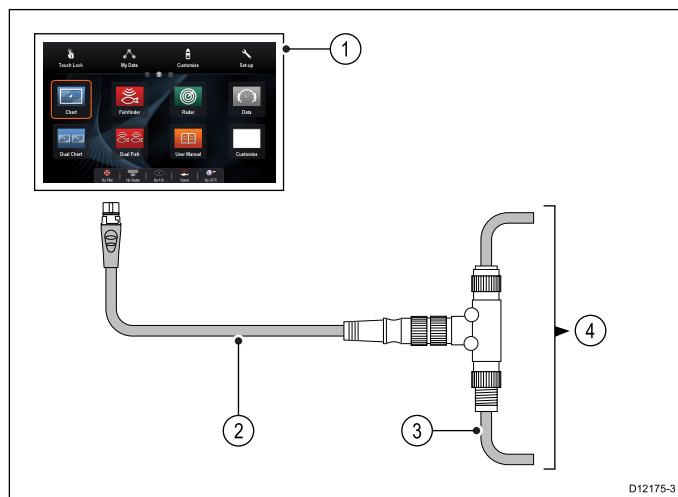


1. **MFD**
2. **SeaTalk<sup>ng</sup>**® to **DeviceNet** adaptor cable
3. DeviceNet backbone
4. **NMEA 2000** equipment



4.10 SeaTalk connection

You can connect **SeaTalk** devices to your MFD using the optional **SeaTalk to SeaTalk<sup>ng</sup>** converter.

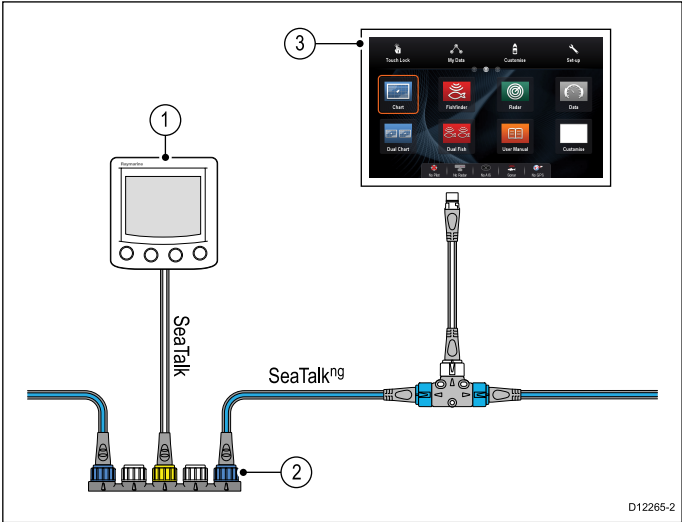


- 1. **SeaTalk** device
- 2. **SeaTalk to SeaTalk<sup>ng</sup>** converter
- 3. **MFD**

4.11 NMEA 0183 connection — Power/NMEA/Video cable

**NMEA 0183** devices can be connected directly to **MFDs** with a combined Power/NMEA/Video cable.

Refer to the *Connection Overview* section to establish the **NMEA 0183** connection method for your **MFD**.

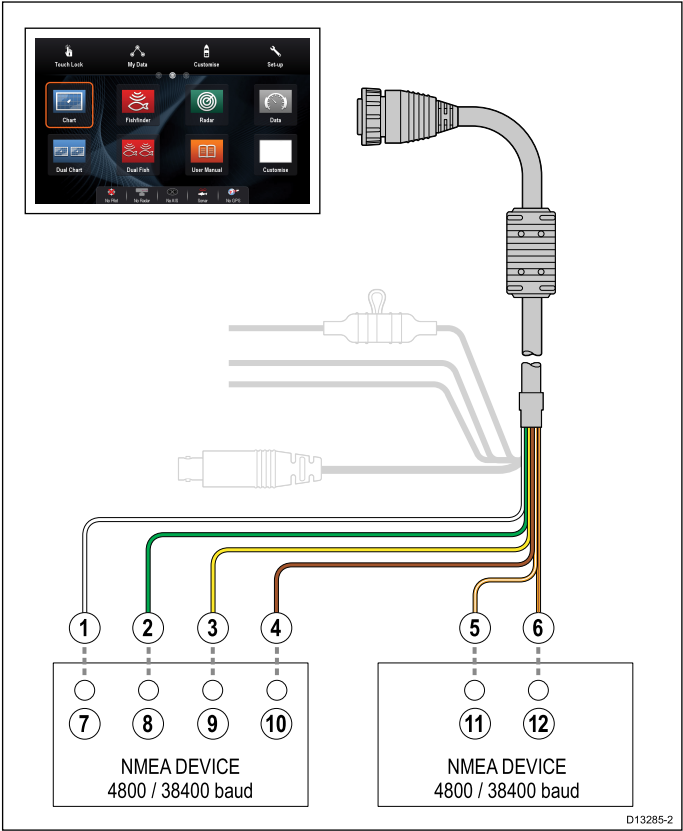

2 **NMEA 0183** ports are available:

- **Port 1:** Input and output, 4800 or 38400 baud rate.
- **Port 2:** Input only, 4800 or 38400 baud rate.

The baud rate for each input port must be specified in the **System Settings** menu (**Homescreen > Set-up > System Settings > NMEA Set-up > NMEA Input Port**).

**Note:** For Port 1, both the input and output communicate at the same baud rate. For example, if you have one **NMEA 0183** device connected to Port 1 INPUT, and another **NMEA 0183** device connected to Port 1 OUTPUT, both NMEA devices must use the same baud rate.

You can connect up to 4 devices to the display's output port and 2 devices to the display's input ports.

| Item | Device                | Cable color | Port | Input / output | Positive (+) / negative (-) |
|------|-----------------------|-------------|------|----------------|-----------------------------|
| 1    | Multifunction display | White       | 1    | Input          | Positive                    |
| 2    |                       | Green       | 1    | Input          | Negative                    |
| 3    |                       | Yellow      | 1    | Output         | Positive                    |
| 4    |                       | Brown       | 1    | Output         | Negative                    |

| Item | Device      | Cable color    | Port | Input / output | Positive (+) / negative (-) |
|------|-------------|----------------|------|----------------|-----------------------------|
| 5    |             | Orange / white | 2    | Input          | Positive                    |
| 6    |             | Orange / green | 2    | Input          | Negative                    |
| 7    | NMEA device | *              | *    | Output         | Positive                    |
| 8    |             | *              | *    | Output         | Negative                    |
| 9    |             | *              | *    | Input          | Positive                    |
| 10   |             | *              | *    | Input          | Negative                    |
| 11   | NMEA device | *              | *    | Output         | Positive                    |
| 12   |             | *              | *    | Output         | Negative                    |

**Note:** \* Refer to instructions provided with the **NMEA 0183** device.

### NMEA 0183 cable


You can extend the NMEA 0183 wires within the supplied power and data cable.

### Data cable extension

| Total length (max) | Cable                                                                                                                                                                        |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Up to 5 m          | <p>High quality data cable:</p> <ul style="list-style-type: none"> <li>• 2 x twisted pair with overall shield.</li> <li>• 50 to 75 pF/m capacitance core to core.</li> </ul> |

## 4.12 Gigabit networking

It is recommended that **MFDs** with gigabit (1000 Mbits/s) network ports are daisy-chained together. One of the **MFDs** should then be connected to the network using the Gigabit port of a **RayNet** network switch. This will ensure that the **MFDs** fully utilize the available bandwidth.

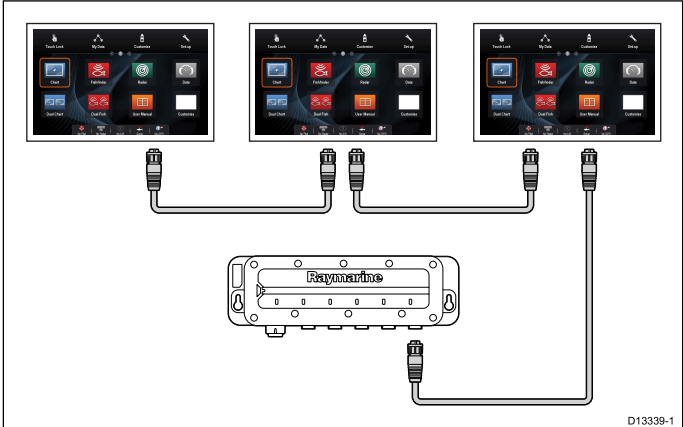

Please refer to your product's *Technical specification* to establish the speed of your **MFDs** network ports.

## 4.13 Sonar module connection

External sonar modules can be connected directly to the display's network connection or can be connected to the **SeaTalk<sup>hs</sup>** network, via a **Raymarine®** network switch.

2 connections are required:


- **Network connection** — transmits the sonar data to a compatible **Raymarine® MFD**.
- **Transducer connection** — Internal and external sonar modules require connection to a compatible transducer. Internal 600 W and internal **CHIRP DownVision™** sonar variant displays feature a built-in module, enabling a compatible transducer to be connected directly to the display.

This does NOT apply to any systems that do NOT include a CP300 or CP450C sonar module.

**Note:** For software downloads and instructions on how to update the software for your product(s), visit [www.raymarine.com/software](http://www.raymarine.com/software).

### Network connection

Multiple sonar modules can be connected to the same network.

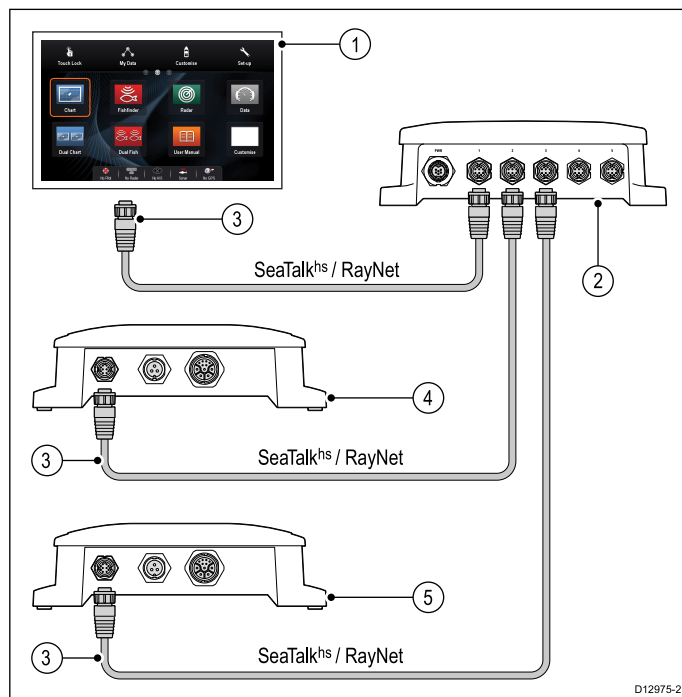

1. **MFD**
2. **Raymarine®** network switch
3. **RayNet** network cables
4. Sonar module 1 (e.g. **CHIRP** sonar module)
5. Sonar module 2 (e.g. **CHIRP DownVision™** sonar module)

### Important software requirements for multiple sonar systems

If your system includes more than one source of sonar data you must ensure that any CP300 or CP450C sonar modules are running software version **v4.04** or later.


This applies to systems which include:

- Any number of MFD(s) with an internal sonar module plus a CP300 and / or CP450C sonar module; or
- No MFD(s) with an internal sonar module, but more than one CP300 or CP450C sonar module.

## 4.14 Radar network connection


Radar units are connected to the **SeaTalk<sup>hs</sup>** network, usually via a **Raymarine®** network switch. On smaller systems the Radar may be connected directly to the display's network connection.

### Radar connected via network switch

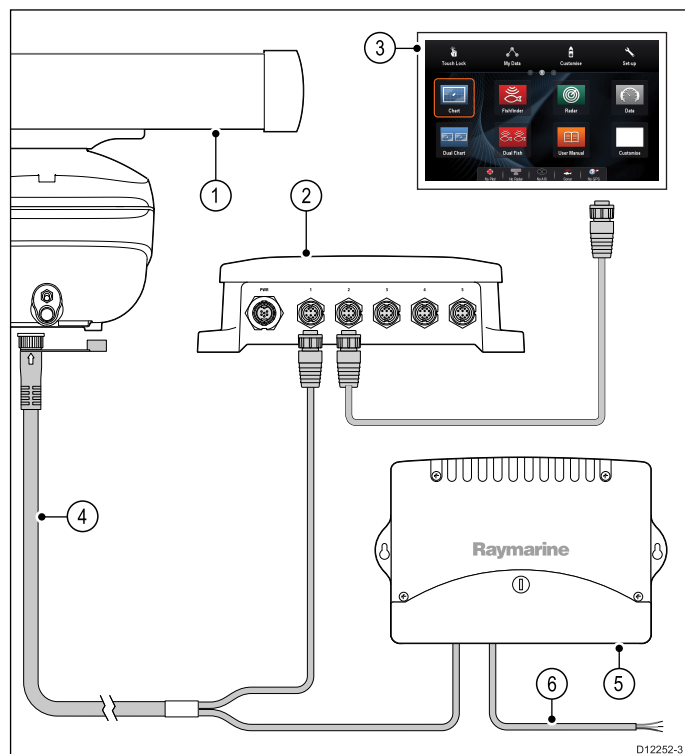

1. Radar scanner
2. **Raymarine®** network switch
3. **MFD**
4. **RayNet** Radar cable
5. VCM (Voltage Converter Module) — (required for Open Arrays)
6. Power connection

### Radar connected directly to the display

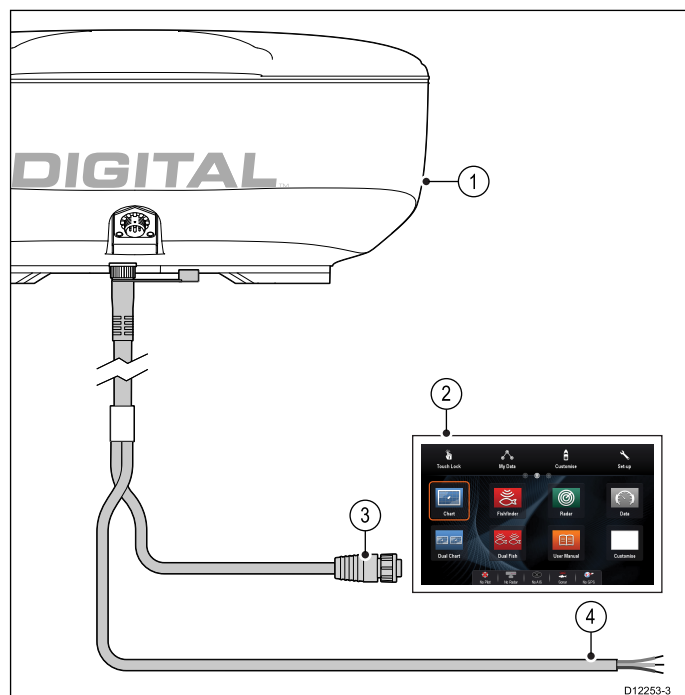


1. Radar scanner

2. **MFD**
3. Network connection to **MFD** (**RayNet** Radar cable)
4. Power connection

**Note:** Open array scanners require a VCM.

### RJ45 SeaTalk<sup>hs</sup> Radar cable connection


To connect a Radar using an RJ45 SeaTalk<sup>hs</sup> Radar cable additional accessories are required.

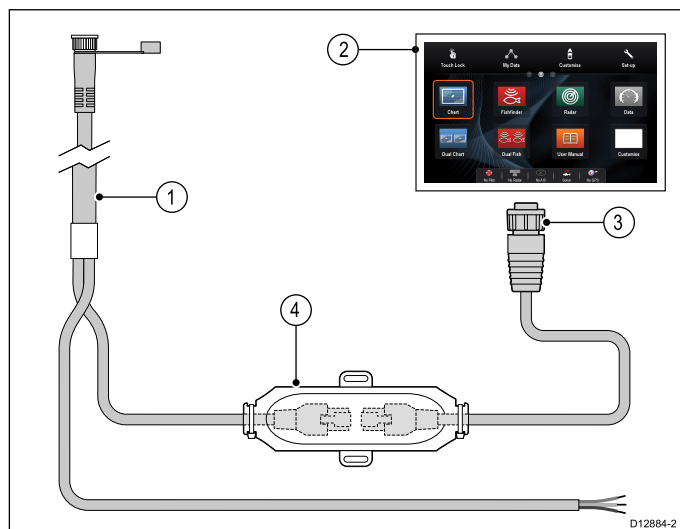

1. RJ45 **SeaTalk<sup>hs</sup>** Radar cable
2. **MFD**
3. Network connection to **MFD** (**RayNet** to RJ45 **SeaTalk<sup>hs</sup>** adaptor cable)
4. **SeaTalk<sup>hs</sup>** crossover coupler

Radar cable extension

For longer cable runs a Radar power and data digital cable extension is required.

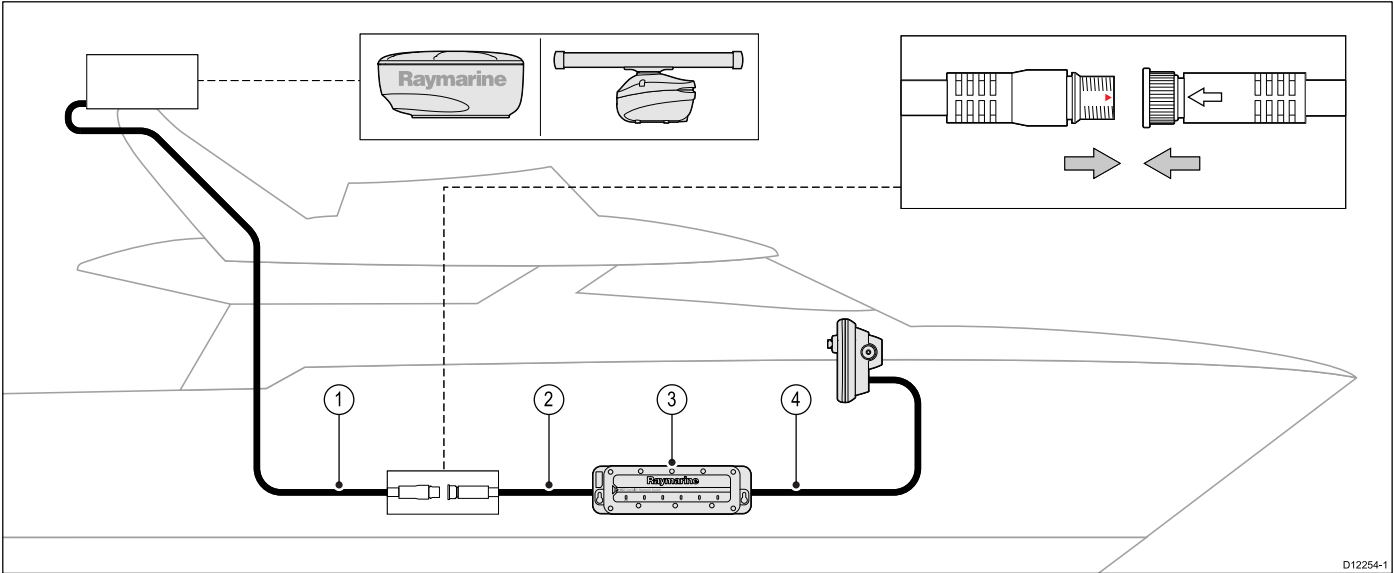

- 1. Radar extension cable.
- 2. Radar power and data digital cable.
- 3. **Raymarine®** network switch (or crossover coupler if connecting Radar directly to display).
- 4. **RayNet** cable (or **RayNet** to **SeaTalk<sup>hs</sup>** cable, if connecting via a crossover coupler)

**Note:** The power connection is NOT shown in the diagram. If using an Open Array scanner a VCM (Voltage Converter Module) must be connected between the scanner and the power supply.

For further information regarding Radar installation (including power connections and mounting), refer to the installation instructions supplied with the Radar.

Digital radar cables

You will need a dedicated radar power and data digital cable and appropriate network cables to connect your scanner to your system.

| Connection                                                  | Required cable                                                                                         |
|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
| Radar scanner to power supply and Raymarine network switch. | Power and data digital cable. For longer cable runs, extensions are available in a variety of lengths. |
| Raymarine network switch to multifunction display.          | Network cables, available in a variety of cable lengths.                                               |

SeaTalk<sup>hs</sup> Radar power and data digital cables

These cables contain the wires for a scanner's power and data connections.

| Cable                                                                  | Part number |
|------------------------------------------------------------------------|-------------|
| RJ45 SeaTalk <sup>hs</sup> 5 m (16.4 ft) Power and data digital cable  | A55076D     |
| RJ45 SeaTalk <sup>hs</sup> 10 m (32.8 ft) Power and data digital cable | A55077D     |
| RJ45 SeaTalk <sup>hs</sup> 15 m (49.2 ft) Power and data digital cable | A55078D     |
| RJ45 SeaTalk <sup>hs</sup> 25 m (82.0 ft) Power and data digital cable | A55079D     |

**Note:** The maximum length for the radar power and data digital cable (including any extensions) is 25 m (82 ft).

RayNet Radar power and data digital cables

These cables contain the wires for a scanner's power and data connections.

| Cable                                              | Part number |
|----------------------------------------------------|-------------|
| RayNet 5 m (16.4 ft) Power and data digital cable  | A80227      |
| RayNet 10 m (32.8 ft) Power and data digital cable | A80228      |
| RayNet 15 m (49.2 ft) Power and data digital cable | A80229      |
| RayNet 25 m (82.0 ft) Power and data digital cable | A80230      |

**Note:** The maximum length for the radar power and data digital cable (including any extensions) is 25 m (82 ft).

**Radar power and data digital extension cables**

These cables extend the power and data digital cables for a scanner's power and data connections.


| Cable                                       | Part number |
|---------------------------------------------|-------------|
| 2.5 m (8.2 ft) Power and data digital cable | A92141D     |
| 5 m (16.4 ft) Power and data digital cable  | A55080D     |
| 10 m (32.8 ft) Power and data digital cable | A55081D     |

**Note:** The maximum length for the radar power and data digital cable (including any extensions) is 25 m (82 ft).

**4.15 GNSS / GPS connection**

Depending on display variant, your multifunction display may include an internal GNSS or GPS receiver. If required the multifunction display can also be connected to an external GNSS / GPS receiver, using **SeaTalk<sup>ng</sup>** or **NMEA 0183**.

**GNSS / GPS connection — SeaTalk<sup>ng</sup>**

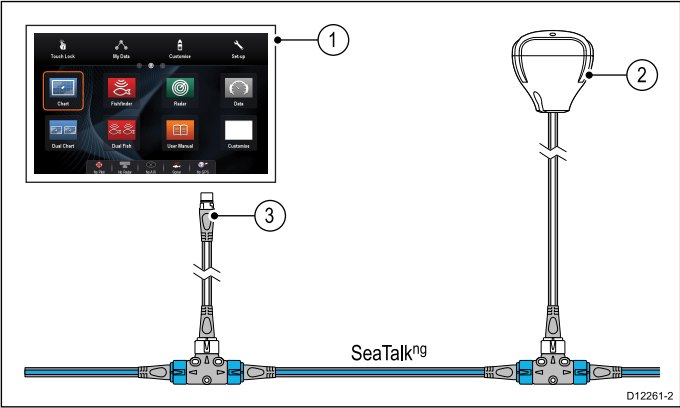


- 1. **MFD**
- 2. **SeaTalk<sup>ng</sup>** connection to **MFD**.
- 3. **SeaTalk<sup>ng</sup>** GNSS / GPS receiver.

An **NMEA 0183** GNSS / GPS receiver can be connected to the **MFD** by following the details provided in section [4.11 NMEA 0183 connection — Power/NMEA/Video cable](#) and the installation instructions provided with the unit.

## 4.16 AIS connection

A compatible AIS unit can be connected using **SeaTalk<sup>ng</sup>**® or **NMEA 0183**.

### Connection using SeaTalk<sup>ng</sup>®

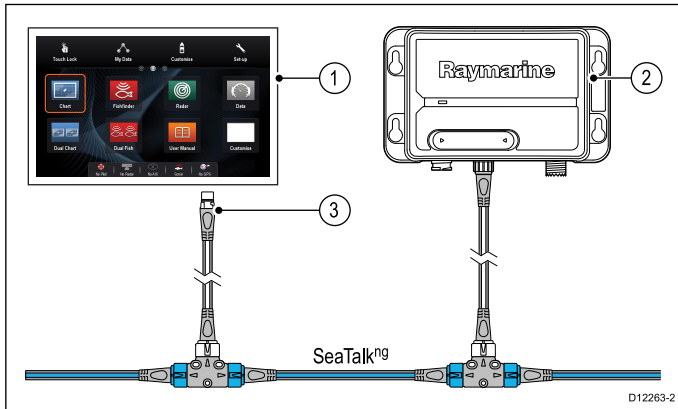

1. **MFD**
2. **SeaTalk<sup>ng</sup>**® connection to **MFD**.
3. **SeaTalk<sup>ng</sup>**® AIS receiver / transceiver.

An AIS unit can be connected to the **MFD** by following the details provided in section [4.11 NMEA 0183 connection — Power/NMEA/Video cable](#) and the installation instructions provided with the unit.

## 4.17 Fastheading connection

If you wish to use MARPA (radar target acquisition) functions on your multifunction display you need either:


- An autopilot connected to the multifunction display via SeaTalk<sup>ng</sup> or NMEA 0183. The compass is connected to the course computer and calibrated via the pilot control head; or:
- A Raymarine or third-party fastheading sensor connected to the multifunction display via NMEA 0183.

**Note:** Please contact your dealer or Raymarine technical support for more information.

## 4.18 Keypad network connection

**Raymarine®** remote keypads (e.g. the **RMK-9**) can be connected directly to the display's network connection or can be connected to the **SeaTalk<sup>hs</sup>** network, via a **Raymarine®** network switch.

Multiple keypads can be connected to a system, with each keypad capable of controlling up to 4 **MFDs**.

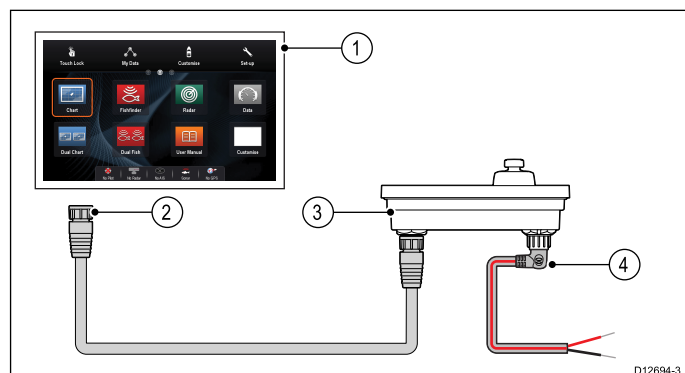

1. **MFD**
2. Network connection to **MFD** or **Raymarine®** network switch (**RayNet** cable)
3. **RMK-9** Keypad
4. Alternate power connection (Right angled power cable)

### Note:


- a. When connecting the keypad directly to the **MFD**, unless the **MFD** is capable of providing power over ethernet the keypad must be powered separately, using the alternate power connection.
- b. When connecting the keypad via a network switch the keypad must be powered separately, using the alternate power connection.

For further information regarding keypad installation (including power connection and mounting), refer to the installation instructions supplied with the keypad.

Once connected the keypad must be paired with the each **MFD** you want it to control.

## 4.19 Weather receiver connection

A Sirius XM weather receiver can be connected directly to the display's network connection or can be connected to the **SeaTalk<sup>hs</sup>** network, via a **Raymarine®** network switch.

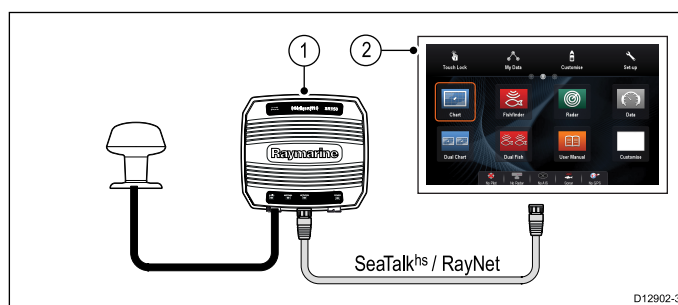

1. Raymarine weather receiver
2. **MFD**

For information on connecting an SR50 using SeaTalk<sup>ng</sup> please refer to 82257 – *SR50 operation* which can be downloaded from the Raymarine website: [www.raymarine.com](http://www.raymarine.com).

For further information regarding weather receiver installation (including power connection and mounting), refer to the installation instructions supplied with the weather receiver.

**Note:** You must select your Raymarine Weather receiver in the **Weather Set-up** menu: (**Homescreen > Set-up > System Settings > External Devices > Weather Set-up**).




## 4.20 Video connection — composite

Analog cameras can be connected directly to **MFDs** that have a composite video input connection.

Refer to the *Connection Overview* section to establish if your **MFD** has a composite video input.

**MFDs** that do not have a composite video input connection can only be connected to IP cameras.

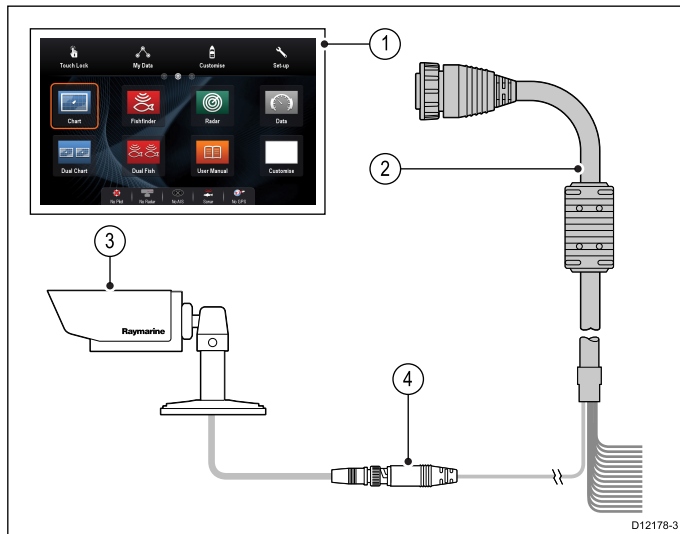

1. **MFD**
2. Connection to **MFD** (Power/NMEA/Video cable)
3. BNC video connector
4. Camera (video source)

Examples of other video sources that you can connect to the video in put connection:

- Thermal camera
- DVD player
- Portable media player

**Note:** To listen to audio, any connected player will require external speakers to be connected to the player's audio output.


### Video specification

|                   |              |
|-------------------|--------------|
| Signal type       | Composite    |
| Format            | PAL or NTSC  |
| Connector type    | BNC (female) |
| Output resolution | 720p         |

## 4.21 Camera (Video/Alarm) connection

A camera or a video device can be connected directly your **MFD** using the dedicated Video / alarm connector.

### Video / alarm connector video input

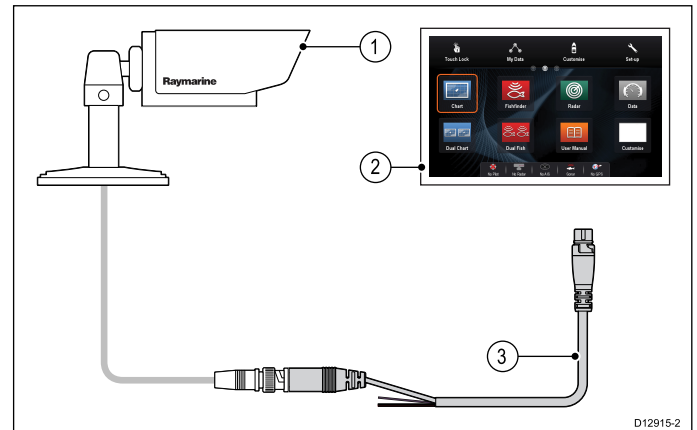


1. Video source (e.g. video camera)
2. **MFD**
3. Video / alarm cable (supplied)

**Note:** To listen to a movie's audio track, any connected DVD or digital video player will require speakers to be connected to the players audio output.

## 4.22 HDMI video output

If your **MFD** has a HDMI output connection the **MFD**'s screen can be output to an external display.

Refer to the *Connection Overview* section to establish if your **MFD** has a HDMI output.

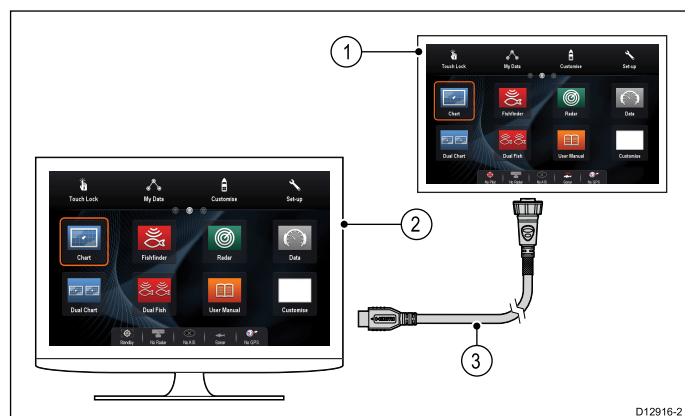

1. **MFD**
2. External display (See note below)
3. Raymarine 5 m (16.4 ft) HDMI video output cable (A80219)

### Note:

1. The external display you are connecting to must support the 720p standard to enable you to view the multifunction display screen on the external display. The multifunction display's video output resolution is fixed at 720p.
2. The HDMI cable must only be connected to an external display that is electrically isolated from the vessel's dc power supply (i.e the screen and the 0V of the external display's HDMI connector must not have a direct connection to the vessel's dc power supply).


For further assistance please contact Raymarine technical support.

## 4.23 IP Camera connection

**Raymarine®** IP cameras can be connected directly to the display's network connection or can be connected to the **SeaTalk<sup>hs</sup>** network, via a **Raymarine®** network switch.


The network connection transmits the video signal to a compatible **Raymarine®** MFD.

### IP camera direct connection

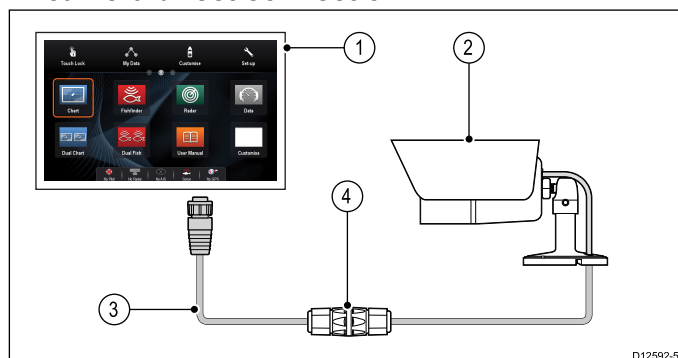

1. **MFD**
2. **CAM200IP**
3. **RayNet** to RJ45 **SeaTalk<sup>hs</sup>** adaptor cable
4. Ethernet coupler (R32142)

### IP camera network connection

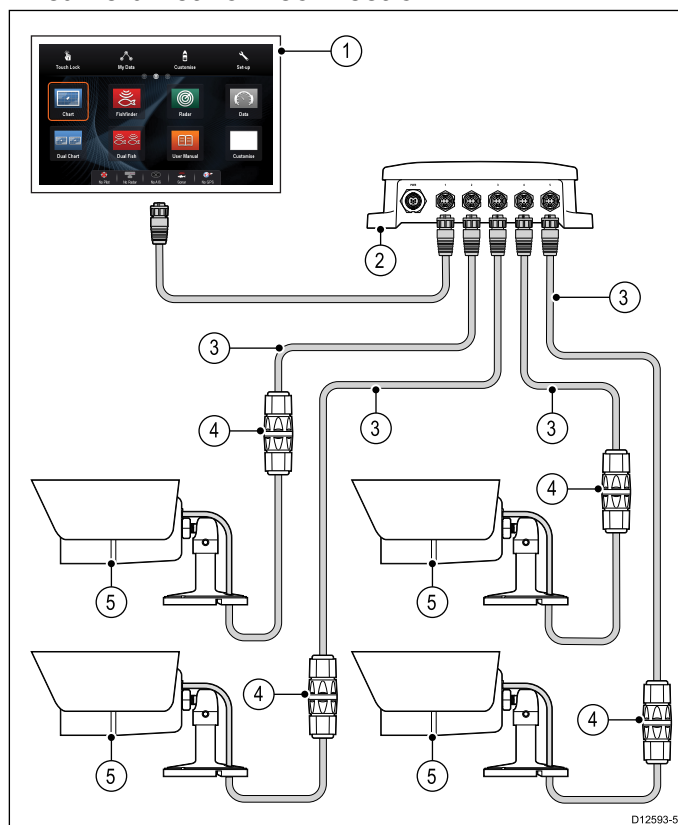

1. **MFD**
2. **Raymarine®** network switch
3. **RayNet** to RJ45 **SeaTalk<sup>hs</sup>** adaptor cable
4. Ethernet coupler (R32142)
5. **CAM200IP**

**Important:** If your IP camera(s) are not detected by your multifunction display, try power cycling the IP camera(s) whilst leaving your multifunction display powered up.

For further information regarding camera installation (including power connection and mounting), refer to the installation instructions supplied with the camera.

## IP camera guidance

**Raymarine® MFDs** are capable of displaying IP camera feeds. Whilst third-party IP cameras may work, **Raymarine®** highly recommends only using **Raymarine®** IP cameras such as the **CAM200IP**.

As guidance any third-party IP camera must conform to the following:


- The camera must support H.264 compression and RTSP (Real time Streaming Protocol).
- The camera must be ONVIF compliant
- The camera must be capable of and be setup to allow unauthenticated anonymous access
- The camera must be capable of and be setup to assign an IP address automatically via DHCP
- The camera resolution must be set to no higher than 720p

The camera settings must be checked and if necessary adjusted using a PC and the software supplied with the camera, prior to adding the camera to the **SeaTalk<sup>hs</sup>** network.

**Important:** Raymarine® does not guarantee compatibility with third-party IP cameras.

## 4.24 HD-SDI connection (gS195)

The gS195 includes a High Definition Serial Digital Interface (HD-SDI), which can be used to view a compatible video source using the multifunction display's Camera application.

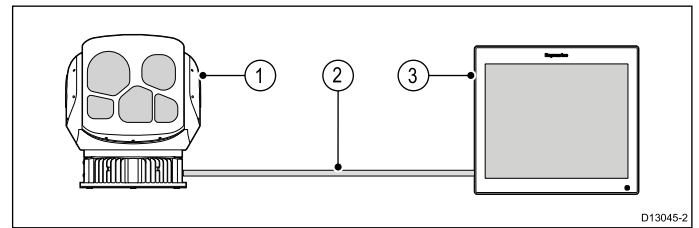

1. HD-SDI camera
2. HD-SDI input data cable
3. gS195 multifunction display

**Note:** If your camera or external display do not have a standard BNC connection then a third party adaptor and / or converter may be required.


The HD-SDI interface connections use BNC connectors. It is recommended that Belden 1694A cable (not supplied) and the supplied BNC connectors should be used to create the data cables required for connecting the camera to the multifunction display.

### HD-SDI camera connection

The supplied BNC connectors and boot kit should be used when connecting a camera using the units HD-SDI interface.

When making the data cables the cable should be fed through the boot first before attaching the BNC connector to the end of the cable. It may be possible to push the boot over the BNC connector and onto the cable, however care must be taken not to split the protective boot.


### HD-SDI connection

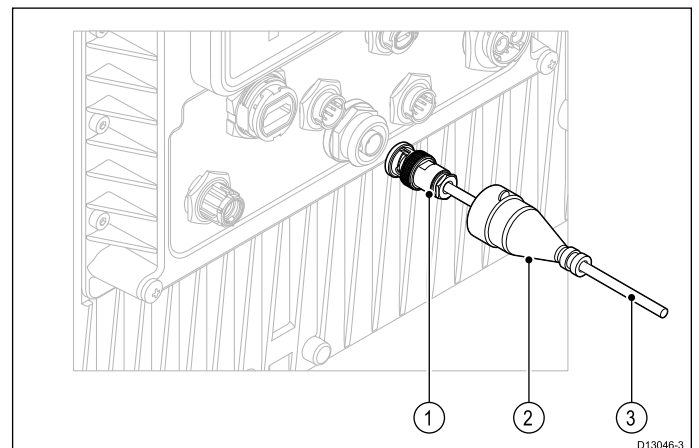

1. 75 ohm BNC connector (Supplied)
2. Boot (Supplied)
3. Data cable (not supplied)

## Connecting the data cable


Follow the steps below to connect your HD-SDI data cable to the multifunction display.

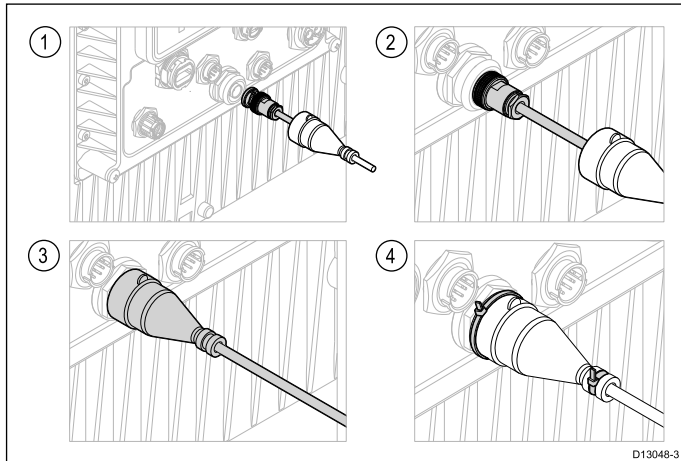

1. Ensure the BNC connector is correctly orientated.
2. Fully insert the BNC connector into the relevant HD-SDI connection on the back of your multifunction display and turn the locking collar clockwise until locked into position.
3. Push the protective boot over the BNC connector and HD-SDI connection on the back of the display.
4. Use 2 cable ties (supplied) to secure the protective boot over the connection.

## Protecting disconnected cables

If a BNC cable is to be left disconnected then the protective cap should be secured to the end of the boot.

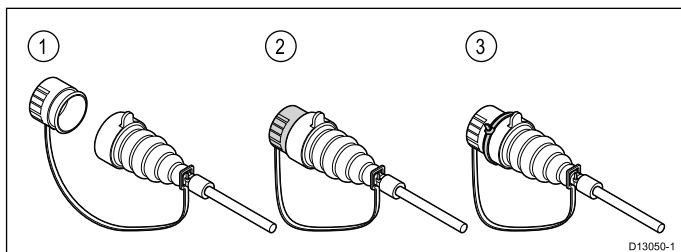

1. Disconnect the BNC cable from the multifunction display.
2. Push the boot over the cap as shown below.
3. It is recommended that a cable tie be used to secure the boot to the cap.

## HD-SDI maximum cable length

The maximum recommended cable length is shown below.

|                    |                |
|--------------------|----------------|
| HD-SDI input cable | 50 m (164 ft.) |
|--------------------|----------------|

## 4.25 Thermal camera connection


Thermal cameras can be connected directly to the display's network connection or can be connected to the **SeaTalk<sup>hs</sup>** network, via a **Raymarine<sup>®</sup>** network switch.

2 connections are required:

- **Network connection** — required to control the thermal camera via a compatible **Raymarine<sup>®</sup>** MFD or optional Joystick Control Unit (JCU).
- **Video connection** — transmits the composite video signal to a compatible **Raymarine<sup>®</sup>** MFD.


**Note:** The Thermal camera can only be connected to MFDs with a Video input connection.

### T200 Series connection

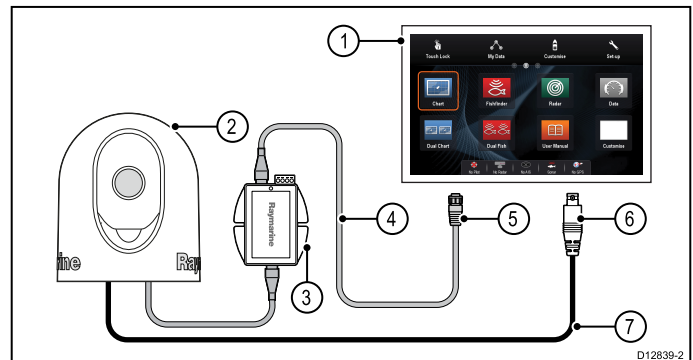

1. MFD
2. Thermal camera
3. Power over Ethernet (PoE) Injector
4. RayNet to RJ45 SeaTalk<sup>hs</sup> adaptor cable
5. Network connection to MFD (RayNet)
6. Video connection to MFD (composite video)
7. Video cable

### T300 / T400 Series connection.

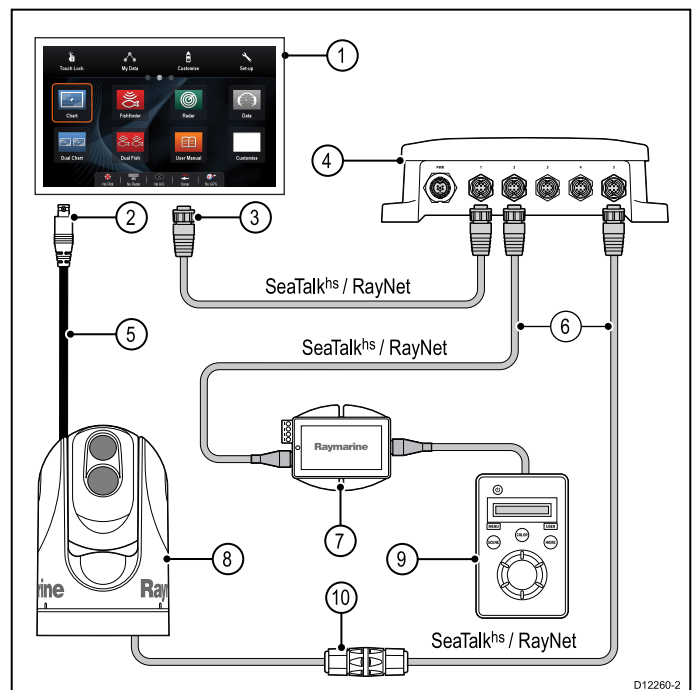

1. MFD
2. Video connection to MFD (composite video)
3. Network connection to MFD (RayNet cable)

4. **Raymarine®** network switch
5. Video cable
6. **RayNet** to RJ45 **SeaTalk<sup>hs</sup>** adaptor cables
7. PoE (Power over Ethernet) injector (only required if using the optional JCU)
8. Thermal camera
9. Joystick Control Unit (JCU), optional
10. Ethernet coupler (R32142)

Raymarine recommends the use of a BNC terminated RG59 75ohm (or better) coaxial cable.

**Important:**

- You can only view the thermal camera image on the multifunction display to which the camera is physically connected. If you want to view the thermal camera image on more than 1 display you must obtain a suitable third-party video distribution unit.
- You can control the thermal camera using any multifunctional display connected to the same network. The Joystick Control Unit (JCU) is optional, but can be used in conjunction with multifunctional displays to control the thermal camera if required.
- “Dual payload” thermal cameras include 2 independent lenses; 1 for thermal (infrared) and 1 for visible light. If you only have 1 display you should only connect the video cable labelled “VIS / IR” (visible light / infrared) to the display. If you have 2 or more displays you should connect 1 cable to each display.

For further information regarding thermal camera installation (including power connection and mounting), refer to the installation instructions supplied with the camera.

## **Thermal camera cables**

Cabling requirements for thermal cameras.

### **Camera to network switch**

A network patch cable is required to connect the camera to the network switch. The connection is made between the camera cable tail and the network switch via the coupler (supplied with the camera). Network patch cables are available in a variety of lengths.

### **Joystick Control Unit (JCU)**

An Ethernet (with power) cable is used to connect the JCU. The JCU is supplied with a 1.5 m (5 ft) Ethernet cable for this connection. If you require a different length contact your dealer for suitable cables.

### **Power over Ethernet (PoE) injector to network switch**

A network patch cable is required for connecting the PoE injector to the network switch. Network patch cables are available in a variety of lengths.


### **Video cables**

Video cables are not supplied with the product. Please contact your dealer for suitable cables and adaptors.

4.26 Fusion network connection

Fusion 700 and 750 Series marine entertainment systems can be connected directly to the display's network connection or can be connected to the **SeaTalk<sup>hs</sup>** network, via a **Raymarine®** network switch. The Fusion entertainment system can be controlled by any MFD connected to the same network.

Multiple Fusion units can be connected to the same network.

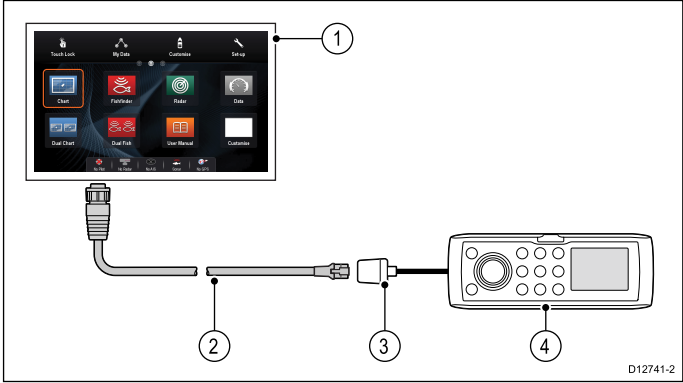

- 1. MFD
- 2. Network connection to MFD (RayNet to RJ45 SeaTalk<sup>hs</sup> adaptor cable)
- 3. Fusion ethernet connection
- 4. Fusion unit


**Note:** The MFD should always be powered from a separate breaker and be powered on before any other connected devices.

For further installation information, refer to the installation instructions supplied with the unit.

4.27 Fusion NMEA 2000 connection

Compatible Fusion NMEA 2000 marine entertainment systems can be connected to the **SeaTalk<sup>ng</sup>®** backbone. The Fusion entertainment system can be controlled by any compatible **MFD** connected to the same backbone.

Multiple Fusion units can be connected to the same backbone.

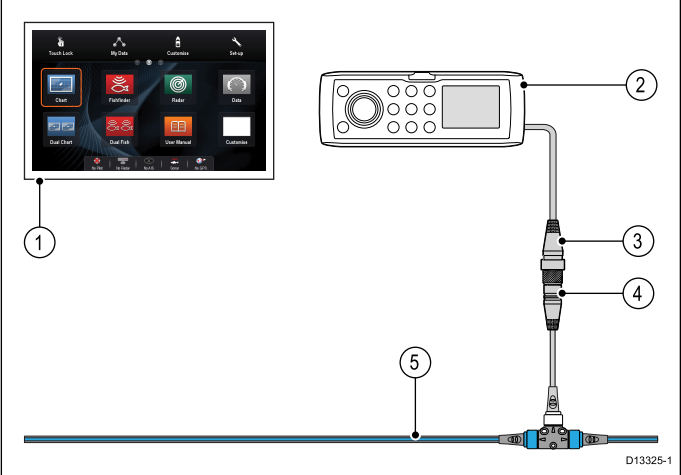

- 1. MFD
- 2. NMEA 2000 Fusion unit
- 3. Fusion NMEA 2000 connection
- 4. SeaTalk<sup>ng</sup>® to DeviceNet female adaptor cable (A06045)
- 5. SeaTalk<sup>ng</sup>® backbone

**Note:** The MFD should always be powered from a separate breaker and be powered on before any other connected devices.

For further installation information, refer to the installation instructions supplied with the unit.

Compatible Fusion units


The table below details the Fusion entertainment systems that are compatible with **Raymarine® LightHouse™** powered MFDs.

| Fusion unit  | NMEA 2000 connection | SeaTalk <sup>hs</sup> connection |
|--------------|----------------------|----------------------------------|
| 650 Series   | ✓                    | ✗                                |
| 700 Series   | ✓                    | ✓                                |
| 750 Series   | ✓                    | ✓                                |
| RA205 Series | ✓                    | ✗                                |

## 4.28 Media player connection

You can use your **MFD** to control a Bluetooth media player (such as a smartphone).

The media player must be compatible with the Bluetooth 2.1+ EDR power class 1.5 (supported profile: AVRCP 1.0) or higher.

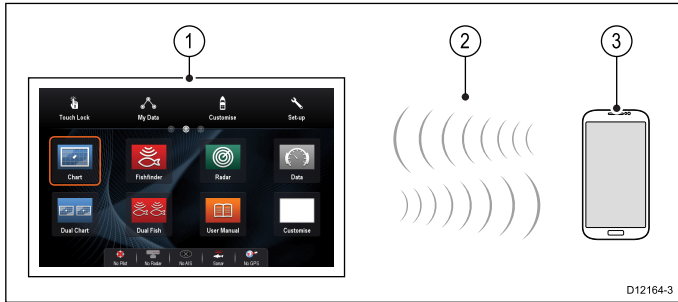

1. **MFD**
2. Bluetooth connection
3. Bluetooth media player

To use this feature you must first:

- Enable Bluetooth in the **System Settings** on the **MFD**.
- Enable Bluetooth on the media player device.
- Pair the media player device with the **MFD**.
- Enable **Audio Control** in the System Settings on the **MFD**.
- Connect an **RCU-3** remote and assign the shortcut key to Start/Stop audio playback (Only required on MFD that do not have a touchscreen).

**Note:** If your media player does not include built-in speakers it may be necessary to connect the media player's audio output to an external audio system or a pair of headphones. For more information refer to the instructions that accompany the media player device.

## 4.29 Raymarine mobile app connection

You can use compatible tablet and smartphone devices as a wireless repeat display or remote control for your multifunction display.

Raymarine apps allow you to stream and / or control, remotely what you see on your multifunction display to a compatible device, using a Wi-Fi connection.

To use this feature you must first:

- Ensure your device is compatible with the app you wish to use.
- Download and install the relevant Raymarine app, available from the relevant market store.
- Enable Wi-Fi in the System Settings on the multifunction display.
- Enable Wi-Fi on your compatible device.
- Select the Raymarine Wi-Fi connection from the list of available Wi-Fi networks on your compatible device.
- Enable the relevant Mobile app in the System Settings menu on the multifunction display.


**Note:** The multifunction display acts as a Wi-Fi access point. If your device already connects to an access point for e-mail and internet you must revert your access point back to regain access to e-mails and internet.



## 4.30 Bluetooth remote control connection

You can control the multifunction display wirelessly using a Raymarine remote control unit.

The remote control uses a Bluetooth wireless connection.

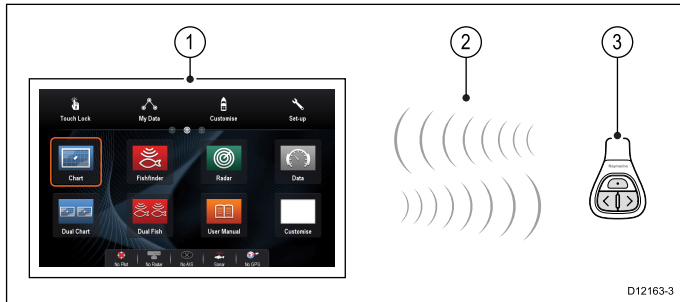

1. Multifunction display
2. Bluetooth connection
3. Raymarine Bluetooth remote control (for example, RCU-3)

To use the remote control you must first:

- Enable Bluetooth in the System Settings on the multifunction display
- Pair the remote control unit with the multifunction display




# Chapter 5: Mounting

## Chapter contents

- [5.1 Bracket mounting hole locations on page 58](#)
- [5.2 Mounting surface requirements on page 58](#)
- [5.3 Flush mounting the display on page 59](#)
- [5.4 Flush mounting the card reader on page 60](#)
- [5.5 Surface mounting the display on page 61](#)
- [5.6 Surface mounting the card reader on page 62](#)

5.1 Bracket mounting hole locations

The location of the bracket mounting holes on each display variant is shown below.

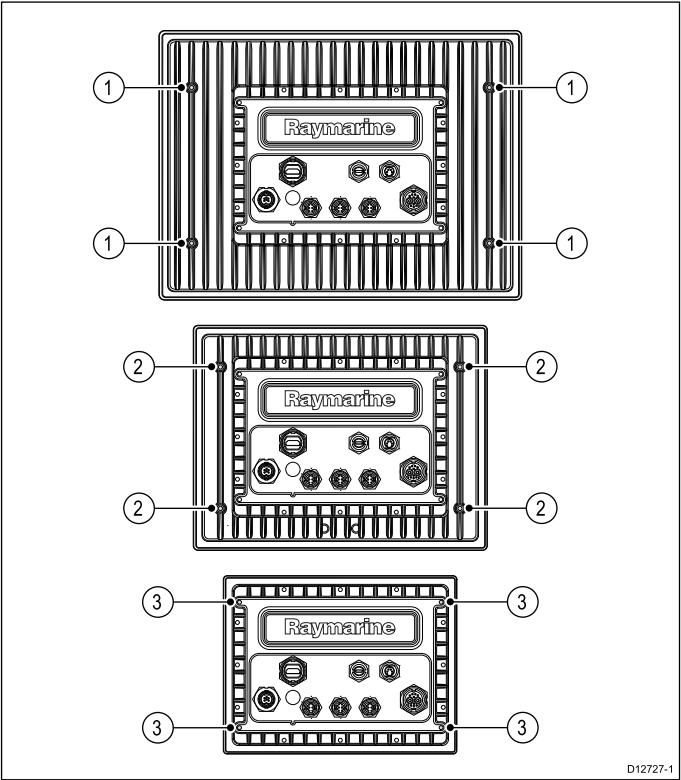

|   |                                                 |
|---|-------------------------------------------------|
| 1 | gS165 and gS195 bracket mounting hole locations |
| 2 | gS125 bracket mounting hole locations           |
| 3 | gS95 bracket mounting hole locations            |

5.2 Mounting surface requirements



Short desc is not printed, but is used in searches

This product is heavy. To prevent potential damage to the product and / or your vessel, observe the following BEFORE installing the product:

- Refer to the weight information provided in the technical specification for this product and ensure that the intended mounting surface is suitable for bearing the weight.
- If the mounting surface is not suitable for the product weight, you may need to reinforce the mounting surface.
- If in doubt, refer to a professional marine equipment installer for further guidance.

## 5.3 Flush mounting the display

For flush mounting you must rebate the mounting surface.

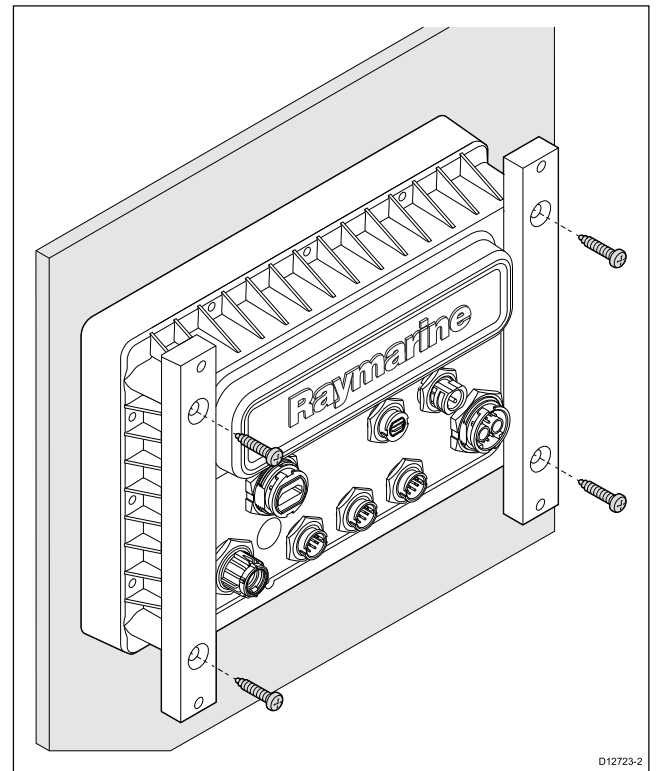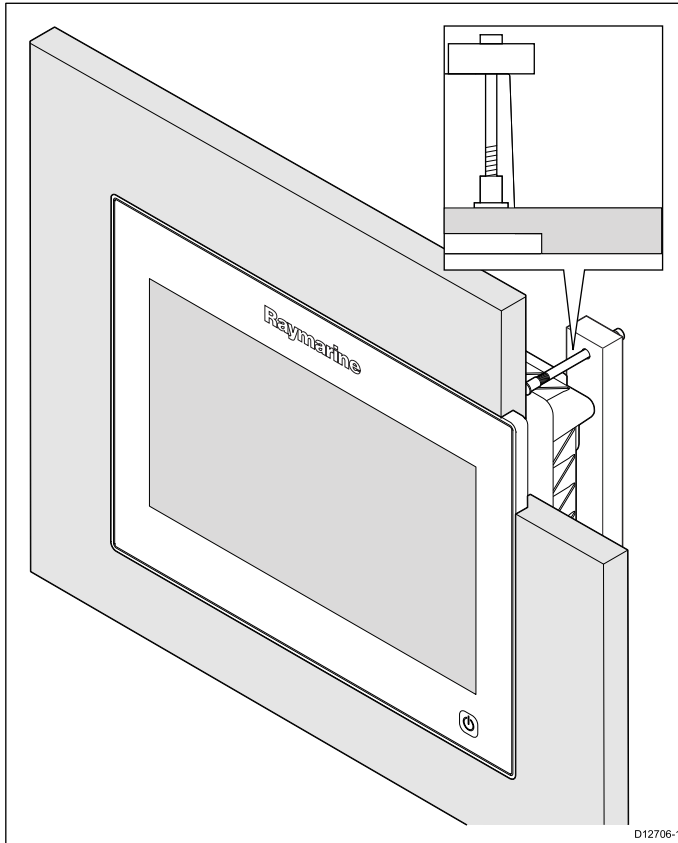


**Note:** Refer to the [5.1 Bracket mounting hole locations](#) section for details of the location of the bracket mounting holes on the rear of your display.

1. Check the selected location for the unit. A clear, flat area with suitable clearance behind the panel is required.
2. Before modifying the mounting surface, refer to the dimensions supplied in this document to ensure there is enough space for the display and all cables.
3. Fix the supplied mounting template to the selected location, using masking or self-adhesive tape.
4. Using a suitable hole saw (the size and position is indicated on the template), make a hole in each corner of the cut-out area.
5. Using a suitable saw, cut along the inside edge of the rear casing cut-out line indicated on the template.
6. Follow the rebate cut-out line on the template to cut a rebate around the hole with a depth of 8.5 mm (0.33 in), to accept the display.
7. Ensure that the unit fits into the removed area and then remove any rough edges.
8. Affix the supplied gasket onto the rear of the display and press firmly onto the flange.
9. Connect the power, data and other cables to the unit.
10. Attach the supplied mounting brackets to the rear of the display using the supplied fixings, as shown in the diagram below. Use one bracket for each side of the display.

11. Secure the display using the provided mounting fixings (bolt, washer, lock nut and foot. In 4 locations.

Depending on the thickness of the mounting surface the washer and lock nut may be located:

1. between the mounting bracket and mounting feet (as shown in (1) and (2) below, or
2. after the mounting bracket as shown in (3) and (4) below.

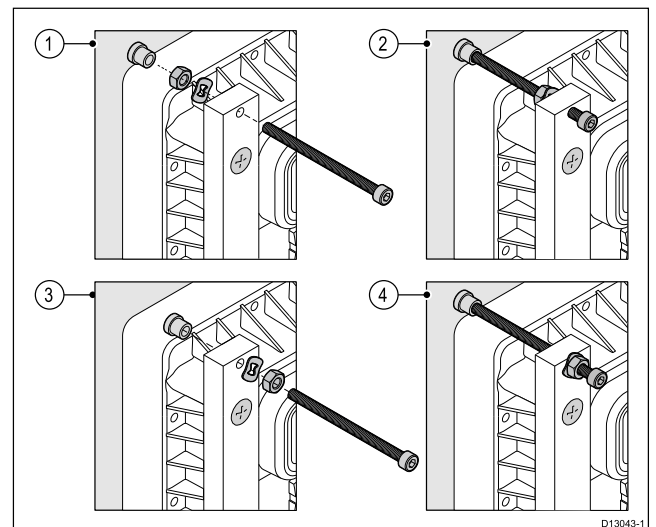

12. Using a suitable allen key, tighten the bracket mounting bolts so that the feet are tight against the rear of the mounting surface.


13. Using a suitable sized wrench tighten the lock nut against the washer and the mounting bracket to lock in position.

The lock nut should be tightened sufficiently to securely hold the display in position. Do not overtighten.

**Note:** The supplied gasket provides a seal between the unit and a suitably flat and stiff mounting surface or binnacle. The gasket should be used in all installations. It may also be necessary to use a marine-grade sealant if the mounting surface or binnacle is not entirely flat and stiff or has a rough surface finish.

## 5.4 Flush mounting the card reader

For flush mounting you must rebate the mounting surface to accommodate card reader housing.

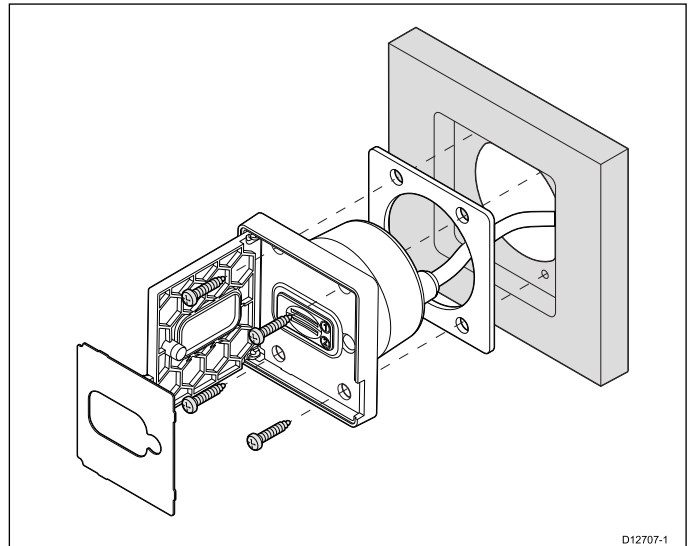


1. Check the selected location for the unit. A clear, flat area with suitable clearance behind the panel is required.
2. Before modifying the mounting surface, refer to the dimensions supplied in this document to ensure there is enough space for the unit and cable.
3. Fix the supplied mounting template to the selected location, using masking or self-adhesive tape.
4. Drill 4 holes as indicated on the mounting template to accept the fixings.
5. Using a 40 mm (1.6 in) hole cutter, drill out the cut-out area identified on the mounting template.
6. Follow the rebate cut-out line on the template to cut a rebate around the hole with a depth of 8.5 mm (0.33 in), to accept the unit.
7. Ensure that the card reader fits into the removed area and then remove rough edges.
8. Affix the supplied gasket onto the rear of the card reader and press firmly onto the flange.
9. Feed the cable through the hole and connect to the multifunction display's card reader connector.
10. Place the card reader into the rebate and secure using the fixings provided.
11. Insert the card reader label over the top of the card reader slots so that the mounting screw locations are covered.

**Note:** The appropriate tightening torque and drill bit size to use depends on the thickness of the mounting surface and the type of material it is made from.


**Note:** The supplied gasket provides a seal between the unit and a suitably flat and stiff mounting surface or binnacle. The gasket should be used in all installations. It may also be necessary to use a marine-grade sealant if the mounting surface or binnacle is not entirely flat and stiff or has a rough surface finish.

## 5.5 Surface mounting the display

1. Check the selected location for the unit. A clear, flat area with suitable clearance behind the panel is required.
2. Before modifying the mounting surface, refer to the dimensions supplied in this document to ensure there is enough space for the display and all cables.
3. Fix the supplied mounting template to the selected location, using masking or self-adhesive tape.
4. Using a suitable hole saw (the size and position is indicated on the template), make a hole in each corner of the cut-out area.
5. Using a suitable saw, cut along the inside edge of the rear casing cut-out line indicated on the template.
6. Ensure that the unit fits into the removed area and then remove any rough edges.

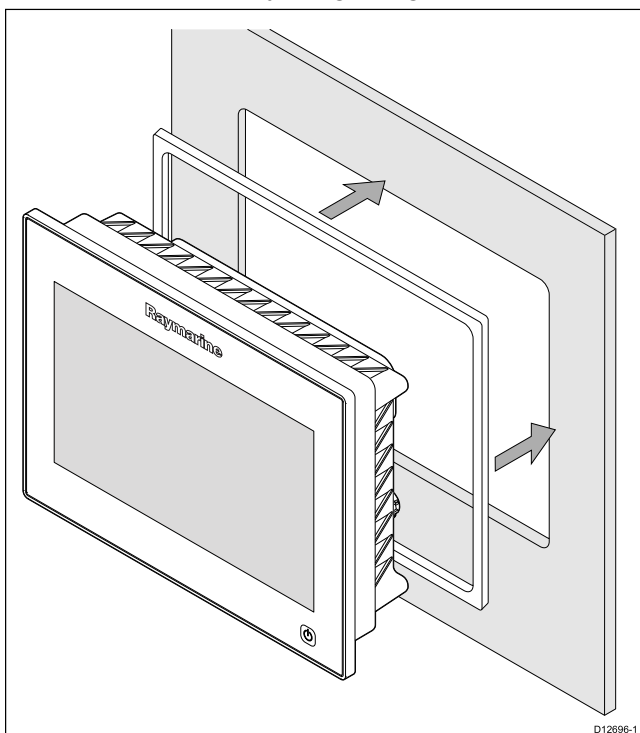

7. Affix the supplied gasket onto the rear of the display and press firmly onto the flange.
8. Connect the power, data and other cables to the unit.
9. Attach the supplied mounting brackets to the rear of the display using the supplied fixings, as shown in the diagram below. Use one bracket for each side of the display.

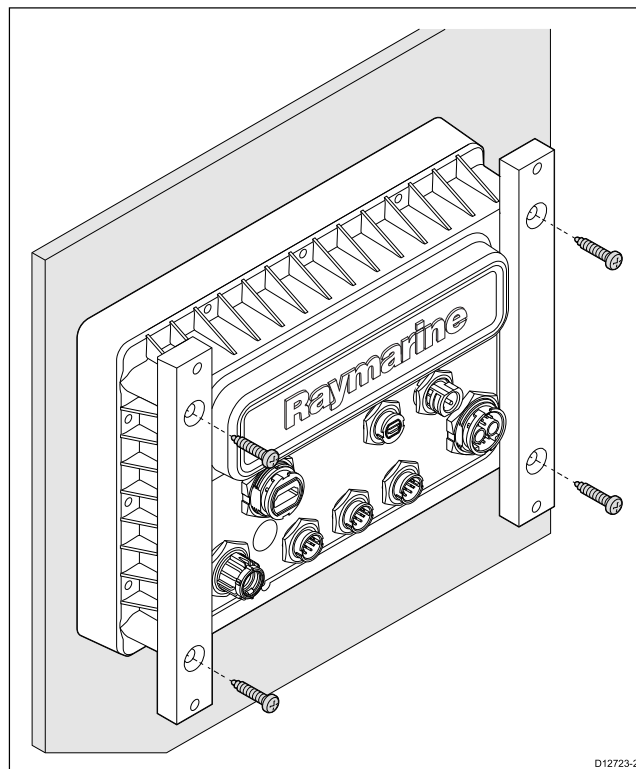


**Note:** Refer to the [5.1 Bracket mounting hole locations](#) section for details of the location of the bracket mounting holes on the rear of your display.

10. Secure the display using the provided mounting fixings (bolt, washer, lock nut and foot. In 4 locations.

Depending on the thickness of the mounting surface the washer and lock nut may be located:

1. between the mounting bracket and mounting feet (as shown in (1) and (2) below, or
2. after the mounting bracket as shown in (3) and (4) below.

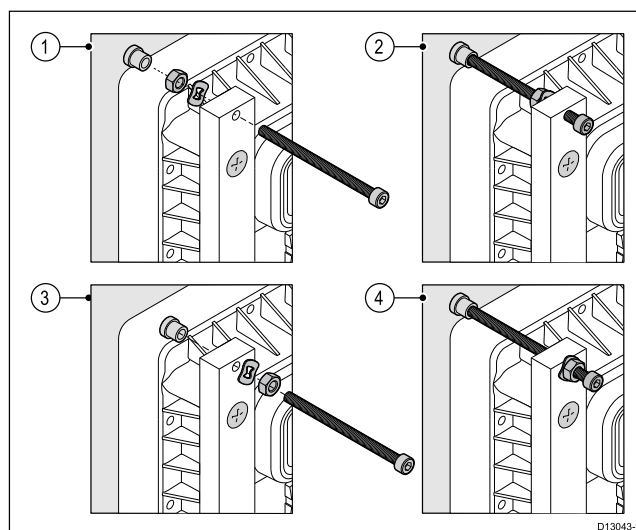


11. Using a suitable allen key, tighten the bracket mounting bolts so that the feet are tight against the rear of the mounting surface.

12. Using a suitable sized wrench tighten the lock nut against the washer and the mounting bracket to lock in position.

The lock nut should be tightened sufficiently to securely hold the display in position. Do not overtighten.

**Note:** The supplied gasket provides a seal between the unit and a suitably flat and stiff mounting surface or binnacle. The gasket should be used in all installations. It may also be necessary to use a marine-grade sealant if the mounting surface or binnacle is not entirely flat and stiff or has a rough surface finish.

## 5.6 Surface mounting the card reader

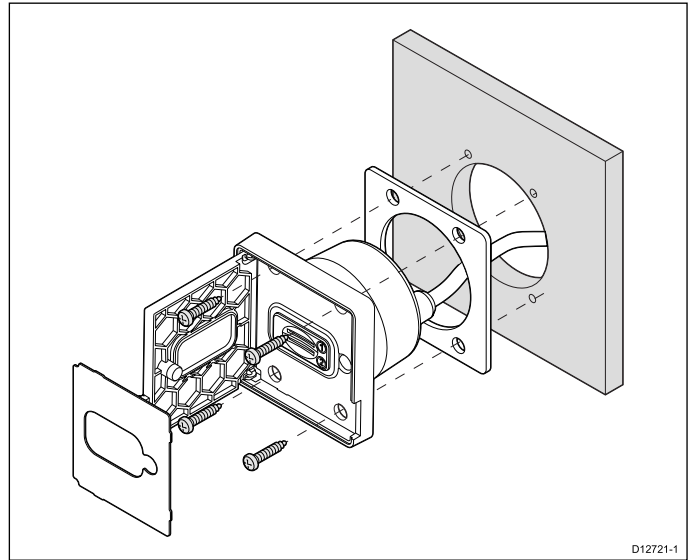

1. Check the selected location for the unit. A clear, flat area with suitable clearance behind the panel is required.
2. Before modifying the mounting surface, refer to the dimensions supplied in this document to ensure there is enough space for the unit and cable.
3. Fix the supplied mounting template to the selected location, using masking or self-adhesive tape.
4. Drill 4 holes as indicated on the mounting template to accept the fixings.
5. Using a 40 mm (1.6 in) hole cutter, drill out the cut-out area identified on the mounting template.
6. Ensure that the card reader fits into the removed area and then remove rough edges.
7. Affix the supplied gasket onto the rear of the card reader and press firmly onto the flange.
8. Feed the cable through the hole and connect to the multifunction display's card reader connector.
9. Secure using the fixings provided.
10. Insert the card reader label over the top of the card reader slots so that the mounting screw locations are covered.

**Note:** The appropriate tightening torque and drill bit size to use depends on the thickness of the mounting surface and the type of material it is made from.

**Note:** The supplied gasket provides a seal between the unit and a suitably flat and stiff mounting surface or binnacle. The gasket should be used in all installations. It may also be necessary to use a marine-grade sealant if the mounting surface or binnacle is not entirely flat and stiff or has a rough surface finish.

## Chapter 6: Maintaining your display

### Chapter contents

- [6.1 Service and maintenance on page 64](#)
- [6.2 Product cleaning on page 64](#)

## 6.1 Service and maintenance

This product contains no user serviceable components. Please refer all maintenance and repair to authorized Raymarine dealers. Unauthorized repair may affect your warranty.

### Routine equipment checks

Raymarine strongly recommends that you complete a number of routine checks to ensure the correct and reliable operation of your equipment.

Complete the following checks on a regular basis:

- Examine all cables for signs of damage or wear and tear.
- Check that all cables are securely connected.

## 6.2 Product cleaning

Best cleaning practices.

When cleaning products:

- If your product includes a display screen, do NOT wipe the screen with a dry cloth, as this could scratch the screen coating.
- Do NOT use abrasive, or acid or ammonia based products.
- Do NOT use a jet wash.

### Cleaning the display case

The display unit is a sealed unit and does not require regular cleaning. If it is necessary to clean the unit, follow this basic procedure:

1. Switch off the power to the display.
2. Wipe the display with a clean, soft cloth (a microfibre cloth is ideal).
3. If necessary, use a mild detergent to remove grease marks.

**Note:** Do NOT use solvents or detergents on the screen itself.

**Note:** In certain conditions, condensation may appear inside the display screen. This will not harm the unit, and can be cleared by powering on the display for a short time.

### Cleaning the display screen

A coating is applied to the display screen. This makes it water repellent, and prevents glare. To avoid damaging this coating, follow this procedure:

1. Switch off the power to the display.
2. Rinse the screen with fresh water to remove all dirt particles and salt deposits.
3. Allow the screen to dry naturally.
4. If any smears remain, very gently wipe the screen with a clean microfibre cleaning cloth (available from an opticians).

### Cleaning the sun cover

The supplied sun cover features an adhesive surface. In certain conditions unwanted contaminants may stick to this surface. To avoid damaging the monitor display, clean the sun cover regularly following this procedure:

1. Carefully remove the sun cover from the display.
2. Rinse the sun cover with fresh water to remove all dirt particles and salt deposits.
3. Allow the sun cover to dry naturally.



# Chapter 7: Troubleshooting

## Chapter contents

- [7.1 Troubleshooting on page 66](#)
- [7.2 Power up troubleshooting on page 67](#)
- [7.3 Radar troubleshooting on page 68](#)
- [7.4 GPS troubleshooting on page 69](#)
- [7.5 Sonar troubleshooting on page 70](#)
- [7.6 Sonar crosstalk interference on page 73](#)
- [7.7 Thermal camera troubleshooting on page 75](#)
- [7.8 System data troubleshooting on page 77](#)
- [7.9 Video troubleshooting on page 78](#)
- [7.10 Wi-Fi troubleshooting on page 79](#)
- [7.11 Bluetooth troubleshooting on page 80](#)
- [7.12 Touchscreen troubleshooting on page 81](#)
- [7.13 Touchscreen alignment on page 82](#)
- [7.14 Miscellaneous troubleshooting on page 83](#)

## 7.1 Troubleshooting

The troubleshooting information provides possible causes and corrective action required for common problems associated with marine electronics installations.

All Raymarine products are, prior to packing and shipping, subjected to comprehensive test and quality assurance programs. However, if you experience problems with the operation of your product this section will help you to diagnose and correct problems in order to restore normal operation.

If after referring to this section you are still having problems with your unit, please contact Raymarine Technical Support for further advice.

## 7.2 Power up troubleshooting

Problems at power up and their possible causes and solutions are described here.

### Product does not turn on or keeps turning off

| Possible causes                                            | Possible solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blown fuse / tripped breaker                               | <ol style="list-style-type: none"><li>1. Check condition of relevant fuses and breakers and connections, replace if necessary (Refer to the <i>Technical Specification</i> section of your product's installation instructions for fuse ratings.)</li><li>2. If fuse keeps blowing check for cable damage, broken connector pins or incorrect wiring.</li></ol>                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Poor / damaged / insecure power supply cable / connections | <ol style="list-style-type: none"><li>1. Check that the power cable connector is fully inserted into the unit and locked in position.</li><li>2. Check the power supply cable and connectors for signs of damage or corrosion, replace if necessary.</li><li>3. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary.</li><li>4. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary.</li><li>5. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc, replace if necessary.</li></ol> |
| Incorrect power connection                                 | The power supply may be wired incorrectly, ensure the installation instructions have been followed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Power source insufficient                                  | With the product under load, using a multi-meter, check the power supply voltage as close to the unit as possible to establish actual voltage when the current is flowing. (Refer to the <i>Technical Specification</i> section of your product's installation instructions for power supply requirements.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

### Product will not boot up (re-boot loop)

| Possible causes             | Possible solutions                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power supply and connection | See possible solutions from 'Products does not turn on or keeps turning off' above.                                                                                                                                                                                                                                                                                                                                                   |
| Software corruption         | <ol style="list-style-type: none"><li>1. In the unlikely event that the products software has become corrupted please try re-flashing the latest software from the Raymarine website.</li><li>2. On display products, as a last resort, you can try to perform a 'Power on Reset', however this will delete all settings/presets and user data (such as waypoints and tracks) and revert the unit back to factory defaults.</li></ol> |

### Performing a Power on Reset

Performing a 'Power on Reset' will delete all settings/presets and user data (such as waypoints and tracks) and revert the unit back to factory defaults.

1. Power the unit off.
2. Power the unit back on.
3. When the **LightHouse** logo appears Press and hold the **Power** button.  
The Raymarine Initialization screen is displayed.

#### 4. Touch only displays:

- i. Press the **Power** button again to select '1 – Reset to factory defaults'.  
A 7 second countdown will begin. When the countdown reaches zero the unit will be reset to factory default settings.

- ii. You can stop the reset process by pressing the **Power** button again before the countdown timer reaches zero.

This will select the second option: '2– Exit and start the application' and begin a new countdown timer.

#### 5. Non-Touch and HybridTouch displays:

- i. Press the **WPT/MOB** button.  
The unit will be reset to factory default settings.

## 7.3 Radar troubleshooting

Problems with the radar and their possible causes and solutions are described here.

| Problem                                                                        | Possible causes                                                | Possible solutions                                                                                                                      |
|--------------------------------------------------------------------------------|----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| No Data or No scanner message                                                  | Radar scanner power supply                                     | Check that the scanner power supply cable is sound and that all connections are tight and free from corrosion.                          |
|                                                                                |                                                                | Check relevant fuses and breakers.                                                                                                      |
|                                                                                |                                                                | Check power source is of the correct voltage and sufficient current (using voltage booster if appropriate).                             |
|                                                                                | SeaTalk <sup>hs</sup> / RayNet network problem                 | Check that the Scanner is correctly connected to a Raymarine network switch or SeaTalk <sup>hs</sup> crossover coupler (as applicable). |
|                                                                                |                                                                | Check the status of the Raymarine network switch.                                                                                       |
|                                                                                |                                                                | Check that SeaTalk <sup>hs</sup> / RayNet cables are free from damage.                                                                  |
|                                                                                | Software mismatch between equipment may prevent communication. | Contact Raymarine technical support.                                                                                                    |
|                                                                                | Switch at scanner pedestal in OFF position                     | Ensure scanner pedestal switch is in ON position.                                                                                       |
| Radar will not initialize (Voltage control module (VCM) stuck in "sleep mode") | Intermittent or poor power connection                          | Check power connection at VCM. (Voltage at input = 12 / 24 V, Voltage at output = 40 V)                                                 |
| The bearing of a target on the radar screen is incorrect.                      | The radar bearing alignment requires correcting.               | Check and adjust radar bearing alignment.                                                                                               |

## 7.4 GPS troubleshooting

Problems with the GPS and their possible causes and solutions are described here.

| Problem                                                                                                                                   | Possible causes                                                                                                                                                                              | Possible solutions                                                                                  |
|-------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
| "No Fix" GPS status icon is displayed.                                                                                                    | Geographic location or prevailing conditions preventing satellite fix.                                                                                                                       | Check periodically to see if a fix is obtained in better conditions or another geographic location. |
|                                                                                                                                           | GPS connection fault.                                                                                                                                                                        | Ensure that external GPS connections and cabling are correct and fault free.                        |
|                                                                                                                                           | External GPS antenna in poor position.<br>For example: <ul style="list-style-type: none"><li>• Below decks.</li><li>• Close proximity to transmitting equipment such as VHF radio.</li></ul> | Ensure GPS antenna has a clear view of the sky.                                                     |
|                                                                                                                                           | GPS installation problem.                                                                                                                                                                    | Refer to the installation instructions.                                                             |
| <b>Note:</b> A GPS Status screen is available within the display. This provides satellite signal strength and other relevant information. |                                                                                                                                                                                              |                                                                                                     |

## 7.5 Sonar troubleshooting

Problems with the sonar and their possible causes and solutions are described here.

### Scrolling image is not being displayed

| Possible causes                                                | Possible solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sonar disabled                                                 | Select <b>Ping Enable</b> from the Sounder Set-up menu.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Incorrect transducer selected                                  | Check that the correct transducer is selected in the Transducer Set-up menu.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Damaged cables                                                 | <ol style="list-style-type: none"><li>1. Check that the transducer cable connector is fully inserted and locked in position.</li><li>2. Check the power supply cable and connectors for signs of damage or corrosion, replace if necessary.</li><li>3. With the unit turned on, try flexing the cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary.</li><li>4. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary.</li><li>5. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Fishfinder applications to stop scrolling or the unit to reset/turn off), replace if necessary.</li></ol> |
| Damaged or fouled transducer                                   | Check the condition of the transducer ensuring it is not damaged and is free from debris/fouling, clean or replace as necessary.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Wrong transducer fitted                                        | Ensure the transducer is compatible with your system.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| SeaTalk <sup>hs</sup> / RayNet network problem.                | <ul style="list-style-type: none"><li>• Check that the unit is correctly connected to the multifunction display or Raymarine network switch. If a crossover coupler or other coupler cable / adapter is used, check all connections ensuring connections are secure, clean and free from corrosion, replace if necessary.</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Software mismatch between equipment may prevent communication. | Ensure all Raymarine products contain the latest available software, check the Raymarine website: <a href="http://www.raymarine.com/software">www.raymarine.com/software</a> for software compatibility.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

### No depth reading / lost bottom lock

| Possible causes              | Possible solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Transducer location          | Check that the transducer has been installed in accordance with the instructions provided with the transducer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| Transducer angle             | If the transducer angle is too great the beam can miss the bottom, adjust transducer angle and recheck.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Transducer kicked-up         | If the transducer has a kick-up mechanism, check that it has not kicked up due to hitting an object.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Power source insufficient    | With the product under load, using a multi-meter, check the power supply voltage as close to the unit as possible to establish actual voltage when the current is flowing. (Check your product's Technical specification for power supply requirements.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Damaged or fouled transducer | Check the condition of the transducer ensuring it is not damaged and is free from debris / fouling.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Damaged cables               | <ol style="list-style-type: none"><li>1. Check the unit's connector for broken or bent pins.</li><li>2. Check that the cable connector is fully inserted into the unit and that the locking collar is in the locked position.</li><li>3. Check the cable and connectors for signs of damage or corrosion, replace if necessary.</li><li>4. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary.</li><li>5. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary.</li></ol> |

| Possible causes                | Possible solutions                                                                                                                                                                                                                   |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                | 6. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Fishfinder applications to stop scrolling or the unit to reset/turn off), replace if necessary. |
| Vessel speed too high          | Slow vessel speed and recheck.                                                                                                                                                                                                       |
| Bottom too shallow or too deep | The bottom depth may be outside of the transducers depth range, move vessel to shallower or deeper waters as relevant and recheck.                                                                                                   |

### Poor / problematic image

| Possible causes                                                                     | Possible solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vessel stationary                                                                   | Fish arches are not displayed if the vessel is stationary; fish will appear on the display as straight lines.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Scrolling paused or speed set too low                                               | Unpause or increase sonar scrolling speed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Sensitivity settings may be inappropriate for present conditions.                   | Check and adjust sensitivity settings or perform a Sonar reset.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Damaged cables                                                                      | <ol style="list-style-type: none"> <li>1. Check the unit's connector for broken or bent pins.</li> <li>2. Check that the cable connector is fully inserted into the unit and that the locking collar is in the locked position.</li> <li>3. Check the cable and connectors for signs of damage or corrosion, replace if necessary.</li> <li>4. With the unit turned on, try flexing the power cable near to the display connector to see if this causes the unit to re-boot/loose power, replace if necessary.</li> <li>5. Check the vessel's battery voltage, the condition of the battery terminals and power supply cables, ensuring connections are secure, clean and free from corrosion, replace if necessary.</li> <li>6. With the product under load, using a multi-meter, check for high voltage drop across all connectors/fuses etc (this can cause the Fishfinder applications to stop scrolling or the unit to reset/turn off), replace if necessary.</li> </ol> |
| Transducer location                                                                 | <p>Check that the transducer has been installed in accordance with the instructions provided with the transducer.</p> <p>If a transom mount transducer is mounted too high on the transom it may be lifting out of the water, check that the transducer face is fully submerged when planing and turning.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Transducer kicked-up                                                                | If the transducer has a kick-up mechanism, check that it has not kicked up due to hitting an object.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Damaged or fouled transducer                                                        | Check the condition of the transducer ensuring it is not damaged and is free from debris / fouling.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Damaged transducer cable                                                            | Check that the transducer cable and connection is free from damage and that the connections are secure and free from corrosion.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Turbulence around the transducer at higher speeds may affect transducer performance | Slow vessel speed and recheck.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Interference from another transducer                                                | <ol style="list-style-type: none"> <li>1. Turn off the transducer causing the interference.</li> <li>2. Reposition the transducers so they are further apart.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Unit power supply fault                                                             | Check the voltage from the power supply, if this is too low it can affect the transmitting power of the unit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

### Incorrect speed reading (from DST transducer)

| Possible causes       | Possible solutions                    |
|-----------------------|---------------------------------------|
| Paddle wheel fault    | Check that the paddle wheel is clean. |
| No speed offset set   | Add speed offset.                     |
| Incorrect calibration | Re-calibrate equipment                |

| Possible causes                                    | Possible solutions                                                                   |
|----------------------------------------------------|--------------------------------------------------------------------------------------|
| Transducer does not have a speed element           | Install transducer with speed element to enable speed readings.                      |
| Incorrect transducer selected (no speed displayed) | Select a transducer that supports speed measurement from the Transducer Set-Up menu. |




## 7.6 Sonar crosstalk interference

There are 2 types of potential sonar crosstalk interference in a Raymarine sonar system:

1. **SideVision** sonar crosstalk interference
2. Multiple sonar crosstalk interference

The types of crosstalk interference that you may experience in your system depend on the combination and type of sonar equipment installed, and the way in which the equipment has been installed.
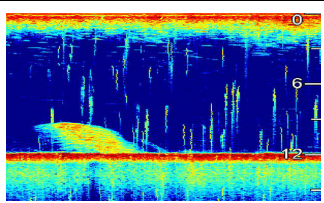
| SideVision sonar crosstalk interference                                                                                                                                                                                                                                                                                                                                                                                                                      | Multiple sonar crosstalk interference                                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                        |
| Due to the high sensitivity of <b>SideVision</b> transducers, you may experience some minor crosstalk interference between the left and right receiving channels in areas of strong target returns. Examples of strong target returns include solid objects such as underwater bridge structure. This interference shows up in the Fishfinder application as subtle reflections from the right sonar image displayed in the left sonar image, or vice versa. | When using multiple sonar modules and transducers operating in overlapping frequency ranges, you may experience some crosstalk interference between the ranges. This interference is displayed in the Fishfinder application as vertical “rain drops” throughout the water column. These vertical “rain drops” indicate that 2 sonar modules are operating in close frequency proximity to one another. |

### SideVision sonar crosstalk interference

Crosstalk interference is expected behavior in a high sensitivity device such as a **SideVision** transducer, and is not indicative of a fault with your transducer or sonar module.

### Reducing multiple sonar crosstalk interference

Crosstalk interference in systems with multiple sonar modules and transducers is the result of a number of factors, including installation, operation, and environment.

- **Choose an equipment combination that minimizes overlapping frequencies.** Wherever possible, choose to use sonar modules and transducers that operate in different frequency ranges (“Channels”), for example CP100 and CP300 sonar modules and CPT-100 and B744V transducers. This will help to ensure that each component is operating in a distinct relative frequency range – for example, a “high” frequency range for the CP100 and a “low” frequency range for the CP300.
- **Only use the sonar channels that you really need.** Although it is possible to run multiple sonar

modules simultaneously in a Raymarine system, it may not always be necessary to do so. If you are in a scenario that requires only one sonar module to be active at a time, disable any other sonar modules by changing the Fishfinder application pane to a single one which only displays the output from one sonar module. Alternatively, disable the ping for any unused sonar modules by selecting **MENU > Channel > Ping > OFF** in the Fishfinder application.

- **Identify the sonar module and transducer that is causing the interference.** To do this, disable the ping or remove the power for one of the sonar modules in your system. If the interference in the Fishfinder application disappears immediately, you now know which device is causing the interference. If the interference doesn’t disappear, repeat the exercise again with the other sonar module(s) in your system, one at a time. Once you know which device is causing the interference, proceed with the following methods to reduce the interference from the relevant device.
- **Adjust the Interference Rejection Filter.** The default setting for all Raymarine MFDs is “Auto”. Changing this setting to “High” might help to reduce interference (**MENU > Setup > Sounder Setup > Interference Rejection**). Note that the Interference Rejection Filter setting is not available for all sonar modules.
- **Decrease the power output of the interfering transducer.** Adjusting the “Power Mode” in the Sensitivity Settings in the MFD’s Fishfinder application can help to minimize the presence of crosstalk interference (**MENU > Sensitivity Settings > Power Mode**). Note that the Power Mode setting is not available for all transducers.
- **Ensure that you have a common RF ground point for all electrical equipment on your vessel.** On vessels without an RF ground system, ensure all product drain wires (where available) are connected directly to the negative battery terminal. Ineffective RF grounding can cause electrical interference which may in turn result in sonar crosstalk interference.
- **Increase the physical distance between your sonar modules.** Electrical interference may be occurring between a cable on one sonar module, and a cable on a different sonar module. Ensure that your sonar modules are physically located as far away from each other as possible.
- **Increase the physical distance between your sonar transducers.** Electrical and / or acoustic interference may be occurring between the different transducers in your system. Ensure that your transducers are physically located as far away from each other as possible.

**Note:** Given the effort and potential difficulties involved in relocating sonar equipment, it should only be considered as a last resort when you judge the interference to be a significant problem which cannot be resolved using the methods described above.

**Note:** Due to physical size and other constraints that vary from vessel to vessel, it may not be possible to completely eliminate crosstalk interference from your system. However, this will not impede your ability to benefit from the full capabilities of your sonar system. Being able to easily identify the way in which interference is displayed in the Fishfinder application can sometimes be the best and easiest route to dealing with it.

## 7.7 Thermal camera troubleshooting

Problems with the thermal camera and their possible causes and solutions are described here.

| Problem                                                            | Possible causes                                                                    | Possible solutions                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Video not displayed.                                               | Camera is in Standby mode.                                                         | The camera will not display video if it is in Standby mode. Use the camera controls (either the thermal camera application or JCU) to “wake” the camera from standby.                                                                                                                                    |
|                                                                    | Problem with the thermal camera video connections.                                 | <ul style="list-style-type: none"> <li>• Check thermal camera video cables are sound and properly connected.</li> <li>• Ensure that the video is connected into video input 1 at the multifunction display or GVM.</li> <li>• Ensure that the correct video input is selected at the display.</li> </ul> |
|                                                                    | Problem with power supply to the camera or JCU (if used as the primary controller) | <ul style="list-style-type: none"> <li>• Check the power connections to the camera and JCU / PoE injector (if used).</li> <li>• Ensure that the power switch / breaker is on.</li> <li>• Check the fuse / breaker state.</li> </ul>                                                                      |
| Cannot control thermal camera from Raymarine display or keyboard.  | Thermal camera application is not running.                                         | Ensure the thermal camera application is running on the multifunction display (as oppose to the video application which does not have camera controls).                                                                                                                                                  |
| Erratic or unresponsive controls.                                  | Network problem.                                                                   | Check that the controller and thermal camera are correctly connected to the network. (Note: This may be a direct connection or via a Raymarine network switch.)                                                                                                                                          |
|                                                                    |                                                                                    | Check the status of the Raymarine network switch.                                                                                                                                                                                                                                                        |
|                                                                    |                                                                                    | Check that SeaTalk <sup>hs</sup> / RayNet cables are free from damage.                                                                                                                                                                                                                                   |
|                                                                    | Control conflict, e.g. caused by multiple users at different stations.             | Ensure that no other controllers are in use at the same time.                                                                                                                                                                                                                                            |
|                                                                    | Problem with the controller.                                                       | Check power / network cabling to the controller and PoE injector (PoE only used with optional Joystick Control Unit).                                                                                                                                                                                    |
|                                                                    |                                                                                    | Check other controllers if available. If other controllers are operating this will eliminate the possibility of a more fundamental camera fault.                                                                                                                                                         |
| Cannot switch between thermal and visible (VIS / IR) video image . | Camera is not a dual payload model.                                                | Only “dual payload” (dual lens) thermal cameras support VIS / IR switching.                                                                                                                                                                                                                              |
|                                                                    | VIS / IR cable not connected.                                                      | Ensure that the VIS / IR cable is connected from the camera to the Raymarine system. (The IR-only cable does not support switching).                                                                                                                                                                     |
| Noisy image.                                                       | Poor quality or faulty video cable.                                                | Ensure that the video cable is no longer than necessary. The longer the cable is (or the smaller the wire gauge / thickness), the more severe the losses become. Use only high quality shielded cable suitable for a marine environment.                                                                 |
|                                                                    | Cable is picking up electromagnetic interference (EMI) from another device.        | <ul style="list-style-type: none"> <li>• Ensure you are using a high quality shielded cable.</li> <li>• Ensure proper cable separation, for example do not run data and power cables in close proximity with each other.</li> </ul>                                                                      |

| Problem                          | Possible causes                                                                        | Possible solutions                                                                                                                                                                                                                     |
|----------------------------------|----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Image too dark or too light.     | Display brightness is set too low.                                                     | Use the brightness controls at the display to adjust accordingly.                                                                                                                                                                      |
|                                  | The contrast or brightness settings in the thermal camera application are set too low. | Use the appropriate menu in the thermal camera application to adjust the contrast and brightness of the image.                                                                                                                         |
|                                  | The Scene Mode is not appropriate for the current conditions.                          | A particular environment may benefit from a different Scene Mode setting. For example, a very cold background (such as the sky) could cause the camera to use a wider temperature range than appropriate. Use the <b>SCENE</b> button. |
| Image freezes momentarily.       | FFC (Flat Field Correction).                                                           | The image will pause momentarily on a periodic basis during the Flat Field Correction (FFC) cycle. Just prior to the FFC, a small green square will appear in the upper left corner of the screen.                                     |
| Image is inverted (upside down). | Camera “Ball down” setting is incorrect.                                               | Ensure that the Ball down setting within the thermal camera system setup menu is set correctly.                                                                                                                                        |

## 7.8 System data troubleshooting

Aspects of the installation can cause problems with the data shared between connected equipment. Such problems, their possible causes and solutions are described here.

| Problem                                                                    | Possible causes                                                             | Possible solutions                                                                                                                                                    |
|----------------------------------------------------------------------------|-----------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Instrument, engine or other system data is unavailable at all displays.    | Data is not being received at the display.                                  | Check the data bus (e.g. <b>SeaTalk<sup>ng</sup></b> ) wiring and connections.                                                                                        |
|                                                                            |                                                                             | Check the overall integrity of the data bus (e.g. <b>SeaTalk<sup>ng</sup></b> ) wiring.                                                                               |
|                                                                            |                                                                             | If available refer to the reference guide for the data bus (e.g. <b>SeaTalk<sup>ng</sup></b> reference manual).                                                       |
|                                                                            | Data source (e.g. instrument display or engine interface) is not operating. | Check the source of the missing data (e.g. instrument display or engine interface).                                                                                   |
|                                                                            |                                                                             | Check the power to the <b>SeaTalk</b> bus.                                                                                                                            |
|                                                                            |                                                                             | Refer to the manufacturer's handbook for the equipment in question.                                                                                                   |
|                                                                            | Software mismatch between equipment may prevent communication.              | Contact Raymarine technical support.                                                                                                                                  |
| Instrument or other system data is missing from some but not all displays. | Network problem.                                                            | Check that all required equipment is connected to the network.                                                                                                        |
|                                                                            |                                                                             | Check the status of the Raymarine network Switch.                                                                                                                     |
|                                                                            |                                                                             | Check that <b>SeaTalk<sup>hs</sup></b> / <b>RayNet</b> cables are free from damage.                                                                                   |
|                                                                            | Software mismatch between equipment may prevent communication.              | Contact Raymarine technical support.                                                                                                                                  |
| Position data is not displayed on VHF radio                                | VHF radio <b>NMEA 0183</b> input not isolated / incorrect polarity          | <ul style="list-style-type: none"> <li>• Check that the radio has an Isolated <b>NMEA 0183</b> input.</li> <li>• Check polarity of <b>NMEA 0183</b> wires.</li> </ul> |

# 7.9 Video troubleshooting

Problems with the video inputs and their possible causes and solutions are described here.

| Problem                                                    | Possible causes           | Possible solutions                                            |
|------------------------------------------------------------|---------------------------|---------------------------------------------------------------|
| No signal message on screen<br>(video image not displayed) | Cable or connection fault | Check that the connections are sound and free from corrosion. |

## 7.10 Wi-Fi troubleshooting

Aspects of the installation can cause problems with the data shared between wireless devices. Such problems, their possible causes and solutions are described here.

| Problem                                                                                                          | Possible causes                                                                                     | Possible solutions                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No wireless connection.                                                                                          | Tablet / smartphone does not have a wireless connection established with the multifunction display. | Ensure that Wi-Fi is enabled on the MFD.                                                                                                                                                                                                                                                         |
|                                                                                                                  |                                                                                                     | Ensure that the "Wi-Fi" option is enabled on the Smart Device (available from the phone's Settings menu).                                                                                                                                                                                        |
|                                                                                                                  |                                                                                                     | Ensure that the Raymarine connection is selected as the Wi-Fi network. If a passcode has been specified for the multifunction display's Wi-Fi connection ensure that the same passcode is entered into the Smart Device when prompted.                                                           |
| No Raymarine app on device.                                                                                      | Tablet / smartphone does not have Raymarine app installed and running.                              | Download the required Raymarine app from the relevant application store.                                                                                                                                                                                                                         |
|                                                                                                                  | Mobile applications are NOT enabled on the multifunction display.                                   | Start the Raymarine app on your device.                                                                                                                                                                                                                                                          |
| Raymarine app runs slowly or not at all.                                                                         | Device not compatible with Raymarine app.                                                           | Enable "Viewing only" or "Remote Control" as required in the Mobile Apps setting.                                                                                                                                                                                                                |
|                                                                                                                  | MFD software incompatible with mobile application.                                                  | Recommended device requirements:<br><ul style="list-style-type: none"> <li>• iOS Devices = Best performance achieved on iPhone 4 or later and iPad 2 or later.</li> <li>• Android/Kindle Fire = Best performance achieved with 1GHz processor and better and running 2.2.2. or later.</li> </ul> |
| No waypoint / routes synchronization with Navionics Marine app.                                                  | Smartphone / tablet does not have "Navionics Marine" app installed and running.                     | Ensure your MFD contains software application version 3.15 or later.                                                                                                                                                                                                                             |
|                                                                                                                  | Chart application is not running on the multifunction display.                                      | Download the "Navionics Marine" app from the relevant app store.                                                                                                                                                                                                                                 |
| Weak or intermittent Wi-Fi signal.                                                                               | Interference from other wireless devices in the vicinity.                                           | Start the "Navionics Marine" app on the device.                                                                                                                                                                                                                                                  |
|                                                                                                                  |                                                                                                     | Start the chart application on the multifunction display.                                                                                                                                                                                                                                        |
| Weak or intermittent Wi-Fi signal.                                                                               | Interference from other wireless devices in the vicinity.                                           | Multiple wireless devices running simultaneously (such as laptops, phones, and other wireless devices) can sometimes cause wireless signal conflicts. Temporarily disable each wireless device in turn until you have identified the device causing the interference.                            |
| Smartphone / tablet can no longer connect to the internet or receive e-mails after using a Raymarine mobile app. | Device still connected to the multifunction display.                                                | Ensure the access point on your Smart Device is switched back to your previous access point (e.g. the marina Wi-Fi).                                                                                                                                                                             |

## 7.11 Bluetooth troubleshooting

Aspects of the installation can cause problems with the data shared between wireless devices. Such problems, their possible causes and solutions are described here.

| Problem                                | Possible causes                                                                                                             | Possible solutions                                                                                                                                                                                                                                                    |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No wireless connection.                | Smart Device does not have a Bluetooth connection established with the multifunction display.                               | Ensure that Bluetooth is enabled on the MFD.                                                                                                                                                                                                                          |
|                                        |                                                                                                                             | Ensure that the “Bluetooth” option is enabled on the Smart Device (available from the phone's Settings / General menu).                                                                                                                                               |
|                                        |                                                                                                                             | Ensure that the Bluetooth device is paired with the MFD that you want to use it with.                                                                                                                                                                                 |
| No media player control.               | Media player device is not compatible with the Bluetooth 2.1+ EDR power class 1.5 (supported profile: AVRCP 1.0) or higher. | Check the Bluetooth compatibility with the device manufacturer. If the device is not Bluetooth 2.1+ EDR power class 1.5 (supported profile: AVRCP 1.0) compatible then it is not suitable for wireless use with the multifunction display.                            |
|                                        | “Audio Control” is NOT enabled on the multifunction display.                                                                | Enable “Audio Control”.                                                                                                                                                                                                                                               |
| Weak or intermittent Bluetooth signal. | Interference from other wireless devices in the vicinity.                                                                   | Multiple wireless devices running simultaneously (such as laptops, phones, and other wireless devices) can sometimes cause wireless signal conflicts. Temporarily disable each wireless device in turn until you have identified the device causing the interference. |



## 7.12 Touchscreen troubleshooting

Problems with the touchscreen and their possible causes and solutions are described here.

| Problem                                   | Possible causes                                                                    | Possible solutions                                                                                                 |
|-------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Touchscreen does not operate as expected. | Touch lock is enabled.                                                             | Use the Joystick to turn off the touch lock on the home screen.                                                    |
|                                           | Screen is not being operated with bare fingers, for example gloves are being worn. | Bare fingers must make contact with the screen for correct operation. Alternatively you may use conductive gloves. |
|                                           | Touchscreen requires calibration.                                                  | Use the setup menus to calibrate the touchscreen.                                                                  |
|                                           | Saltwater deposits on the screen.                                                  | Carefully clean and dry the screen in accordance with the instructions provided.                                   |

## 7.13 Touchscreen alignment

If the touchscreen is misaligned to your touch, you can realign it to improve the accuracy.

Realignment involves a simple exercise to align an on-screen object with your touch. For best results, perform this exercise when your vessel is anchored or moored.

**Note:** This only applies to touchscreen multifunction displays.

### Aligning the touchscreen

With the homescreen displayed:

1. Select **Set-up**.
2. Select **Maintenance**.
3. Select **Touchscreen Alignment**.
4. Place your finger over the on-screen object momentarily, then remove it.
5. Repeat the action a further 3 times.
6. If the operation was successful, an "Alignment Completed" message is displayed.
7. Select **Exit** to return to the Maintenance menu.
8. If the operation was unsuccessful at any point during the alignment exercise, an "Incorrect touch detected" message is displayed, the alignment exercise is repeated.
9. After 2 failed alignment exercises you may be asked to perform a precision alignment exercise.

## 7.14 Miscellaneous troubleshooting

Miscellaneous problems and their possible causes and solutions are described here.

| Problem                                                                                                                                                        | Possible causes                                 | Possible solutions                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display behaves erratically: <ul style="list-style-type: none"><li>• Frequent unexpected resets.</li><li>• System crashes or other erratic behavior.</li></ul> | Intermittent problem with power to the display. | Check relevant fuses and breakers.                                                                                                                                                                                |
|                                                                                                                                                                |                                                 | Check that the power supply cable is sound and that all connections are tight and free from corrosion.                                                                                                            |
|                                                                                                                                                                |                                                 | Check that the power source is of the correct voltage and sufficient current.                                                                                                                                     |
|                                                                                                                                                                | Software mismatch on system (upgrade required). | Go to <a href="http://www.raymarine.com">www.raymarine.com</a> and click on support for the latest software downloads.                                                                                            |
|                                                                                                                                                                | Corrupt data / other unknown issue.             | Perform a factory reset. <div><b>Important:</b> This will result in the loss of any settings and data (such as waypoints) stored on the product. Save any important data to a memory card before resetting.</div> |



## Chapter 8: Technical specification

### Chapter contents

- [8.1 Technical specification on page 86](#)

## 8.1 Technical specification

### Physical specifications

|                           | gS95                                                                                                                                                                                                                     | gS125                                                                                                                                                                                                                     |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Dimensions</b>         | <ul style="list-style-type: none"> <li>Width: 246.8 mm (9.7 in.)</li> <li>Height: 188.2 mm (7.4 in.)</li> <li>Depth (NOT including cables): 77 mm (3 in.)</li> <li>Depth (including cables): 198 mm (7.8 in.)</li> </ul> | <ul style="list-style-type: none"> <li>Width: 311.8 mm (12.3 in.)</li> <li>Height: 237.1 mm (9.3 in.)</li> <li>Depth (NOT including cables): 78 mm (3 in.)</li> <li>Depth (including cables): 198 mm (7.8 in.)</li> </ul> |
| <b>Weight (bare unit)</b> | 3 Kg (6.63 lbs)                                                                                                                                                                                                          | 3.9 Kg (8.6 lbs)                                                                                                                                                                                                          |

|                           | gS165                                                                                                                                                                                                                    | gS195                                                                                                                                                                                                                        |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Dimensions</b>         | <ul style="list-style-type: none"> <li>Width: 383.2 mm (15 in.)</li> <li>Height: 284.7 mm (11.2 in.)</li> <li>Depth (NOT including cables): 77 mm (3 in.)</li> <li>Depth (including cables): 198 mm (7.8 in.)</li> </ul> | <ul style="list-style-type: none"> <li>Width: 433.9 mm (17 in.)</li> <li>Height: 391.2 mm (15.4 in.)</li> <li>Depth (NOT including cables): 83.9 mm (3.3 in.)</li> <li>Depth (including cables): 198 mm (7.8 in.)</li> </ul> |
| <b>Weight (bare unit)</b> | 5.2 Kg (11.5 lbs)                                                                                                                                                                                                        | 9.6 Kg (21.2 lbs)                                                                                                                                                                                                            |

### Power specification

|                                        |                                                                                                                                                          |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Nominal supply voltage</b>          | 12 V dc to 24 V dc                                                                                                                                       |
| <b>Operating voltage range</b>         | 10.8 V dc to 31.2 V dc                                                                                                                                   |
| <b>Fuse / Breakers</b>                 | In-line fuse (fitted within power cable) <ul style="list-style-type: none"> <li>15 A. (Standard 20 mm glass fuse)</li> </ul>                             |
| <b>Power consumption (without PoE)</b> | <b>gS95</b> <ul style="list-style-type: none"> <li>Full brightness: 19.5 W Max</li> <li>PowerSave mode: 12.8 W Max</li> <li>Standby: 5 W Max</li> </ul>  |
|                                        | <b>gS125</b> <ul style="list-style-type: none"> <li>Full brightness: 29.6 W Max</li> <li>PowerSave mode: 12.4 W Max</li> <li>Standby: 5 W Max</li> </ul> |

|                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>gS165</b> <ul style="list-style-type: none"> <li>Full brightness: 56.2 W Max</li> <li>PowerSave mode: 15.1 W Max</li> <li>Standby: 5 W Max</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>gS195</b> <ul style="list-style-type: none"> <li>Full brightness: 64.8 W Max</li> <li>PowerSave mode: 15.8 W Max</li> <li>Standby: 5 W Max</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|

### Power consumption (with PoE)

|                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>gS95</b> <ul style="list-style-type: none"> <li>Full brightness: 44.9 W Max</li> <li>PowerSave mode: 37.9 W Max</li> <li>Standby: 40 W Max</li> </ul> |
|----------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>gS125</b> <ul style="list-style-type: none"> <li>Full brightness: 57.1 W Max</li> <li>PowerSave mode: 40.1 W Max</li> <li>Standby: 40 W Max</li> </ul> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                                                                         |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>gS165</b> <ul style="list-style-type: none"> <li>Full brightness: 85.7 W Max</li> <li>PowerSave mode: 43 W Max</li> <li>Standby: 40 W Max</li> </ul> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------|

|                                                                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>gS195</b> <ul style="list-style-type: none"> <li>Full brightness: 100.7 W Max</li> <li>PowerSave mode: 44.5 W Max</li> <li>Standby: 40 W Max</li> </ul> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|

**LEN** (Refer to Seata<sup>ng</sup> reference manual for further information).

1

**Note:** Figures with PoE represent a full load of 20 W PoE)

### Environmental specification

Environmental specifications below apply to all display variants

|                              |                                     |
|------------------------------|-------------------------------------|
| <b>Operating temperature</b> | -25 °C to +55 °C (-13 °F to 131 °F) |
| <b>Storage temperature</b>   | -30 °C to +70 °C (-22 °F to 158 °F) |

|                   |             |
|-------------------|-------------|
| Relative humidity | Maximum 75% |
| Waterproof rating | IPX6        |

## Display specification

|                                              | gS95                    | gS125                    |
|----------------------------------------------|-------------------------|--------------------------|
| Size                                         | 9 in.                   | 12.1 in.                 |
| Type                                         | TFT backlit LED         | TFT backlit LED          |
| Color depth                                  | 24-bit                  | 24-bit                   |
| Resolution                                   | 800 x 480 pixels (WVGA) | 1280 x 800 pixels (WVGA) |
| Aspect Ratio                                 | 16:9                    | 16:9                     |
| Maximum allowable wrongly illuminated pixels | 8                       | 8                        |

|                                              | gS165                    | gS195                     |
|----------------------------------------------|--------------------------|---------------------------|
| Size                                         | 15.4 in.                 | 19 in.                    |
| Type                                         | TFT backlit LED          | TFT backlit LED           |
| Color depth                                  | 24-bit                   | 24-bit                    |
| Resolution                                   | 1280 x 800 pixels (WVGA) | 1280 x 1024 pixels (SXGA) |
| Aspect Ratio                                 | 16:9                     | 4:3                       |
| Maximum allowable wrongly illuminated pixels | 8                        | 5                         |

## Data connections

### Wired connections

|                                  |                                                                                                                                                                                                                                                     |
|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NMEA 0183                        | 2x NMEA 0183 ports: <ul style="list-style-type: none"> <li>NMEA port 1: Input and output, 4800 / 38400 baud</li> <li>NMEA port 2: Input only, 4800 / 38400 baud</li> </ul>                                                                          |
| Network (SeaTalk <sup>hs</sup> ) | <ul style="list-style-type: none"> <li><b>gS95, gS125, gS165</b> – 3 x RayNet SeaTalk<sup>hs</sup> ports. 10 / 100 / 1000 Mbits/s with PoE</li> <li><b>gS195</b>– 2x RayNet SeaTalk<sup>hs</sup> ports. 10 / 100 / 1000 Mbits/s with PoE</li> </ul> |
| SeaTalk <sup>ng</sup>            | 1 x SeaTalk <sup>ng</sup> connection                                                                                                                                                                                                                |
| Remote Card Reader               | 1 x Remote Card Reader connection                                                                                                                                                                                                                   |
| Alarm                            | 1 x Alarm output                                                                                                                                                                                                                                    |

### Wireless connections

|           |                                |
|-----------|--------------------------------|
| Wi-Fi     | 802.11 b / g                   |
| Bluetooth | AVRCP 2.1+ EDR power class 1.5 |

## Video specification

|                   |                                                                                                                                                             |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Format            | PAL or NTSC                                                                                                                                                 |
| Connector type    | <ul style="list-style-type: none"> <li>1 x HDMI output</li> <li>*1 x BNC connector (HD-SDI input gS195 only)</li> <li>2 x composite video inputs</li> </ul> |
| Output resolution | 720p (fixed)                                                                                                                                                |

## Internal storage

Multifunction displays (**MFDs**) include internal storage that can be used to store recorded video and photos taken using the Camera application. The table below shows the approximate available internal storage space for **LightHouse™** powered **MFDs**.

| MFD variant                              | Approximate available internal storage | Approximate record time (CAM200IP) |
|------------------------------------------|----------------------------------------|------------------------------------|
| <b>a Series</b>                          | 2 GB                                   | 88.8 minutes                       |
| <b>c Series</b>                          | 2 GB                                   | 88.8 minutes                       |
| <b>e Series</b> (excluding <b>e165</b> ) | 2 GB                                   | 88.8 minutes                       |
| <b>e165</b>                              | 6 GB                                   | 266.6 minutes                      |
| <b>gS Series</b>                         | 14 GB                                  | 622.2 minutes                      |
| <b>eS Series</b>                         | 6 GB                                   | 266.6 minutes                      |

### Note:

- The available internal storage stated above is based on **MFD** manufactured after May 2014. Available storage on displays manufactured prior to this date may vary.
- Available internal storage space is subject to change without prior notice.
- The approximate record times stated above were taken using a **CAM200IP** set to its default resolution of 720p. Increasing image resolution and other factors such as lighting conditions may affect the resulting filesize and therefor reduce the available record time.

## HD-SDI interface specification

The HD-SDI interface specification for the gS195 is below.

|                  |                                                                                                     |
|------------------|-----------------------------------------------------------------------------------------------------|
| Format           | PAL or NTSC                                                                                         |
| Connector type   | BNC connectors (75 ohm nominal impedance)                                                           |
| Input resolution | <ul style="list-style-type: none"> <li>720p (up to 60 fps)</li> <li>1080p (up to 30 fps)</li> </ul> |
| Camera audio     | No                                                                                                  |

## Electronic chart specification

|                                          |                                                                                                                                                                                                                                                                                    |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Embedded electronic charts</b>        | <ul style="list-style-type: none"><li>• LightHouse Charts world base map.</li><li>• Navionics world base map.</li><li>• Jeppesen world base map</li></ul>                                                                                                                          |
| <b>Compatible LightHouse cartography</b> | <ul style="list-style-type: none"><li>• Vector — LightHouse charts</li><li>• Raster — LightHouse charts</li></ul>                                                                                                                                                                  |
| <b>Compatible Navionics cartography</b>  | <ul style="list-style-type: none"><li>• Navionics Ready to Navigate</li><li>• Navionics Silver</li><li>• Navionics Gold</li><li>• Navionics Gold+</li><li>• Navionics Platinum</li><li>• Navionics Platinum+</li><li>• Navionics Fish'N Chip</li><li>• Navionics Hotmaps</li></ul> |
| <b>Compatible Jeppesen cartography</b>   | <ul style="list-style-type: none"><li>• C-MAP Essentials</li><li>• C-MAP 4D MAX</li><li>• C-MAP 4D MAX+</li></ul>                                                                                                                                                                  |

### Note:

Refer to the Raymarine website ([www.raymarine.com](http://www.raymarine.com)) for the latest list of supported charts.

## Conformance specification

Conformance certification applies to all display variants

|                    |                                                                                                                                                                                                                                                                                                            |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Conformance</b> | <ul style="list-style-type: none"><li>• NMEA 2000 certification</li><li>• WiFi Alliance certification</li><li>• Bluetooth certification</li><li>• Europe: 1999/5/EC</li><li>• Australia and New Zealand: C-Tick, Compliance Level 2</li><li>• FCC 47CFR part 15</li><li>• Industry Canada RSS210</li></ul> |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



## Chapter 9: Technical support

### Chapter contents

- [9.1 Raymarine product support and servicing on page 90](#)
- [9.2 Learning resources on page 91](#)
- [9.3 Third-party support on page 91](#)

## 9.1 Raymarine product support and servicing

Raymarine provides a comprehensive product support service, as well as warranty, service, and repairs. You can access these services through the Raymarine website, telephone, and e-mail.

### Product information

If you need to request service or support, please have the following information to hand:

- Product name.
- Product identity.
- Serial number.
- Software application version.
- System diagrams.

You can obtain this product information using the menus within your product.

### Servicing and warranty

Raymarine offers dedicated service departments for warranty, service, and repairs.

Don't forget to visit the Raymarine website to register your product for extended warranty benefits: <http://www.raymarine.co.uk/display/?id=788>.

| Region                                      | Tele-phone          | E-mail                                                                     |
|---------------------------------------------|---------------------|----------------------------------------------------------------------------|
| United Kingdom (UK), EMEA, and Asia Pacific | +44 (0)1329 246 932 | <a href="mailto:emea.service@raymarine.com">emea.service@raymarine.com</a> |
| United States (US)                          | +1 (603) 324 7900   | <a href="mailto:rm-usrepair@flir.com">rm-usrepair@flir.com</a>             |

### Web support

Please visit the "Support" area of the Raymarine website for:

- **Manuals and Documents** — <http://www.raymarine.co.uk/display/?id=10125>
- **FAQ / Knowledgebase** — <http://www.raymarine.co.uk/knowledgebase/>
- **Technical support forum** — <http://raymarine.ning.com/>
- **Software updates** — <http://www.raymarine.com/software>

### Telephone and e-mail support

| Region                                      | Tele-phone                                      | E-mail                                                                 |
|---------------------------------------------|-------------------------------------------------|------------------------------------------------------------------------|
| United Kingdom (UK), EMEA, and Asia Pacific | +44 (0)1329 246 777                             | <a href="mailto:support.uk@raymarine.com">support.uk@raymarine.com</a> |
| United States (US)                          | +1 (603) 324 7900<br>(Toll-free: +800 539 5539) | <a href="mailto:support@raymarine.com">support@raymarine.com</a>       |

| Region                    | Tele-phone           | E-mail                                                                                             |
|---------------------------|----------------------|----------------------------------------------------------------------------------------------------|
| Australia and New Zealand | +61 2 8977 0300      | <a href="mailto:aus.support@raymarine.com">aus.support@raymarine.com</a><br>(Raymarine subsidiary) |
| France                    | +33 (0)1 46 49 72 30 | <a href="mailto:support.fr@raymarine.com">support.fr@raymarine.com</a><br>(Raymarine subsidiary)   |
| Germany                   | +49 (0)40 237 808 0  | <a href="mailto:support.de@raymarine.com">support.de@raymarine.com</a><br>(Raymarine subsidiary)   |
| Italy                     | +39 02 9945 1001     | <a href="mailto:support.it@raymarine.com">support.it@raymarine.com</a><br>(Raymarine subsidiary)   |
| Spain                     | +34 96 2965 102      | <a href="mailto:sat@azimut.es">sat@azimut.es</a><br>(Authorized Raymarine distributor)             |
| Netherlands               | +31 (0)26 3614 905   | <a href="mailto:support.nl@raymarine.com">support.nl@raymarine.com</a><br>(Raymarine subsidiary)   |
| Sweden                    | +46 (0)317 633 670   | <a href="mailto:support.se@raymarine.com">support.se@raymarine.com</a><br>(Raymarine subsidiary)   |
| Finland                   | +358 (0)207 619 937  | <a href="mailto:support.fi@raymarine.com">support.fi@raymarine.com</a><br>(Raymarine subsidiary)   |
| Norway                    | +47 692 64 600       | <a href="mailto:support.no@raymarine.com">support.no@raymarine.com</a><br>(Raymarine subsidiary)   |
| Denmark                   | +45 437 164 64       | <a href="mailto:support.dk@raymarine.com">support.dk@raymarine.com</a><br>(Raymarine subsidiary)   |
| Russia                    | +7 495 788 0508      | <a href="mailto:info@mikstmarine.ru">info@mikstmarine.ru</a><br>(Authorized Raymarine distributor) |

### Viewing product information


With the homescreen displayed:

1. Select **Set-up**.
2. Select **Maintenance**.
3. Select **Diagnostics**.
4. Select **Select Device**.
5. Select the relevant product from the list.
6. Select **Show All Data**.

## 9.2 Learning resources

Raymarine has produced a range of learning resources to help you get the most out of your products.

### Video tutorials
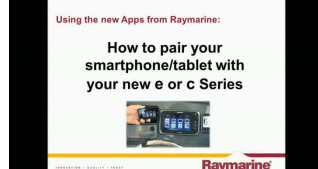
|                                                                                    |                                                                                                                                                                                          |
|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | Raymarine official channel on YouTube: <ul style="list-style-type: none"><li>• <a href="http://www.youtube.com/user/RaymarineInc">http://www.youtube.com/user/RaymarineInc</a></li></ul> |
|   | Video Gallery: <ul style="list-style-type: none"><li>• <a href="http://www.raymarine.co.uk/view/?id=2679">http://www.raymarine.co.uk/view/?id=2679</a></li></ul>                         |
|  | Product Support videos: <ul style="list-style-type: none"><li>• <a href="http://www.raymarine.co.uk/view/?id=4952">http://www.raymarine.co.uk/view/?id=4952</a></li></ul>                |

#### Note:

- Viewing the videos requires a device with an Internet connection.
- Some videos are only available in English.

### Training courses

Raymarine regularly runs a range of in-depth training courses to help you make the most of your products. Visit the Training section of the Raymarine website for more information:

- <http://www.raymarine.co.uk/view/?id=2372>

### FAQs and Knowledge Base

Raymarine has produced an extensive set of FAQs and a Knowledge Base to help you find more information and troubleshoot any issues.

- <http://www.raymarine.co.uk/knowledgebase/>

### Technical support forum

You can use the Technical support forum to ask a technical question about a Raymarine product or to find out how other customers are using their Raymarine equipment. The resource is regularly updated with contributions from Raymarine customers and staff:

- <http://raymarine.ning.com/>

## 9.3 Third-party support

Contact and support details for third-party suppliers can be found on the appropriate websites.

### Fusion

[www.fusionelectronics.com](http://www.fusionelectronics.com)

### Navionics

[www.navionics.com](http://www.navionics.com)

### Sirius

[www.sirius.com](http://www.sirius.com)



# Chapter 10: Spares and accessories

## Chapter contents

- [10.1 gS Series accessories on page 94](#)
- [10.2 gS Series spares on page 94](#)
- [10.3 Network hardware on page 95](#)
- [10.4 Network cable connector types on page 95](#)
- [10.5 \*\*RayNet\*\* to \*\*RayNet\*\* cables and connectors on page 96](#)
- [10.6 Network cable types on page 98](#)
- [10.7 SeaTalk<sup>ng</sup> cabling components on page 98](#)
- [10.8 SeaTalk<sup>ng</sup> cables and accessories on page 99](#)
- [10.9 SeaTalk accessories on page 100](#)

## 10.1 gS Series accessories

The following accessories are available for gS Series displays.


 
 
| Description                                      | Part number |
|--------------------------------------------------|-------------|
| RMK-9 remote keypad                              | A80217      |
| RCR-2 Remote Card Reader                         | A80218      |
| 5 m (16.4 ft) gS Series Video out cable (HDMI)   | A80219      |
| 2 m 6.6 ft) gS Series Video In / Alarm Out cable | A80235      |
| 1.5 m (4.9 ft) Straight power and data cable     | R62379      |
| 1.5 m (4.9 ft) Right angled power and data cable | R70029      |

## 10.2 gS Series spares

The following accessories are available for gS Series displays.



| Description                            | Part number |
|----------------------------------------|-------------|
| gS95 suncover                          | R70180      |
| gS125 suncover                         | R70181      |
| gS165 suncover                         | R70182      |
| gS195 suncover                         | R70290      |
| gS195 BNC (HD-SDI) protective boot kit | R70292      |
| Card reader door                       | R70183      |
| Card reader fitting kit                | R70184      |
| gS95 Mounting kit                      | A80220      |
| gS125 Mounting kit                     | A80263      |
| gS165 Mounting kit                     | A80264      |
| gS195 Mounting kit                     | R70291      |

## 10.3 Network hardware

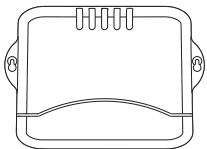
| Item                                                                                                                              | Part number | Notes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------------------------------------------------------|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HS5 RayNet network switch<br>                    | A80007      | 5-port switch for network connection of multiple devices featuring RayNet connectors. Equipment with RJ45 SeaTalk <sup>hs</sup> connectors can also be connected using suitable adapter cables.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| RJ45 SeaTalk <sup>hs</sup> network switch<br>    | E55058      | 8-port switch for network connection of multiple SeaTalk <sup>hs</sup> devices featuring RJ45 connectors.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| RJ45 SeaTalk <sup>hs</sup> crossover coupler<br> | E55060      | <ul style="list-style-type: none"> <li>Enables direct connection of RJ45 SeaTalk<sup>hs</sup> devices to smaller systems where a switch is not required.</li> <li>Enables the connection of RJ45 SeaTalk<sup>hs</sup> devices to a HS5 RayNet network switch (in conjunction with suitable adapter cables).</li> <li>Enables 2 RJ45 SeaTalk<sup>hs</sup> cables to be connected together to extend the length of the cabling.</li> </ul> <p>Recommended for internal installations.</p> <div style="border: 1px solid black; padding: 5px;"> <p><b>Important:</b> Do NOT use crossover devices for POE (Power Over Ethernet) connections.</p> </div> |
| Ethernet RJ45 coupler<br>                      | R32142      | <ul style="list-style-type: none"> <li>Enables direct connection of RJ45 SeaTalk<sup>hs</sup> devices to smaller systems where a switch is not required.</li> <li>Enables the connection of RJ45 SeaTalk<sup>hs</sup> devices to a HS5 RayNet network switch (in conjunction with suitable adapter cables).</li> <li>Enables 2 RJ45 SeaTalk<sup>hs</sup> cables to be connected together to extend the length of the cabling.</li> </ul> <p>Recommended for external installations.</p>                                                                                                                                                              |

## 10.4 Network cable connector types

  There are 2 types of network cable connector — SeaTalk<sup>hs</sup> and RayNet.

|                                                                                   |                                                                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>SeaTalk<sup>hs</sup> connector</b> — used for connecting SeaTalk <sup>hs</sup> devices to a Raymarine network switch via SeaTalk <sup>hs</sup> cables.                                                                                                                             |
|  | <b>RayNet connector</b> — used for connecting Raymarine network switches and SeaTalk <sup>hs</sup> devices to the multifunction display via RayNet cables. Also required for connecting a crossover coupler if only one device is being connected to the display's Network connector. |


10.5 RayNet to RayNet cables and connectors

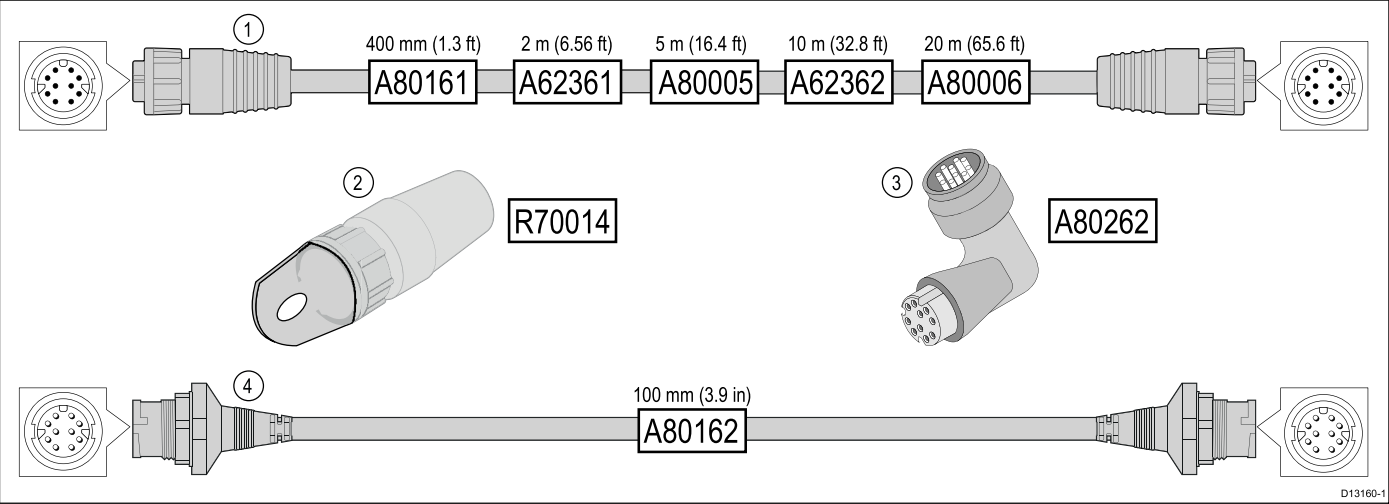

|   | Description                                                                                | Typical use                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Quantity |
|---|--------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| 1 | Standard <b>RayNet</b> connection cable with a <b>RayNet</b> (female) socket on both ends. | Suitable for connecting all <b>RayNet</b> equipment directly to <b>LightHouse</b> multifunction displays featuring a <b>RayNet</b> connector. Can also be used to connect <b>RayNet</b> equipment via a <b>RayNet</b> network switch (e.g. <b>HS5</b> ).                                                                                                                                                                                                            | 1        |
| 2 | <b>RayNet</b> cable puller (5 pack).                                                       | These “handles” securely attach to the twist-lock on <b>RayNet</b> cables, enabling you to pull the cables through conduits and other obstacles.                                                                                                                                                                                                                                                                                                                    | 5        |
| 3 | <b>RayNet</b> to <b>RayNet</b> right-angle coupler / adapter.                              | Suitable for connecting <b>RayNet</b> cables at 90° (right angle) to devices, for installations where space is limited. For example, use this adapter to connect a <b>RayNet</b> cable to a multifunction display when there is not enough space behind the display for the usual cable bend radius required by a standard <b>RayNet</b> cable. This adapter features a <b>RayNet</b> (female) socket at one end, and a <b>RayNet</b> (male) plug at the other end. | 1        |
| 4 | Adapter cable with a <b>RayNet</b> (male) plug on both ends.                               | Suitable for joining (female) <b>RayNet</b> cables together for longer cable runs.                                                                                                                                                                                                                                                                                                                                                                                  | 1        |



## RayNet to RJ45 adapter cables

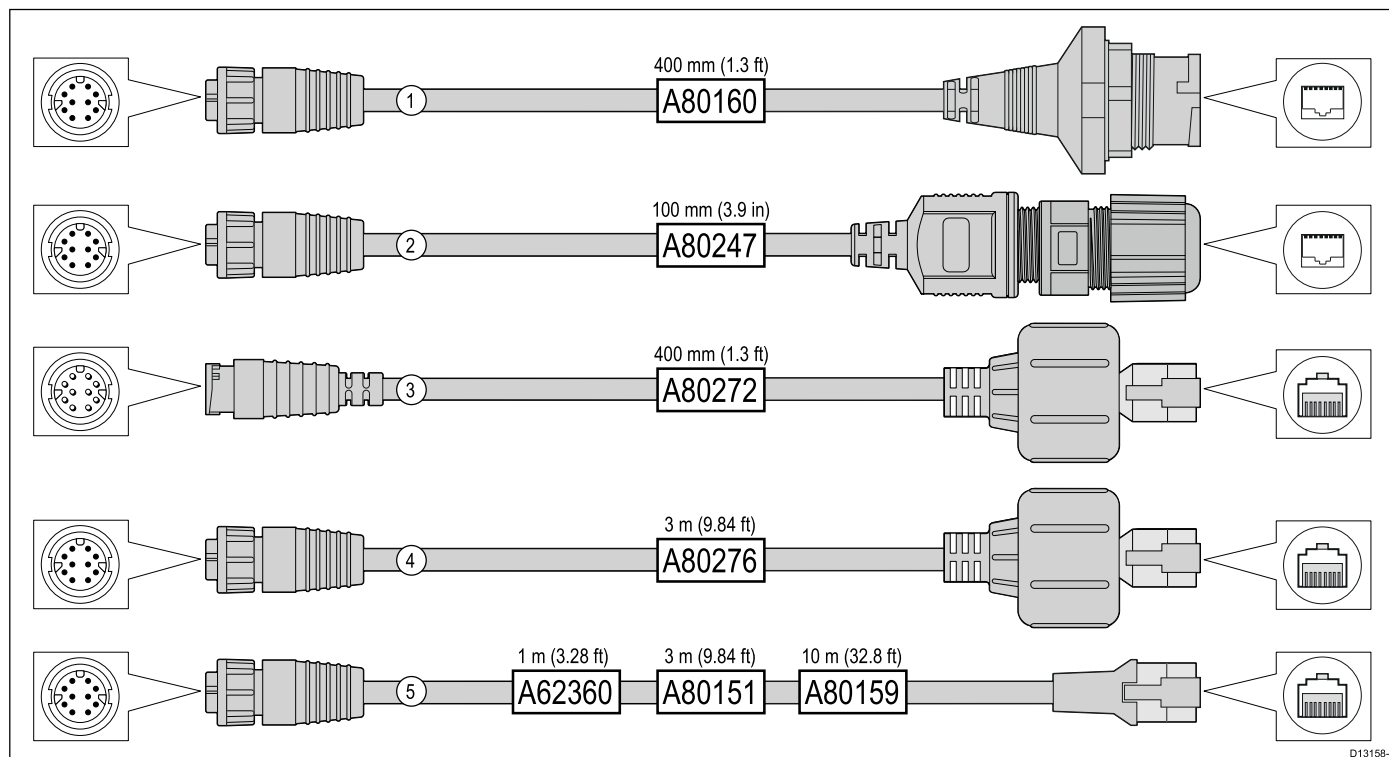

D13158-1

|   | Description                                                                                                                                                                                                                                                                                                                                 | Typical use                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Quantity |
|---|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| 1 | <p>Adapter cable with a <b>RayNet</b> (female) socket on one end, and a waterproof (female) socket on the other end accepting the following cables with an <b>RJ45 SeaTalk<sup>hs</sup></b> waterproof locking (male) plug:</p> <ul style="list-style-type: none"> <li>• <b>A62245</b> (1.5 m).</li> <li>• <b>A62246</b> (15 m).</li> </ul> | <p>A typical use for this adapter cable is to connect a <b>DSM300</b> sonar module to a <b>LightHouse</b> MFD, using all-waterproof cable connections. This adapter cable will also accept the following <b>RJ45 SeaTalk<sup>hs</sup></b> cables, although the <b>RJ45</b> plug that connects at the equipment end (e.g. <b>DSM300</b>) will NOT be waterproof:</p> <ul style="list-style-type: none"> <li>• <b>E55049</b> (1.5 m).</li> <li>• <b>E55050</b> (5 m).</li> <li>• <b>E55051</b> (10 m).</li> <li>• <b>A62135</b> (15 m).</li> <li>• <b>E55052</b> (20 m).</li> </ul> | 1        |
| 2 | <p>Adapter cable with a <b>RayNet</b> (female) socket on one end, and a waterproof (female) <b>RJ45</b> socket on the other end, along with a locking gland for a watertight fit.</p>                                                                                                                                                       | <p>Directly connect a Raymarine radar scanner with an <b>RJ45 SeaTalk<sup>hs</sup></b> (male) cable to a <b>RayNet</b> network switch (e.g. <b>HS5</b>) or <b>LightHouse</b> MFD.</p>                                                                                                                                                                                                                                                                                                                                                                                             | 1        |
| 3 | <p>Adapter cable with a <b>RayNet</b> (male) plug on one end, and an <b>RJ45 SeaTalk<sup>hs</sup></b> waterproof (male) plug on the other end.</p>                                                                                                                                                                                          | <p>Connect a legacy <b>G-Series GPM-400</b>, <b>C-Series</b> Widescreen or <b>E-Series</b> Widescreen MFD to a Raymarine radar scanner supplied with a <b>RayNet</b> power / data cable.</p>                                                                                                                                                                                                                                                                                                                                                                                      | 1        |
| 4 | <p>Adapter cable with a <b>RayNet</b> (female) socket on one end, and an <b>RJ45 SeaTalk<sup>hs</sup></b> waterproof (male) plug on the other end.</p>                                                                                                                                                                                      | <p>Connect a legacy <b>G-Series GPM-400</b>, <b>C-Series</b> Widescreen or <b>E-Series</b> Widescreen MFD to a <b>RayNet</b> network switch (e.g. the <b>HS5</b>).</p>                                                                                                                                                                                                                                                                                                                                                                                                            | 1        |
| 5 | <p>Adapter cable with a <b>RayNet</b> (female) socket on one end, and an <b>RJ45 SeaTalk<sup>hs</sup></b> (female) socket on the other end.</p>                                                                                                                                                                                             | <p>Connect a <b>LightHouse</b> MFD to a legacy <b>SR6</b> switch / weather receiver or a legacy 8-port <b>SeaTalk<sup>hs</sup></b> network switch. Another common use for the cable is in conjunction with a crossover coupler (<b>E55060</b> or <b>R32142</b>) to connect Raymarine products with an <b>RJ45</b> connection (e.g. radar scanner, thermal camera or <b>DSM300</b>) to a <b>LightHouse</b> MFD or <b>RayNet</b> network switch (e.g. the <b>HS5</b>).</p>                                                                                                          | 1        |

## 10.6 Network cable types

There are 2 types of **SeaTalk<sup>hs</sup>** network cable — “patch” and “network”.

- **Patch** — for connecting the following devices to a Raymarine network switch:
  - Thermal camera via PoE injector.
  - Additional Raymarine network switch.
  - PC or laptop using **Voyage Planner** software.
- **Network** — for connecting the following devices to a Raymarine network switch:
  - Sonar Module.
  - SR100 Sirius weather receiver.
  - Additional compatible Raymarine multifunction displays.

### SeaTalk<sup>hs</sup> network cables

| Cable                                              | Part number |
|----------------------------------------------------|-------------|
| 1.5 m (4.9 ft) SeaTalk <sup>hs</sup> network cable | E55049      |
| 5 m (16.4 ft) SeaTalk <sup>hs</sup> network cable  | E55050      |
| 10 m (32.8 ft) SeaTalk <sup>hs</sup> network cable | E55051      |
| 20 m (65.6 ft) SeaTalk <sup>hs</sup> network cable | E55052      |

### SeaTalk<sup>hs</sup> patch cables

| Cable                                            | Part number |
|--------------------------------------------------|-------------|
| 1.5 m (4.9 ft) SeaTalk <sup>hs</sup> patch cable | E06054      |
| 5 m (16.4 ft) SeaTalk <sup>hs</sup> patch cable  | E06055      |
| 10 m (32.8 ft) SeaTalk <sup>hs</sup> patch cable | E06056      |
| 15 m (49.2 ft) SeaTalk <sup>hs</sup> patch cable | A62136      |
| 20 m (65.6 ft) SeaTalk <sup>hs</sup> patch cable | E06057      |

## 10.7 SeaTalk<sup>ng</sup> cabling components

SeaTalk<sup>ng</sup> cabling components and their purposes.

| Connection / Cable                    | Notes                                                                                                        |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------|
| Backbone cable (various lengths)      | The main cable carrying data. Spurs from the backbone are used to connect SeaTalk <sup>ng</sup> devices.     |
| T-piece connector                     | Used to make junctions in the backbone to which devices can then be connected.                               |
| Terminator                            | Required at either end of the backbone.                                                                      |
| Inline terminator                     | Used to connect a spur cable directly to the end of a backbone; useful for longer cable runs.                |
| Spur cable                            | Used to connect devices to the backbone. Devices may be daisy chained or connected directly to the T-pieces. |
| SeaTalk <sup>ng</sup> 5-way connector | Used to branch, split, or make additional connections in SeaTalk or SeaTalk <sup>ng</sup> networks.          |
| Blanking plug                         | Inserted into unused spur connector positions in a 5-way connector or T-piece.                               |

## 10.8 SeaTalk<sup>ng</sup> cables and accessories

SeaTalk<sup>ng</sup> cables and accessories for use with compatible products.

| Description                                          | Part No | Notes                                                                                                                                                                                                                                                               |
|------------------------------------------------------|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SeaTalk <sup>ng</sup> starter kit                    | T70134  | Includes: <ul style="list-style-type: none"> <li>1 x 5 Way connector (A06064)</li> <li>2 x Backbone terminator (A06031)</li> <li>1 x 3 m (9.8 ft) spur cable (A06040)</li> <li>1 x Power cable (A06049)</li> </ul>                                                  |
| SeaTalk <sup>ng</sup> Backbone Kit                   | A25062  | Includes: <ul style="list-style-type: none"> <li>2 x 5 m (16.4 ft) Backbone cable (A06036)</li> <li>1 x 20 m (65.6 ft) Backbone cable (A06037)</li> <li>4 x T-piece (A06028)</li> <li>2 x Backbone terminator (A06031)</li> <li>1 x Power cable (A06049)</li> </ul> |
| SeaTalk <sup>ng</sup> 0.4 m (1.3 ft) spur            | A06038  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 1 m (3.3 ft) spur              | A06039  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 3 m (9.8 ft) spur              | A06040  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 5 m (16.4 ft) spur             | A06041  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 0.4 m (1.3 ft) elbow spur      | A06042  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 0.4 m (1.3 ft) backbone        | A06033  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 1 m (3.3 ft) backbone          | A06034  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 3 m (9.8 ft) backbone          | A06035  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 5 m (16.4 ft) backbone         | A06036  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 9 m (29.5 ft) backbone         | A06068  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> 20 m (65.6 ft) backbone        | A06037  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> to bare ends 1 m (3.3 ft) spur | A06043  |                                                                                                                                                                                                                                                                     |
| SeaTalk <sup>ng</sup> to bare ends 3 m (9.8 ft) spur | A06044  |                                                                                                                                                                                                                                                                     |

| Description                                                            | Part No | Notes                                                                                           |
|------------------------------------------------------------------------|---------|-------------------------------------------------------------------------------------------------|
| SeaTalk <sup>ng</sup> Power cable                                      | A06049  |                                                                                                 |
| SeaTalk <sup>ng</sup> Terminator                                       | A06031  |                                                                                                 |
| SeaTalk <sup>ng</sup> T-piece                                          | A06028  | Provides 1 x spur connection                                                                    |
| SeaTalk <sup>ng</sup> 5-way connector                                  | A06064  | Provides 3 x spur connections                                                                   |
| SeaTalk <sup>ng</sup> backbone extender                                | A06030  |                                                                                                 |
| SeaTalk to SeaTalk <sup>ng</sup> converter kit                         | E22158  | Allows the connection of SeaTalk devices to a SeaTalk <sup>ng</sup> system.                     |
| SeaTalk <sup>ng</sup> Inline terminator                                | A80001  | Provides direct connection of a spur cable to the end of a backbone cable. No T-piece required. |
| SeaTalk <sup>ng</sup> Blanking plug                                    | A06032  |                                                                                                 |
| ACU / SPX SeaTalk <sup>ng</sup> spur cable 0.3 m (1.0 ft)              | R12112  | Connects an SPX course computer or an ACU to a SeaTalk <sup>ng</sup> backbone.                  |
| SeaTalk (3 pin) to SeaTalk <sup>ng</sup> adaptor cable 0.4 m (1.3 ft)  | A06047  |                                                                                                 |
| SeaTalk to SeaTalk <sup>ng</sup> spur 1 m (3.3 ft) spur                | A22164  |                                                                                                 |
| SeaTalk2 (5 pin) to SeaTalk <sup>ng</sup> adaptor cable 0.4 m (1.3 ft) | A06048  |                                                                                                 |
| DeviceNet adaptor cable (Female)                                       | A06045  | Allows the connection of NMEA 2000 devices to a SeaTalk <sup>ng</sup> system.                   |
| DeviceNet adaptor cable (Male)                                         | A06046  | Allows the connection of NMEA 2000 devices to a SeaTalk <sup>ng</sup> system.                   |
| DeviceNet adaptor cable (Female) to bare ends.                         | E05026  | Allows the connection of NMEA 2000 devices to a SeaTalk <sup>ng</sup> system.                   |
| DeviceNet adaptor cable (Male) to bare ends.                           | E05027  | Allows the connection of NMEA 2000 devices to a SeaTalk <sup>ng</sup> system.                   |

# 10.9 SeaTalk accessories

SeaTalk cables and accessories for use with compatible products.

| Description                            | Part No | Notes |
|----------------------------------------|---------|-------|
| 3-way SeaTalk junction box             | D244    |       |
| 1 m (3.28 ft) SeaTalk extension cable  | D284    |       |
| 3 m (9.8 ft) SeaTalk extension cable   | D285    |       |
| 5 m (16.4 ft) SeaTalk extension cable  | D286    |       |
| 9 m (29.5 ft) SeaTalk extension cable  | D287    |       |
| 12 m (39.4 ft) SeaTalk extension cable | E25051  |       |
| 20 m (65.6 ft) SeaTalk extension cable | D288    |       |





[www.raymarine.com](http://www.raymarine.com)

**CE 0168** 